

Fiteye FIT-32 Mobile Screen



# Fiteye FIT-32 Mobile Screen Instructions

[Home](#) » [Fiteye](#) » Fiteye FIT-32 Mobile Screen Instructions 

## Contents

- [1 Fiteye FIT-32 Mobile Screen](#)
- [2 Product Usage Instructions](#)
- [3 Packing List](#)
- [4 Installation Instructions for Fiteye Mobile Smart Screen](#)
- [5 Using Remote Control](#)
- [6 Product icon](#)
- [7 How to Use](#)
- [8 Product specifications](#)
- [9 Internal Battery](#)
- [10 Description of Interfaces and Buttons](#)
- [11 Product Specification](#)
- [12 Regulatory FCC NOTICE \(For USA\)](#)
- [13 Warning! Safety Instructions](#)
- [14 FCC STATEMENT](#)
- [15 Documents / Resources](#)
  - [15.1 References](#)
- [16 Related Posts](#)

*Fiteye*

**Fiteye FIT-32 Mobile Screen**



### Product Specifications:

- **Compliance:** Part 15 of FCC Rules
- **Antenna:** Receiving antenna
- **Radiation Exposure:** FCC limits for uncontrolled environment
- **Minimum Distance:** 20cm between radiator and body

### Product Usage Instructions

#### FCC Statement:

This device complies with Part 15 of the FCC Rules. To ensure proper operation, please adhere to the following:

1. Avoid causing harmful interference.
2. Accept any interference received, even if it causes undesired operation.
3. Do not make changes or modifications not approved by the responsible party to maintain operational authority.

#### To optimize performance:

- Reorient or relocate the receiving antenna if needed.
- Increase separation between the equipment and receiver for better reception.
- Connect the device to a power outlet on a different circuit from the receiver.
- If assistance is required, consult the dealer or a qualified radio/TV technician.

#### FCC Radiation Exposure Statement:

To comply with FCC radiation exposure limits and ensure safety:

- Install and operate the equipment with a minimum distance of 20cm between the radiator and your body.

## Frequently Asked Questions (FAQ):

- **Q: What should I do if I encounter interference while using the device?**

A: If interference occurs, try reorienting the receiving antenna or increasing the separation between devices. If issues persist, consult a professional for further assistance.

- **Q: How can I ensure compliance with FCC radiation exposure limits?**

A: Maintain a minimum distance of 20cm between the radiator of the device and your body during installation and operation to meet FCC requirements.

## Customer Service

[service@fiteye.net](mailto:service@fiteye.net)

## Customer Service

Dear customer, If you have any issues while using the product, please feel free to contact us before you return the product to us, we will serve you until you are satisfied.

- Defective or damaged item?
- Inaccurate description?
- Missing parts or accessories?
- Performance or quality not adequate?
- Wrong item was sent?
- **CONTACT US HERE OUR EMAIL ADDRESS:** [service@fiteye.net](mailto:service@fiteye.net) You can email us directly. Typically we will reply to you in 24 hours on business days!

## Warning Preface

 
Thanks for using the Fiteye smart screen. Before starting the device, Please read the product features and notes in the user manual carefully.

- You can't use other power adapter to power this device
- Do not block or cover the ventilation hole at the back of the device.
- Do not use or store this machine in dusty, humid and high temperature environment
- When the machine breaks down, please do not disassemble and repair it by yourself. Please contact the original factory or dealer to solve the problem.
- To prevent electric shock, do not step on the power cord or power adapter, do not continue to use damaged power cord.
- During thunderstorms or this machine is not in use for a long time, please unplug the power cord.
- Try not to touch the display screen during transportation or use, do not squeeze the display screen hard, and do not damage the display screen with sharp weapons or hard objects, so as to avoid damage to the display screen.
- To avoid damage to the display screen, do not use sharp objects or hard objects to hit the display screen.
- Please clean the machine with a dry soft cloth or a soft cloth slightly dipped in a flexible cleaner. Do not use any kind of solvent, such as alcohol or gasoline, or it may damage the surface treatment layer.
- Children must be made aware of the dangers of climbing this product which can cause serious life injury if it is dropped or dumped.
- Do not place the product in an unstable or inclined position


- To avoid tripping, be sure to arrange the cables connected 1 this equipment in time.

## Packing List


After opening the package, please confirm the contents of the package below.

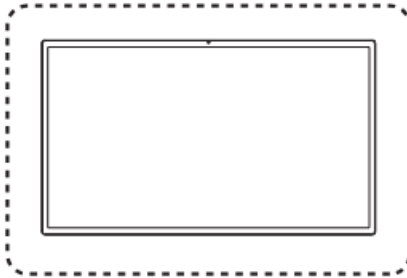


**Monitor x1**  
Camera x1(built-in)

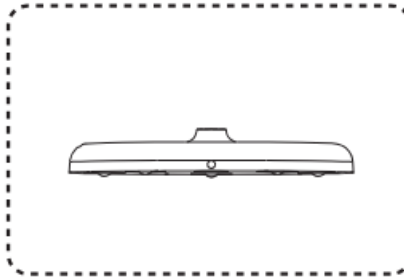 


**Circular base x1**

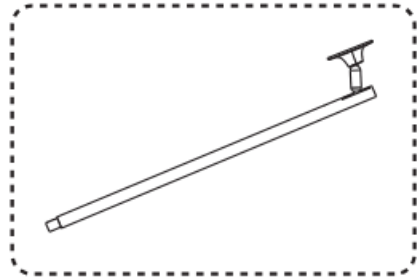 


**Stand pole x1**

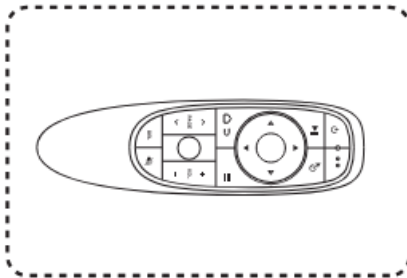 


**2.4G Remote control x1**

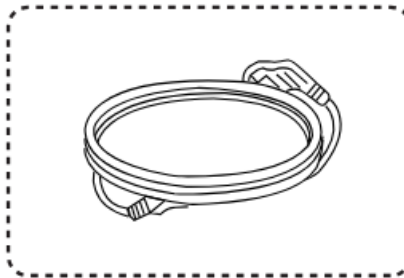 


**Power cord x1**

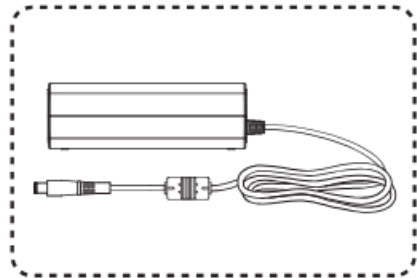 

**Adapter x1**

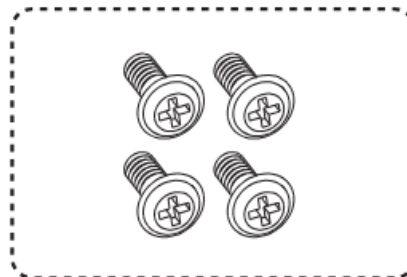 


**Four corner screws x4**  
(short\*4)

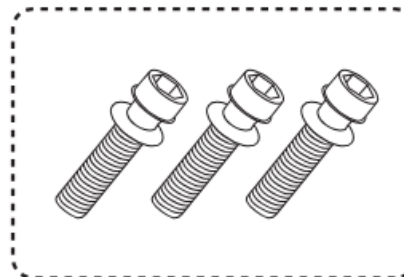 


**Hexagonal screws x3**  
(long\*3)




**Stand pole x1**

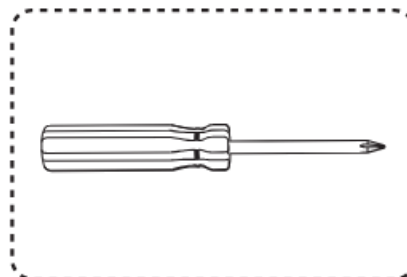 

**Screwdriver x1**

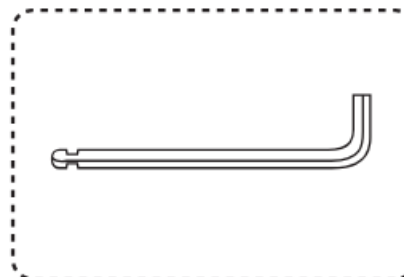 

**Allen wrench x1**


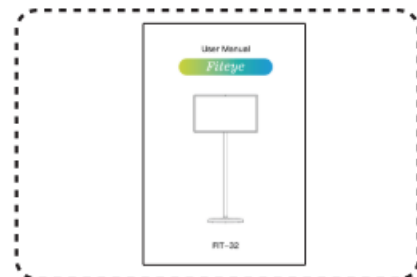 


**User Manual x1**



## Installation Instructions for Fiteye Mobile Smart Screen

Please keep the package 1-2 weeks in case of return or exchange

 
 
1. Please check the appearance of the product, whether there are scratches, cracks, and whether the accessories are complete when unpacking. If there are any such problems, please return the product.
2. If you need to return or exchange the product, please make sure that the product is intact, the packaging is complete inside and outside, and the product and accessories are not damaged.

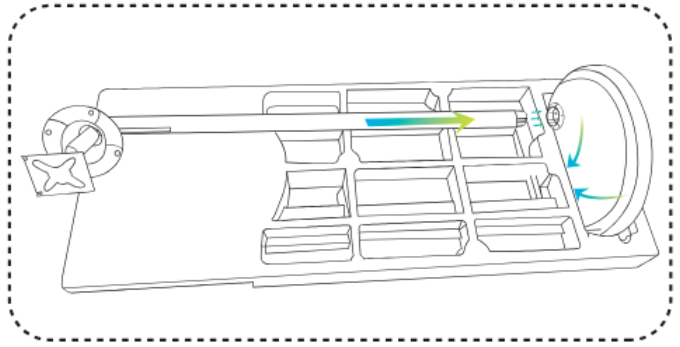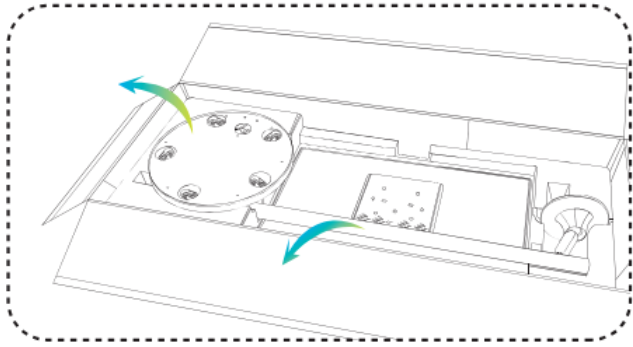

 
 
1. Take out the bracket and the circular base.
2. Thread the bracket power cord through the base and install the bracket on the base by aligning it with the slot position. (The screws have been pre-installed in the correct holes and need to be removed first.)

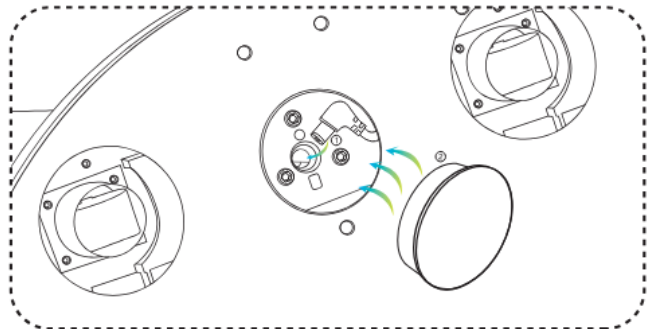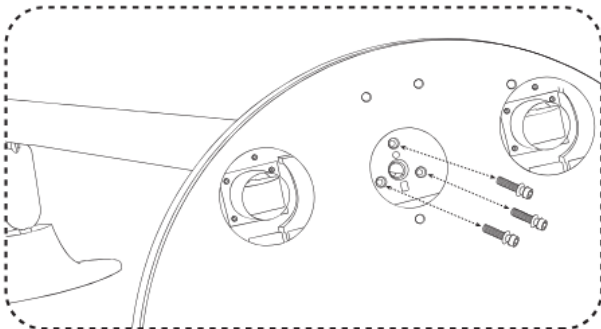

  3. Check if the positioning column is correctly inserted. Lock the three Hexagonal screws (long\*3) on the base.
4. Insert the bracket power cord into the charging board base, then cover it with the cover plate.

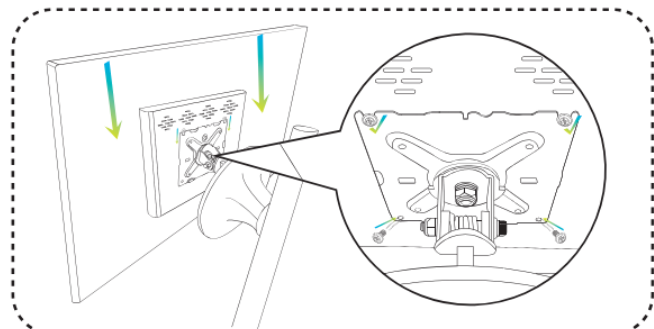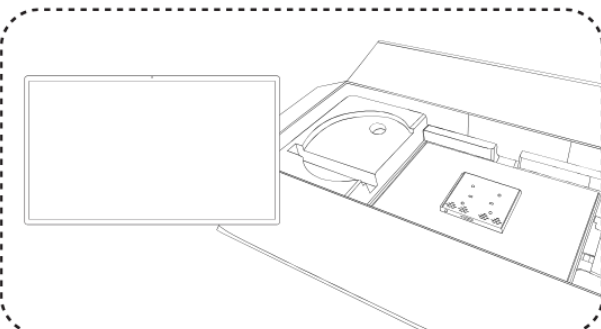

  5. After the stand is installed, take it out and stand it upright on the ground. Take the display out of the box.
6. Align the two four corner screws (short\*2) on the display back with the U-shaped hole on the bracket, slide them in to fix them, lock the remaining two four corner screws (short\*2), and finally tighten the two pre-installed screws. (The screws have been pre-installed in the correct holes and need to be removed first.)

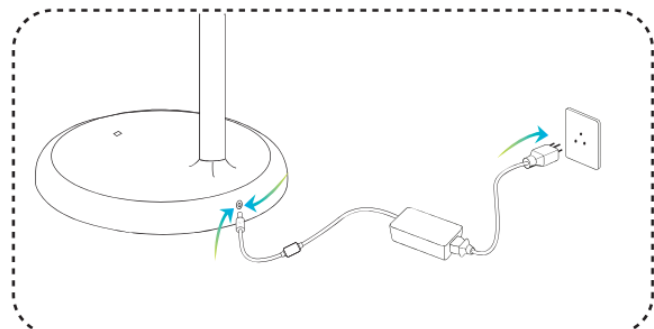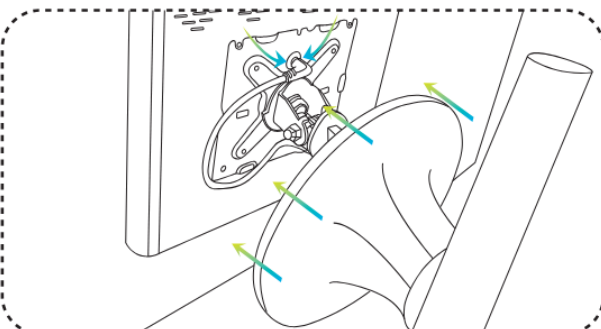

7. Check whether all four screws are locked in place and then connect the power cord for your monitor to the power port on the back of the monitor. Align the round cover with the display back cover and place it on so that it fits snugly with the display back magnet.

8. Please plug the power adapter into the base, the base light will turn on, indicating that the power is working properly.


#### Notice:

 - If you do not use this product for a long time, please remove the power cord on the back of the display.
- If the product crashes, unplug the power cord on the back of the monitor and plug it back in.

#### Using Remote Control

- The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the display correctly. This remote uses infrared light. When in use, it should be pointed in the direction of the display's remote sensor.
- To install batteries, open the battery cover, replace batteries (1.5V AAA) matching positive and negative electrodes inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.



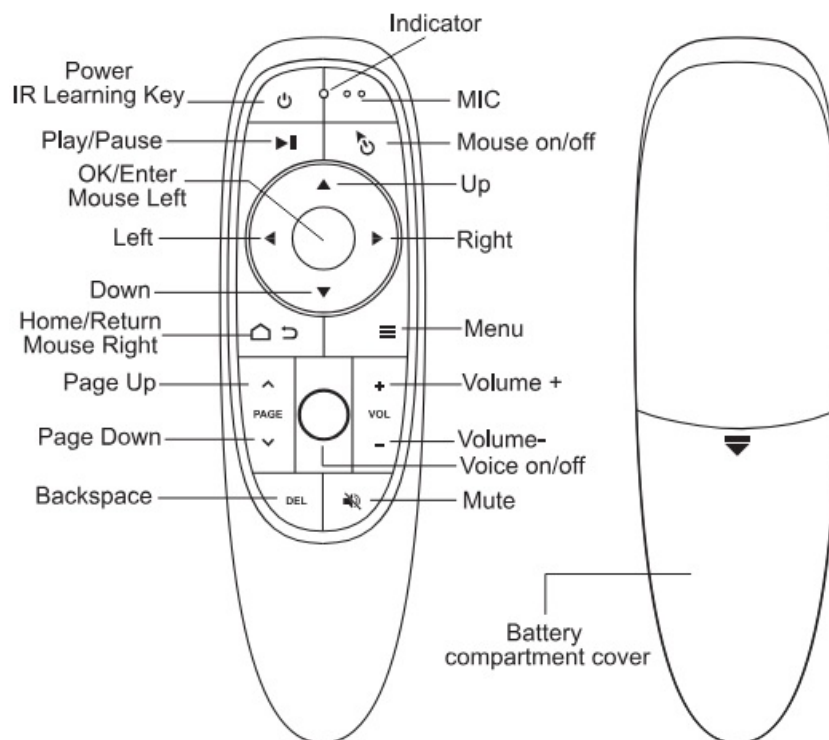


#### Product icon



Air Mouse has 3 levels of cursor speed.

- **From slow to fast:** Press and hold “OK” and ” Volume+” buttons.
- The speed adjusts one level when LED light on.
- **From fast to slow:** Press and hold “OK” and “Volume-” buttons.
- The speed adjusts one level when LED light on.

#### Function Keys :

-  **Home:** Press and hold 3 seconds Go back to the home;
-  **Return:** Go back to previous screen;
-  **OK:** Confirm action or insert cursor;
-  **Cursor Locking:** Press to lock the air mouse, press again to unlock;
-  **Play / Pause:** Multimedia play/pause.

#### **Voice switch:**

Press and hold “voice Switch” to turn on voice channel. Release the key to turn off voice channel.

#### **Low battery reminder:**

The red light flashes slowly when the AAA battery power of the product is lower than 2V. It means that the battery needs to be replaced at this time.

### **Sensor Calibration**

#### **Automatic calibration:**

- The changes of voltage and temperature may make the cursor drifts. In this case, put the mouse flat on the desk and remain still.
- You can complete calibration by pressing any key to wake it up when it is in hibernation mode

### **How to Use**

For initial use, plug a USB receiver into the USB port of device and wait for 20-60 seconds to install driver of USB receiver. Move the mouse, the mouse cursor can move on the screen means that pairing is successful. If it is unsuccessful, press and hold “OK” and “Home” buttons, LED light begins to flash. Pairing is successful when LED light stops flashing.

### **Product specifications**

- Transmission method: 2.4GRF
- wireless Sensors: 6 axis
- Gyroscope Number of keys: 17
- Range: >10m Battery Type: AAA\*2
- Material: ABS
- Plastic and silicone Size: 143\*45\*29MM
- Weight: 50g

 
(Some buttons and services may not be provided depending upon models or regions.)

#### **Notice:**

- To use the button, press and hold for more than 1 second.
- The screen can be used without the remote control by touching the screen.

## Internal Battery


This circular base contains a built-in rechargeable battery, which can be used for a period of time without connecting other power sources. When the battery is exhausted, the charger can connect to charge the battery. It will display 100% when fully charged, and the number will change as you use it. When using 3%, the "3%" on the display will keep flashing.

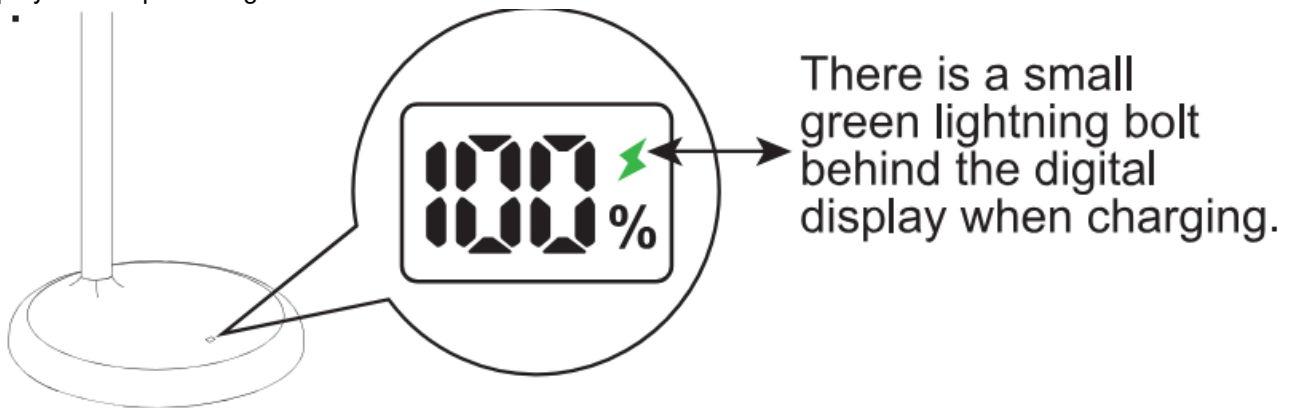

### Note:

- The battery recharge from 0% to 100% for about 8 hours when using, about 6 hours when shutdown.
- The battery life of the equipment is about 7-8 hours after being fully charged.
- The using time of the product increases, and the battery life and battery life decrease proportionally.
- In order to prolong the life of the battery, it is recommended to charge the battery after using it for a period of time.
- After the battery is full, unplug the charger. Do not keep the battery fully charged all the time, and the battery cannot be charged in the extreme environment.
- The standard service time in the manual is based on the laboratory test data of our company, and the actual time will vary according to the different conditions of use.
- **Note:** Users are strictly prohibited from replacing or disassembling the battery pack to avoid the risk of explosion of the whole machine due to improper installation or the use of the wrong type of battery. If necessary, please contact the official customer service to deal with the relevant problems.
 
## Description of Interfaces and Buttons

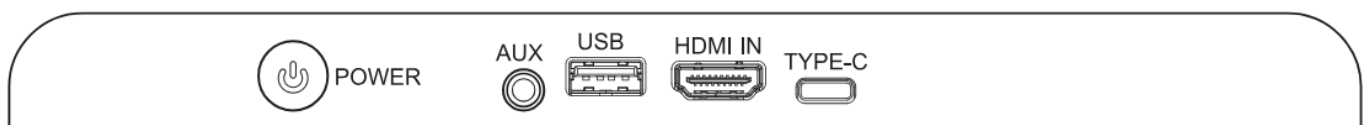

- **HDMI IN:** Used to connect external HD video input.
- **TYPE-C:** multi-functional interface. Can connect U disk, mouse, etc., can connect computer upgrade, read the contents of the machine.
- **USB:** Can use USB storage device, or for mouse and keyboard receiver.
- **Headphone** jack: 3.5mm headphone output stereo sound for connecting external power amplifier devices or headphones.
- **POWER:** Press once the power button for standby, and hold down 2s to shut down or restart the machine.




## Product Specification

 System	RAM	6GB
	Internal memory	128GB
	Operation system	Android 12OS
You can	Panel Size	32"LCD
	Resolution	1920x1080
	Model Type	In cell touch
	Number of points	10-Point
	Aspect Ratio	16:9
	Wi-Fi	Support
You can	Earphone Output	3.5mm earphone output
	RJ45	Ethernet interface
	MIC-IN	External microphone input
	Type-c	Full Function(Except for charging function)
	HDMI IN	1920*1080@60HZ
You can	Button	Power
	G-sensor	Support 90 degrees
	Speaker	8Ω 5W*2
	Input Voltage	12V/8A
	Built-in battery capacity	14.4V/15000mAh
	Storage Temperature	0℃---50℃
	Working Temperature	0℃---40℃

<b>Cannot control the product with the remote control.</b>	<ul style="list-style-type: none"> <li>• Check if anything such as tape has been placed over the receiver.</li> <li>• Check if there is any obstacle between the product and the remote control.</li> <li>• Replace the batteries with new fresh ones.</li> </ul>
<b>No image display and no sound is produced.</b>	<ul style="list-style-type: none"> <li>• Check if the product is turned on.</li> <li>• Check if the power cord is connected to a wall outlet.</li> <li>• Check if there is a problem in the wall outlet by connecting other products.</li> </ul>
<b>The product turns off suddenly.</b>	<ul style="list-style-type: none"> <li>• Check the power control settings. The power supply maybe interrupted.</li> <li>• Check if the auto-off function is activated in the settings menu.</li> <li>• If there is no signal while the product is on, the product will turnoff automatically after 15 minutes of inactivity.</li> <li>• If the battery overheats, the product automatically turns off to protect itself.</li> </ul>
<b>Abnormal Display</b>	<ul style="list-style-type: none"> <li>• If the product feels cold to the touch, there maybe a small flicker when it is turned on. This is normal; there is nothing wrong with product. Some minute dot defects maybe visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the product is performance. Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.</li> <li>• This panel is an advanced product that contains millions of pixels. In a very few cases, you could see fine dots on the screen while you are reviewing the product. Those dots are deactivated pixels and do not affect the performance and reliability of the product.</li> <li>• Displaying a still image for a prolonged period of time may cause an image sticking. Avoid displaying a fixed image on the product screen for a extended length of time.</li> </ul>
<b>Generated Sound</b>	<p><b>Cracking noise</b></p> <ul style="list-style-type: none"> <li>• A cracking noise that occurs when watching or turning off the product is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required.</li> </ul> <p><b>Electrical circuit humming/panel buzzing</b></p> <ul style="list-style-type: none"> <li>• A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending upon the product. This generated sound does not affect the performance and reliability of the product.</li> </ul>

- When cleaning the product, be careful not to allow any liquid or foreign objects to enter the gap between the upper, left or right side of the panel and the guide panel, (Depending upon model).

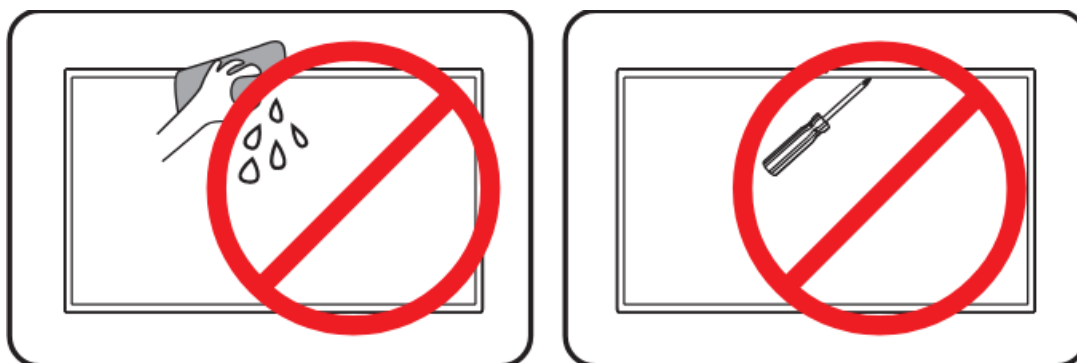

- Make sure to wring any excess water or cleaner from the cloth.
- Do not spray water or cleaner directly onto the product screen.
- Make sure to spray just enough of water or cleaner onto a dry cloth to wipe the screen.

## Regulatory FCC NOTICE (For USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and the receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radio Frequency Interference Requirements for UNII devices (For USA)

High power radars are allocated as primary users of the 5.25 to 5.35 GHz n and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device. This device cannot be co-located with any other transmitter.

### FCC RF Radiation Exposure Statement

(For USA) (For having wireless function (WLAN,Bluetooth,...) This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or trans miter. This equipment should be installed and operated with minimum distance 20 cm (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

## Warning! Safety Instructions



- **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.
- The symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the

literature accompanying the device.

- **WARNING:** TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

**Do not place the product and/or remote control in the following environments:**

- Keep the product away from direct sunlight. – An area with high humidity such as a bathroom.
- Near any heat source such as stoves and other devices that produce heat.
- Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
- An area exposed to rain or wind.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Near flammable objects such as gasoline or candles, or expose the product to direct air conditioning.
- Do not install in excessively dusty places.
- On unsecured or high furniture, such as shelves or bookshelves. Otherwise, this may result in fire, electric shock, combustion/ explosion, malfunction or product deformation.

**Ventilation**

- Install your product where there is proper ventilation. Do not install in a confined space such as a bookcase.
- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the product for a long period, the ventilation openings may become hot.
- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.
- Do not move the product whilst the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the product.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.

**Safety Note:**

1. Please read all instructions carefully before using this product.
2. When cleaning the mobile screen, please unplug the power cord, turn off the power switch, do not use liquid cleaning solution or spray cleaner, wipe the screen with a soft damp cloth, if it is still not clean, please use LCD screen cleaner.
3. Do not use accessories not recommended by the manufacturer, otherwise it may cause danger.
4. when unplugging the power cable of the basic power interface or power adapter, press and hold the power plug. Do not pull the power cable directly and remove the power cable.
5. This mobile display can only be operated with the type of power supply described on its nameplate. If you have

questions about the type of power supply you are using, consult your mobile display distributor or your local power supply office.

6. Due to high pressure or other dangers when opening or moving the chassis, do not repair it by yourself, please contact qualified maintenance personnel for comprehensive repair.
7. When the following situations occur, first unplug the power plug or power plug of the bottom battery assembly from the socket, and contact qualified maintenance personnel for repair:
  - The power cable or power plug is damaged or worn
  - The monitor has fallen off or the housing is damaged.
  - If an obvious exception is displayed, the fault needs to be rectified.
8. Please place the monitor in a well-ventilated environment, away from strong light, high temperature or high humidity.
9. Store the display at a temperature ranging from 0°C to 40°C. Otherwise, normal use may be affected.

### **Disconnecting the Device from the Main Power**

- The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the product. Otherwise, the product may fall over, which may cause serious injury.

### **Grounding**

- (Except for devices which are not grounded.)
- The product with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet.
- Ensure that you connect the earth ground wire to prevent possible electric shock.
- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the product and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

### **Safety tips! (Stability hazard)**

The monitor could fall, causing serious injury.

### **Many injuries, especially among children, can be avoided by taking simple precautions, such as:**

- Use the cabinet, frame, or mounting method recommended by the monitor manufacturer.
- Please use furniture that can safely support the monitor.
- Please educate children about the dangers of climbing on furniture to access the display or its controls.
- Be sure to organize the wires and cables connected to the display so that they cannot be tripped, pulled or grabbed.
- Never place the monitor in an unstable or tilted position.
- If you want to put the monitor on higher furniture (such as cabinets or bookshelves), you must repair the furniture and monitor on a suitable support point.

- Do not place the monitor on cloth or other items between the monitor and supporting furniture.
- Do not place toys, remote controls, and other items that may induce children to climb on the monitor or the frame on which it is placed.
- The same precautions as above should be taken in order to retain and relocate existing monitors.

If any of the following occur, unplug the product immediately and contact your customer service.

- The product has been damaged.
- If water or another substance enters the product (like an AC adapter, power cord, or product).
- If you smell smoke or other odors coming from the product.
- When lightning storms or when unused for long periods of time.
- Even the product is turned off by remote control or button, AC power source is connected to the unit if not unplugged in.
- Do not use high voltage electrical equipment near the product (e.g., a bug zapper). This may result in product malfunction.
- Do not attempt to modify this product in any way without written authorization from Fiteye Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modification could void the user's authority to operate this product.
- Use only an authorized attachments/accessories approved by Fiteye. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter or power cord. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.
- To reduce the risk of fire or electrical shock, do not touch the product with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.
- Please make sure the device is installed near the wall outlet to which it is connected and that the outlet is easily accessible.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

---

## Documents / Resources

	<p><a href="#">Fiteye FIT-32 Mobile Screen</a> [pdf] Instructions FIT-32 Mobile Screen, FIT-32, Mobile Screen, Screen</p>
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.