



FIXED 25W Mini Mains Charger with USB-C Output and PD Support Instruction Manual

[Home](#) » [FIXED](#) » FIXED 25W Mini Mains Charger with USB-C Output and PD Support Instruction Manual 

FIXED

25W Mini Mains Charger with USB-C Output and PD Support
Instruction Manual

Contents

- [1 Instruction manual for FIXED chargers](#)
- [2 SAFETY WARNINGS – CHARGER](#)
- [3 USAGE – CHARGER](#)
- [4 CLEANING – CHARGER](#)
- [5 STORAGE](#)
- [6 DISPOSAL](#)
- [7 TECHNICAL SPECIFICATIONS – CHARGER](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Instruction manual for FIXED chargers

Please read this manual and, particularly, the safety precautions prior to first use of the product.
Store this manual in a safe place for future reference and include it when you are going to hand the product over to a third party.
FIXED.zone a.s. is not responsible for any injury or damage to health or property resulting from improper use of the product.

SAFETY WARNINGS – CHARGER

The product must be connected to the mains indoors only and to properly installed 100-240 V AC sockets. Only plug the cord of the product into easily accessible sockets, from which you can quickly disconnect the product if a

problem occurs. Do not use the product if it is damaged. Never touch the product with wet or damp hands. Do not use the product in a humid room or in the rain. Never place any metal objects such as keys or paper clips into the product openings. To avoid malfunctions or damage to the product, do not let the product drop, do not squeeze the product, do not cut the product surface nor put too much pressure on it. Protect the product from excess humidity, water and other liquids. If the product comes into contact with water, excess humidity or other liquids, do not use it otherwise there is a risk of electric shock. Do not expose the product to heat sources, direct sunlight, do not place it on heaters, stoves or other heat sources such as a dashboard in a car in the summer. Do not use the product unattended. The surface of the product may get hot during operation. Do not cover the product with any objects during operation. Do not use the product immediately when it is moved from a cold area to a hot area. Water condensation can occur and may damage the product. Wait till the product reaches room temperature. It may take several hours. Operating temperature: 0 – 40 °C. Do not attempt to modify, repair or disassemble the product in any way. If the product is damaged, do not use it. Never use aggressive detergents, alcohol or other chemical cleaning solutions, as they may damage the surface or functionality of the product. Disconnect all attached cables before cleaning. Do not immerse the product in water or other liquid. There are no user-serviceable parts inside the product. Never disassemble the product. Keep the product out of the reach of children. Never allow children or people with disabilities to use electrical appliances without supervision. Make sure the children do not play with the plastic wrapper. They can swallow small parts and suffocate.

USAGE – CHARGER

1. Before charging your device, make sure that the technical specifications of the device (voltage, current) are compatible with the characteristics of the charger.
2. Connect the USB cable to your device.
3. Connect the USB cable of your device to the charger's USB port.
4. Plug the charger into a socket (100–240 V AC). Your device will start charging.
5. After use, disconnect the charger from the socket and the USB cable from your device.

CLEANING – CHARGER

Unplug all cables prior to cleaning. / If necessary, clean the charger with a damp cloth and allow it to dry completely before use. / Use a clean brush with soft, long bristles if you attempt to remove dust on the connectors. / Do not use any solvents, corrosive or gaseous detergents. / Ensure that no water or other liquids have got inside the device.

STORAGE

Keep the product in a clean, dry environment. Do not leave it in direct sunlight.

DISPOSAL



(Applicable in countries with separate collection systems for recyclable materials). Old products must not be disposed of together with household waste! If the product will no longer work, dispose of it in accordance with applicable regulations of your country. This ensures that old products are recycled in a professional manner and also eliminates negative environmental consequences. For this reason, the electrical device is marked with the symbol shown here.

TECHNICAL SPECIFICATIONS – CHARGER

Input:
100-240 V AC

Operating temperature:
0-40 °C



This product is CE marked in accordance with EMC Directive EMC 2014/30/EU, LVD 2014/35/EU and RoHS 2011/65/EU. FIXED.zone a.s. hereby declares that this product is in compliance with essential requirements and other relevant provisions of EMC Directives EMC 2014/30/EU, LVD 2014/35/EU and RoHS 2011/65/EU.

FIXED

FIXED.zone a.s. Kubatova 6, České Budějovice, 37004, CZECH REPUBLIC
Made in China

Documents / Resources

	FIXED 25W Mini Mains Charger with USB-C Output and PD Support [pdf] Instruction Manual 25W Mini Mains Charger with USB-C Output and PD Support, 25W Mini Mains Charger, Mini Mains Charger, Mains Charger, 25W Charger, USB-C Output and PD Support, Charger
---	--