



Fixed Zen 10 Powerbank User Manual

[Home](#) » [FIXED](#) » Fixed Zen 10 Powerbank User Manual

Contents [[hide](#)]

- [1 Fixed Zen 10 Powerbank](#)
- [2 Instructions for use](#)
- [3 PRODUCT SPECIFICATIONS](#)
- [4 PACKAGE CONTENTS](#)
- [5 PRODUCT CARE AND MAINTENANCE](#)
- [6 SAFETY PRECAUTIONS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




Fixed Zen 10 Powerbank



Thank you for purchasing the FIXED Zen 10 power bank.
READ THIS MANUAL BEFORE USE.

Instructions for use

1. To check the charge status, press the button on the side of the power bank.
The LCD display will light up and display the power bank charge status presented as a value from 0–100 %.
2. When discharged, you can use the USB-A to USB-C cable, which is included in the package, to charge it by plugging it into your mains charger. The power bank itself charges with a power of up to 18 W. Both USB-C connector and microUSB on the side of the power bank can be used for charging.
3. You can use the USB-A to USB-C cable to charge your device. For 20W PD charging, use your USB-C to USB-C cable and plug it into the power bank's USB-C port.
4. The charging then starts immediately.
5. When charging via USB-A and USB-C ports simultaneously: the fast charging decreases to the 5V output voltage. To restore the PD fast charging function, disconnect the device at USB-A and wait 15 seconds for the PD fast charging output to restart.

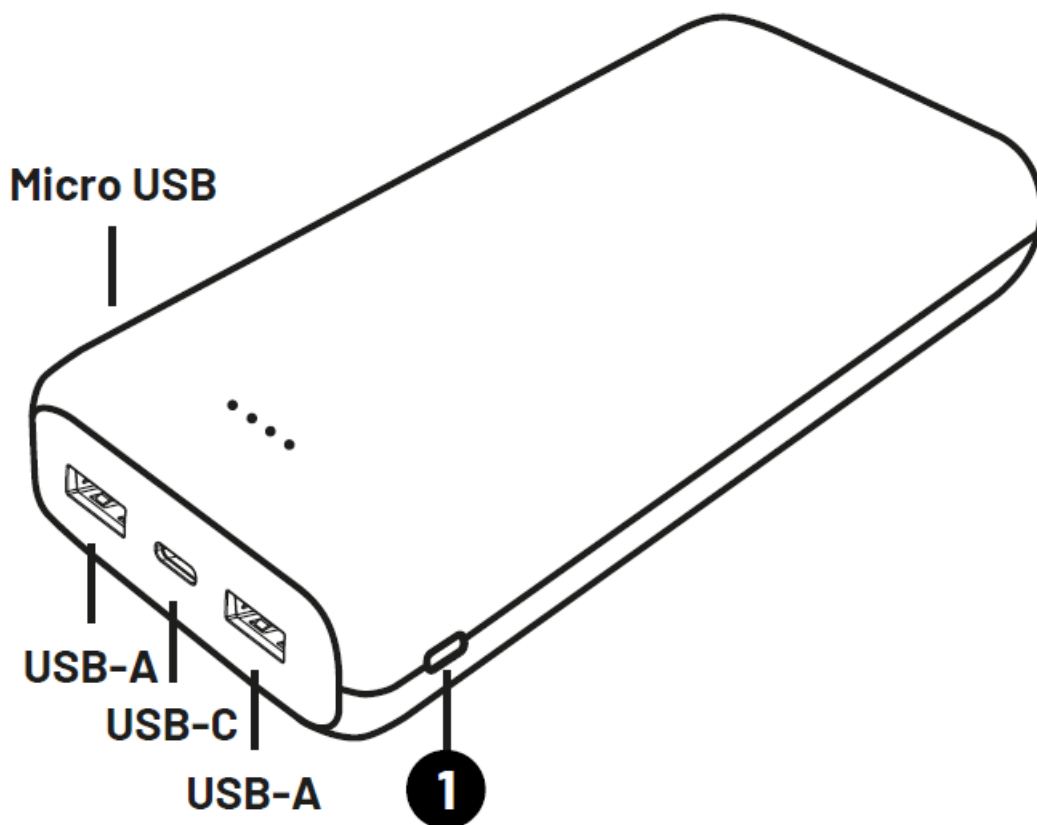

LCD DISPLAY INDICATION

- The power bank charge status is indicated in %.
- Fast charging of your device is indicated by the GREEN symbol.
- When the power bank itself is charging, a single digit will start flashing on the battery display and the value on the display will also increase synchronously as the power bank battery power increases.

Charge status	Value on the LCD display	Value on the LCD display
80% ~ 100%	80	100
60% ~ 80%	60	80
40% ~ 60%	40	60
10% ~ 40%	10	40
1% ~ 10%	01	10

PRODUCT SPECIFICATIONS

Capacity: 10,000 mAh

Battery type: Li-Pol

USB-C input/microUSB: DC 5V/3A, 9V/2A, 12V/1.5A

USB-C output: DC 5V/3A, 9V/2A, 12V/1.66A (max. PD 20W)

USB-A output: DC 4.5V/5A, 5V/4.5A, 5V/3A, 9V/2A, 12V/1.5A

Absolute output (2x USB-A and 1x USB-C): 22.5 W

Dimensions: 142.3 x 67.6 x 15.5 mm
Weight: 216.8 g

PACKAGE CONTENTS

- 1x FIXED ZEN 10 power bank
- 1x USB-A to USB-C charging cable
- 1x User manual

NOTES The product is under warranty in accordance with the regulations in force in the countries where it is sold. In case of service problems, contact the dealer from which you purchased the product. FIXED assumes no liability for damage caused by improper use of the product.

PRODUCT CARE AND MAINTENANCE

If you do not use the device for longer period of time, it is necessary to charge the battery every two or three months to prevent reduction in device power. Use fine fabric to clean the body of the power bank.

SAFETY PRECAUTIONS

Do not expose the device to rain or snow or immerse it in water. Do not leave the power bank on sun in car. Do not expose the device to direct sunlight or leave it near heat sources. Do not use the power bank if it has been subjected to a strong impact, if it has fallen, or if it has been damaged in any way. Do not disassemble the device, there is a risk of electric shock and/or burns. Do not modify the power cable. Keep the power bank out of reach of children.

Unauthorized opening or modification of product parts will void the warranty.

PROBLEM SOLVING

In case of problems with the product, you can contact our support at www.fixed.zone/podpora



This product is CE marked in accordance with EMC directive 2014/35/EU and RoHS 2011/65/EU. FIXED.zone a.s. declares that this product is in compliance with essential requirements and other relevant provisions of EMC directives 2014/35/EU and 2011/65/EU.

FIXED.zone a.s.
Kubatova 6
České Budějovice 37004
Czech Republic

Documents / Resources



[FIXED Fixed Zen 10 Powerbank](#) [pdf] User Manual
Fixed Zen 10 Powerbank, Fixed Zen 10, Powerbank