




## FIXS-PIN-BK Fixed Pin Active Stylus User Manual

[Home](#) » [FIXED](#) » [FIXS-PIN-BK Fixed Pin Active Stylus User Manual](#) 

### Active stylus **FIXED PIN**

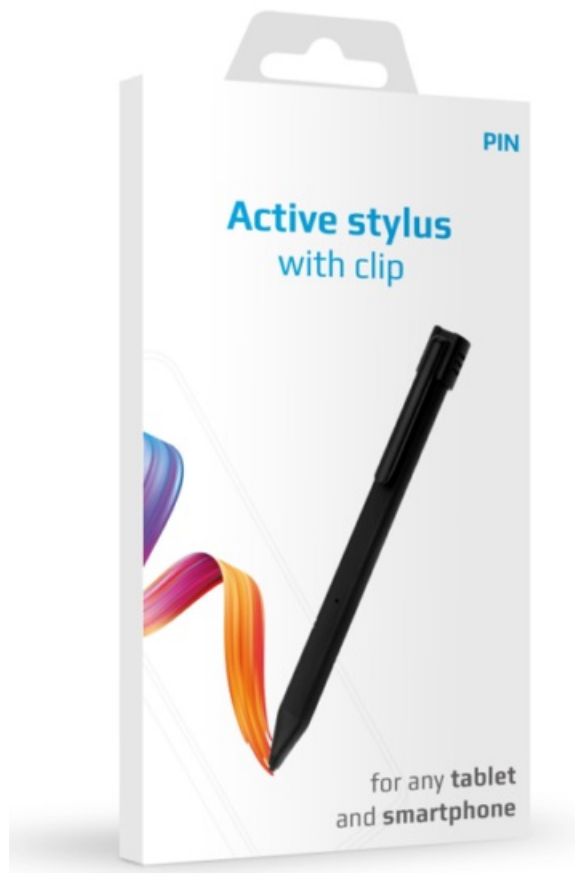

**User manual**

## Contents

### [1 PACKAGE CONTENT](#)

### [2 CHARGING THE BATTERY](#)

### [3 CERTIFICATION AND SAFETY INFORMATION](#)

### [4 Documents / Resources](#)

### [5 Related Posts](#)

## PACKAGE CONTENT

- FIXED Pin active stylus
- USB charging cable with microUSB connector
- User manual

Thank you for purchasing FIXED Pin. The product was designed with high standards in mind and it meets the stringent standards for product quality. The stylus is suitable for use with all touch screens of mobile phones, tablets, and other devices. Read this manual carefully before using the product for the first time.

## CHARGING THE BATTERY

Charge the stylus before first use. Plug the supplied micro USB cable into the charging connector. The charging progress is indicated by the LED indicator. The indicator is red during charging, and after charging it goes out. Make sure the stylus is off before charging. You cannot work with the stylus while charging. Charging time is 1-2 hours. Battery life is up to 4 hours of continuous work.

## STICKING THE CASE

Stick the case on a clean surface. We recommend decreasing the surface before sticking.

## SWITCHING ON AND OFF

To turn on the stylus, pull it out of the case. After 3 seconds, the LED indicator will turn white and the stylus is ready to work.

To turn off the stylus, slide it back into the case.

## NOTES

- While working, keep the screen of your device
- When used with protective glass, the stylus tip sensitivity may deteriorate.
- Do not use alcohol or other solutions or cleaning agents to clean the stylus.
- Do not disassemble the stylus. Switch off the stylus immediately in case of contact with water and other damage.
- Avoid contact with high temperatures, high humidity, and direct sunlight.



## CERTIFICATION AND SAFETY INFORMATION



This product is CE marked in accordance with EMC Directive EMC 2014/30/EU and RoHS 2011/65/EU. FIXED.zone a.s. hereby declares that this product is in compliance with essential requirements and other relevant provisions of EMC Directives EMC 2014/30/EU and RoHS 2011/65/EU.

The marking on the product or in the documentation means that at the end of its service life, the product must not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate the product from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.



Private persons may contact the sales point where the product was purchased or the local office with information about recycling this type of product. Juridical persons should contact their supplier and check the conditions of the purchase contract. Never dispose of the product with normal household waste. This product is equipped with a non-replaceable battery, do not attempt to open the product or remove the battery, it may cause injury or damage the product. We strongly advise you to take your product to an official collection point to have a professional remove the battery. The battery contained in the device is designed according to the product life cycle.

## IMPORT AND DISTRIBUTION

FIXED.zone a.s.

## Documents / Resources



[FIXED FIXS-PIN-BK Fixed Pin Active Stylus](#) [pdf] User Manual  
FIXS-PIN-BK Fixed Pin Active Stylus, FIXS-PIN-BK, Fixed Pin Active Stylus