



[Home](#) » [FJ Westcott](#) » **FJ Westcott 40 Degree Egg Crate Grid for Click Box User Guide** 

Contents [[hide](#)]

- [1 FJ Westcott 40 Degree Egg Crate Grid for Click Box](#)
- [2 Introduction](#)
- [3 Included Components & Overview](#)
- [4 Warning](#)
- [5 Assembly & Mounting](#)
- [6 Warranty](#)
- [7 CONTACT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



FJ Westcott 40 Degree Egg Crate Grid for Click Box




Introduction

This guide provides an overview of setup and basic operation. Visit fjwestcott.com/manuals for video instructions and to download a digital copy of this guide.



Included Components & Overview

ClickBox Softbox with Rods, Front Diffusion Panel, ClickBox Adapter Ring, Bowens Mount, 3 Mounting Screws

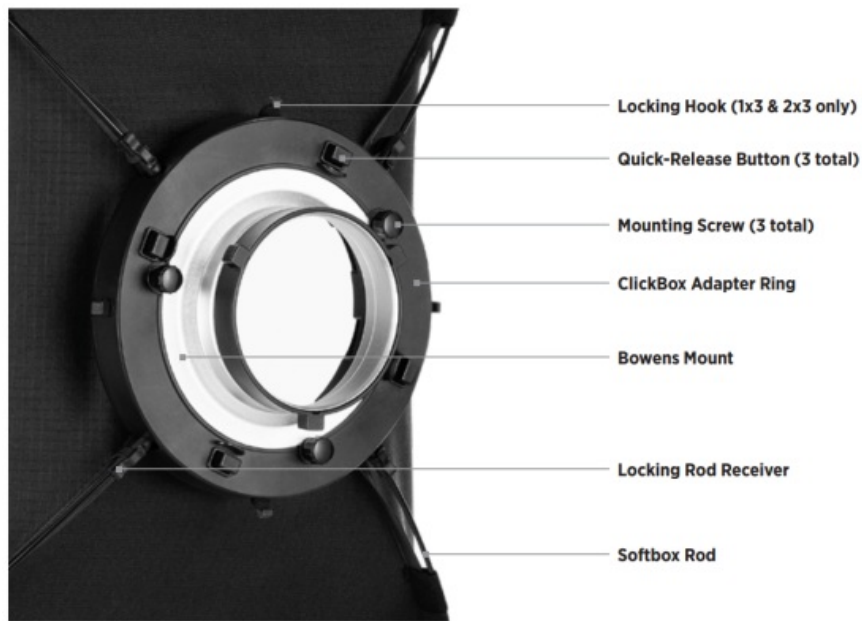

Warning

- Failure to properly lock the Bowens Mount in place may cause damage to the ClickBox and light.
- Failure to confirm that the ClickBox is securely assembled may place unnecessary stress on the ribs and cause permanent damage to the ClickBox.
- Failure to secure your light to the ClickBox could result in damage to your equipment.
- The ClickBox is heat-rated for up to 300W COB/LED lights or 400Ws strobes.

Assembly & Mounting

Attaching the Bowens Mount to the ClickBox Adapter Ring

1. Locate the ClickBox Adapter Ring, Bowens Mount, and three mounting screws.
2. Remove the Bowens Mount from its nested position inside the ClickBox Adapter Ring.
3. Position the Bowens Mount so that its flat face rests within the recessed well in the center section of the ClickBox Adapter Ring.
4. Once the ClickBox Adapter Ring and the Bowens Mount are properly aligned, attach and tighten all three mounting screws to secure the Bowens Mount to the Adapter Ring. Do not overtighten.

Attaching the Softbox to the ClickBox Adapter Ring

1. Locate the softbox material and the ClickBox Adapter Ring.

2. Ensure the locking rod receivers are in the collapsed position.
3. Take a rod attached to the softbox material and insert it fully into a locking rod receiver.
4. Once the rod is fully seated, stretch the elastic band on the softbox and loop it around the hook on the locking rod receiver, ensuring it's securely fastened.
5. Moving clockwise, repeat the process for each rod until all are attached and secured.

Note: The 1×3 and 2×3 ClickBoxes use one or two locking hooks instead of locking rod receivers. Attach the elastic bands from the softbox to these hooks to ensure a tight seal around the base of the light.

ClickBox Assembly

1. Face the front of the ClickBox downward while grasping the black Adapter Ring.
2. While firmly holding the Adapter Ring, select a single rib and pull it back until it clicks into position.
3. Going clockwise, continue to click each rib into place.
4. Attach the included front diffusion panel to the front of the ClickBox.

Attaching the ClickBox to a Light (Bowens Mount)

1. Place your light source onto a light stand, boom, or mounting arm.
2. Align the Bowens Mount with the front of your light and secure the ClickBox. Refer to your light's user manual for compatibility or mounting instructions.

Removing, Collapsing, and Storing the ClickBox

1. Allow the light to cool for 5 minutes before removing the ClickBox.
2. Press or slide the release tab on your light, firmly grasp the ClickBox and rotate the ClickBox to remove.
3. With the face of the ClickBox facing downward and holding the Adapter Ring, use your thumbs to simultaneously press two adjacent quick-release buttons on the Adapter Ring to release two sections of ribs. Finish collapsing the modifier by simultaneously pressing the remaining two quick-release buttons. The release of rib tension may produce a loud sound that some users find startling. This sound is normal and does

not indicate damage.

4. Once collapsed, store at room temperature.

Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott-branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from

Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). Suppose a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law. In that case, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

Disclaimer: By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accept all responsibility and release Westcott and its associates of any and

all liability in the event of a manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to , damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott Customer Support for a Return Authorization Number “RMA” prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

CONTACT

Phone: [419-243-7311](tel:419-243-7311)

Email: support@fjwestcott.com

Shipping: F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537


Register your new gear online at FJWESTCOTT.COM/REGISTER

Visit WESTCOTTU.COM for videos, pro tips, inspiration, and more!

Westcott products are made to the company’s traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured.

Westcott is a brand of F.J. Westcott Co. in the U.S.A. © F.J. Westcott Co. All rights reserved. K0625

Documents / Resources

	FJ Westcott 40 Degree Egg Crate Grid for Click Box [pdf] User Guide 40 Degree Egg Crate Grid for Click Box, Crate Grid for Click Box, Grid for Click Box, Click Box
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.