



FLAMA FC17 Analog Delay Pedal Owner's Manual

[Home](#) » [FLAMA](#) » FLAMA FC17 Analog Delay Pedal Owner's Manual 

FLAMMA FC17 Analog Chorus Pedal Owner's Manual

Contents

- [1 Precautions](#)
- [2 Features](#)
- [3 Layout](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Precautions

Please read carefully before proceeding

Power Supply

Please connect the designated adapter to an AC outlet of the correct voltage, Please be sure the adapter supplies 9V DC,center negative . Unplug the adapter when not in use or during electrical storms. Use only the original power supply.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.

7. Do not install near any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point

FCC certification

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Features

- Warm, vintage analog delay pedal
- 25ms-600ms range of delay time
- Compact size with metal shell
- True bypass circuit

Layout

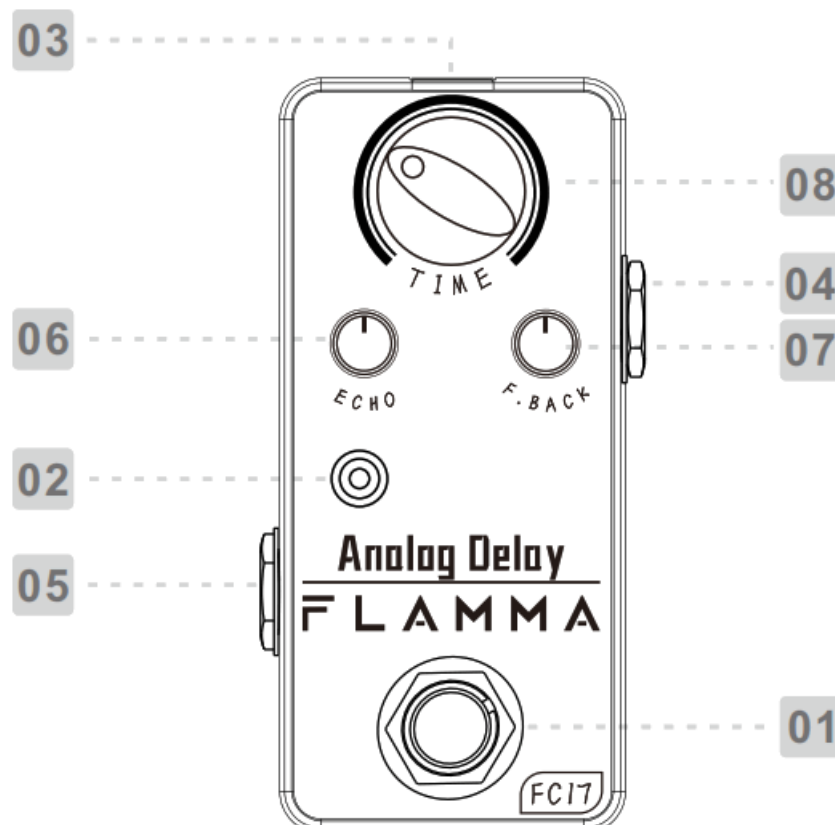

1. **Footswitch:** Press to turn on or off the pedal.
2. **LED Indicator:** Indicates the On or Off status of the pedal.
3. **DC IN:** For connecting to power supply.
4. **INPUT:** 1/4" mono audio jack.
5. **OUTPUT:** 1/4" mono audio jack.
6. **LEVEL:** Rotate to adjust the volume level of chorus.
7. **DEPTH:** Rotate to adjust the depth of chorus.
8. **RATE:** Rotate to adjust the speed of chorus.

Specifications

INPUT: 1/4" mono audio jack (impedance value: 470k ohms)

OUTPUT: 1/4" mono audio jack (impedance value: 470 ohms)

Power Requirements: 9V DC (center negative)

Current Draw: 40mA

Dimensions: 47mm (D) x 83mm (W) x 52mm (H)


Weight: 160g

Accessories: Owner' s manual

www.flammainnovation.com

Shenzhen Flamma Innovation Co., Ltd

Documents / Resources

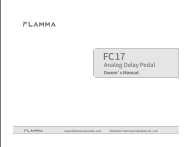	<p>FLAMA FC17 Analog Delay Pedal [pdf] Owner's Manual FC17, Analog Delay Pedal, Delay Pedal, Analog Pedal, Pedal, FC17 Delay Pedal</p>
---	--