



[Home](#) » [FlashingBlinkyLights](#) » **FlashingBlinkyLights A11385 Light-Up Frozen Snowflake Wand**


**User Guide** 

## Contents [ [hide](#) ]

- [1 FlashingBlinkyLights A11385 Light-Up Frozen Snowflake Wand](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)



**FlashingBlinkyLights A11385 Light-Up Frozen Snowflake Wand**

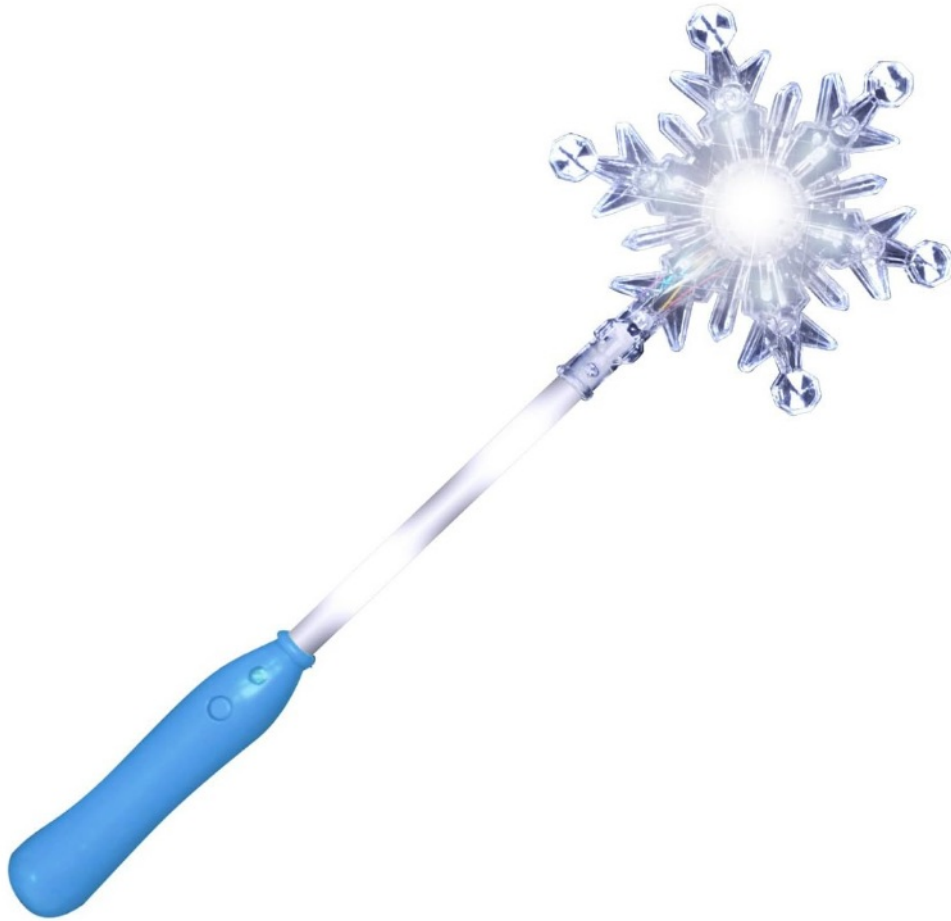

## INTRODUCTION

A magical addition to any festive celebration, the FlashingBlinkyLights Light-Up Frozen Snowflake Wand (Model A11385) adds sparkle and happiness. This **\$17.99** wand is ideal for children, teenagers, and even adults who enjoy a little magic. It has a sleek blue handle and a stunning snowflake top that illuminates with bright white LED lights. It is 13.75 inches long. It is a fun addition to birthday parties, Halloween costumes, Christmas celebrations, and events with a winter theme because customers may switch between different flashing light patterns with a single button push. This wand, which is made of sturdy, CPSIA-compliant plastic and runs on three interchangeable AG13 (LR44) batteries, guarantees continued enjoyment and security. An inexhaustible source of amusement and festive appeal, this light-up snowflake wand can be utilized as a costume prop, stocking stuffer, or party present.

## SPECIFICATIONS

Brand	FlashingBlinkyLights
-------	----------------------

<b>Model Number</b>	A11385
<b>Material</b>	Plastic
<b>Color</b>	Blue handle with White LED Snowflake
<b>Age Range</b>	3 to 17 years
<b>Length</b>	13.75 inches
<b>Width (Snowflake Top)</b>	4.37 inches
<b>LED Colors</b>	9 Bright White LEDs
<b>Light Modes</b>	Multiple flashing patterns (no steady mode)
<b>Power Source</b>	3 × AG13 (LR44) Batteries (Included & Replaceable)
<b>Battery Type</b>	Low mercury, safe for kids
<b>Activation Method</b>	Push-button on handle
<b>Product Weight</b>	Lightweight
<b>Package Dimensions</b>	Approx. 14 x 5 x 2 inches
<b>Safety Compliance</b>	CPSIA Compliant
<b>Manufacturer</b>	FlashingBlinkyLights

## WHAT’S IN THE BOX

- 1 × Light-Up Frozen Snowflake Wand
- 3 × AG13 (LR44) Batteries (Pre-installed)
- User Guide

## FEATURES

- **Length:** Measures 13.75 inches, making it the perfect handheld size for kids and adults.

- **Lighting:** Features a bright snowflake top illuminated by 9 powerful white LEDs.
- **Button:** Simple push-button activation conveniently located on the handle.
- **Light Modes:** Offers multiple flashing light patterns for extra excitement.
- **Steady Light:** Designed without a steady light mode to focus on dynamic flashing effects.
- **Weight:** Lightweight and safe, ideal for children aged 3 and older.
- **Handle:** Sturdy blue handle with an ergonomic, comfortable grip.
- **Usage:** Great for winter festivals, holiday parties, costumes, and themed events.
- **Batteries:** Comes with replaceable batteries included for immediate use.
- **Safety:** Made from CPSIA-compliant, non-toxic, child-safe materials.
- **Gift Idea:** Perfect as a stocking stuffer, party favor, or festive gift.
- **Brightness:** Emits a sparkling glow that's even visible during daylight.
- **Setup:** Quick to start—just remove the battery tab and press the button.
- **Portability:** Compact and easy to carry or store when not in use.
- **Durability:** Built to last and withstand repeated play and handling.



## SETUP GUIDE

- **Unbox:** Carefully remove the wand from the packaging.
- **Battery Tab:** Pull out the protective battery tab to activate the power.
- **Locate Button:** Find the power button located on the handle.
- **Turn On:** Press the button once to activate the first light pattern.
- **Cycle Modes:** Keep pressing the button to scroll through all the flashing modes.
- **Check Lights:** Watch as the snowflake lights up with bright white LEDs.
- **Choose Mode:** Test each mode to find your favorite flashing pattern.
- **Battery Check:** Make sure the batteries are installed properly for smooth operation.
- **Grip:** Adjust your hold on the handle for comfortable use.
- **Pair with Outfits:** Match it with winter costumes, party outfits, or festive attire.
- **Teach Use:** Show children how to safely operate the button.
- **Turn Off:** When finished, press the button repeatedly until the lights turn off.
- **Battery Replacement:** Swap out batteries when the lights start dimming.

- **Storage:** Store the wand in a dry, safe place when not being used.
- **Spare Batteries:** Keep extra AG13 batteries nearby for uninterrupted fun.

## CARE & MAINTENANCE

- **Water Safety:** Keep the wand dry—it’s not waterproof.
- **Cleaning:** Wipe with a soft, dry cloth to remove dust and dirt.
- **Storage:** Store in a cool, dry place to maintain quality.
- **Battery Care:** Remove batteries if not using for a long time to prevent corrosion.
- **Battery Replacement:** Replace old batteries promptly to avoid leakage.
- **Damage Check:** Inspect the wand for cracks if dropped accidentally.
- **Sunlight:** Avoid leaving it in direct sunlight for extended periods to prevent fading.
- **Weather:** Do not submerge the wand in rain, snow, or any liquids.
- **Child Safety:** Keep out of reach of toddlers when not supervised to prevent misuse.
- **Snowflake Top:** Handle the snowflake topper carefully to prevent breakage.
- **Battery Compartment:** Check regularly for any battery leaks or residue.
- **Battery Type:** Use only AG13 (LR44) batteries as specified.
- **Button Use:** Avoid pressing the button with sharp objects to prevent damage.
- **Transport:** Secure the wand properly when taking it to events to prevent damage.
- **Disposal:** Dispose of used batteries properly following local recycling guidelines.

## TROUBLESHOOTING

Issue	Solution
Wand does not light up	Check if the pull tab has been removed; replace batteries if needed.
Dim or fading light	Batteries may be depleted; replace with new AG13 batteries .
Button not responsive	Check if button is stuck; clean or gently press repeatedly.
Lights stuck in one mode	Cycle through modes by repeatedly pressing the button.

Issue	Solution
Battery compartment loose	Open, reseal batteries correctly, and ensure the cover is properly secured.
Flickering or inconsistent light	Battery connections may be dirty or loose; check contacts and clean if necessary.
Lights turn off abruptly	Batteries may be dying; replace them.
Snowflake top feels loose	Gently push it back in place; check for any plastic locks or connectors.
Wand doesn't respond after drop	Check for visible damage and battery alignment.
Battery leakage	Remove batteries immediately, clean compartment, and install all new batteries.

## PROS & CONS

PROS	CONS
Multiple flashing light modes for variety	No steady light mode (only flashing modes)
Batteries included and replaceable	Not waterproof
Lightweight and easy for kids to hold	Plastic snowflake may be fragile if dropped
CPSIA-compliant and safe materials	Button may wear with excessive use
Great for various occasions (Christmas, parties)	Requires frequent battery changes for extended use

## WARRANTY

The FlashingBlinkyLights A11385 Light-Up Frozen Snowflake Wand typically comes with a **90-day** limited warranty covering defects in materials and workmanship under normal

use. The warranty does not cover damage due to misuse, water exposure, battery leakage, or physical abuse. For any warranty claims or issues, customers should contact FlashingBlinkyLights customer support with proof of purchase.

## **FREQUENTLY ASKED QUESTIONS**

What are the main features of the FlashingBlinkyLights A11385 Light-Up Frozen Snowflake Wand?

This wand measures 13.75 inches long, featuring a bright snowflake top with sparkling LED lights and a blue handle. It offers multiple blinking and flashing patterns.

How do I activate the FlashingBlinkyLights A11385 Snowflake Wand?

Simply remove the pull tab and press the button on the handle to cycle through various flashing and blinking light modes.

What type of LEDs are in the FlashingBlinkyLights A11385 Wand?

It contains 9 bright white LEDs, creating dazzling sparkling effects.

Is the FlashingBlinkyLights A11385 Snowflake Wand safe for kids?

It is CPSIA compliant, made with low mercury batteries, and recommended for ages 3 years and up.

What kind of batteries does the FlashingBlinkyLights A11385 Wand use?

It uses 3 AG13 (LR44) replaceable batteries, which are included in the package.

What colors are the lights on the FlashingBlinkyLights A11385 Wand?



The wand features white LEDs, adding a frosty, snowflake-like glow.

Why isnt my FlashingBlinkyLights A11385 Snowflake Wand lighting up?

Check if the plastic pull tab is fully removed. If it still doesnt light, the batteries may need to be repositioned or replaced.

## References

- [User Manual](#)

■ FlashingBlinkyLights

🔗 A11385, B01BLPIV62, FlashingBlinkyLights, FlashingBlinkyLights A11385, Light-Up Frozen Snowflake Wand, user guide

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.