



FleetSharp AT3 Asset Tracker User Guide

[Home](#) » [FleetSharp](#) » FleetSharp AT3 Asset Tracker User Guide 



AT3 Asset Tracker Quick Start Guide

Contents

- [1 Welcome to FleetSharp!](#)
- [2 Account Activation](#)
- [3 Device Activation](#)
- [4 Installing Your Wired Asset Tracker](#)
- [5 Install Positioning Matters](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Welcome to FleetSharp!

This simple step-by-step guide will walk you through activating your account and installing your GPS tracker. You'll also find easy instructions to customize your Customer Portal for tracking vehicles and equipment, monitor reports, set alerts, and much more. Let's get started!

Account Activation

1. Open your web browser (Chrome is recommended) and go to: <https://activate.fleetsharp.com>
2. You will be directed to the Activation Page where you will finish your account registration. Fill out the following information:

New Customers

Fill out the following to complete your registration:

☐ I agree to the [Terms and Conditions](#)

CONTINUE

Already a Customer?

Simply log in and we'll walk you through the process of adding your new units.

FORGOT YOUR PASSWORD?

SIGN IN

- Activation Code: You can enter either the Activation Code found on your device OR your Billing Account Number (BAN) provided in your confirmation email.
- Email Address: Please use the email address you provided when completing the order.
- Create/Confirm Your Password: Make it strong and secure!
- Read through our Terms & Conditions and then click the radio box to agree before clicking "Next".


Device Activation

1. Welcome to your portal!

New Tracker Activation


What would you like to activate?

Tracker



6-digit activation code on the sticker or card

Camera



11-digit activation code on the screen or box

Activation Code

A

7

R

—


Q

2

S

CONTINUE

- If you entered in your activation code on the previous screen it will auto populate here.
 - If you entered your Billing Account Number (BAN), you will need to enter the activation code shown on your device here.
2. Name your tracker based on the naming convention you use to manage your vehicles.

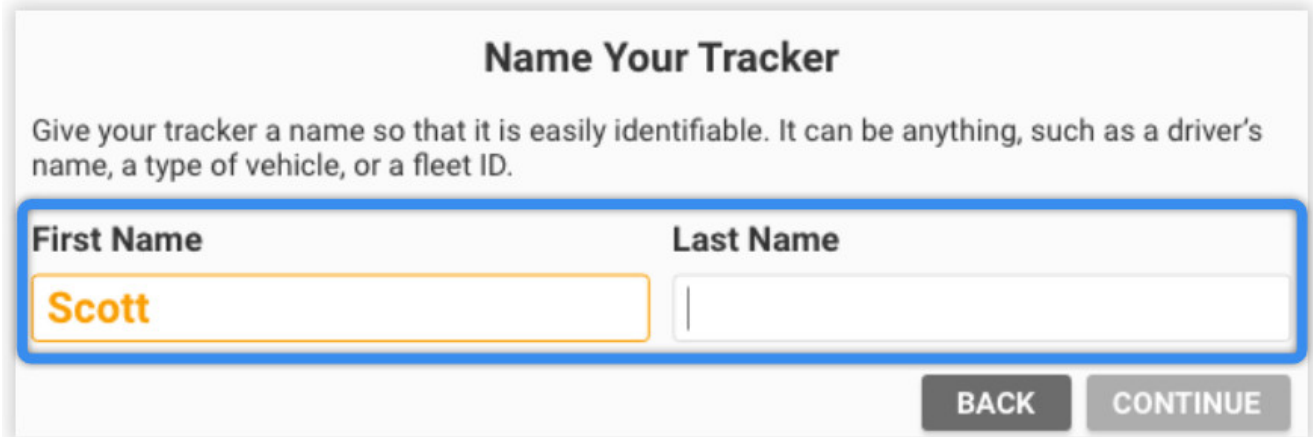

Name Your Tracker


Give your tracker a name so that it is easily identifiable. It can be anything, such as a driver's name, a type of vehicle, or a fleet ID.

First Name **Last Name**

Scott |

BACK **CONTINUE**

- Some common ways to name your vehicle: Blue Truck, Van ##, Sophie's Car, Ford F150, Tractor ###, etc.
3. Enter in any optional information you would like to add for your tracker.
 - Tip! If you are adding trackers into multiple groups, complete Group Setup before activating the remainder of your devices.

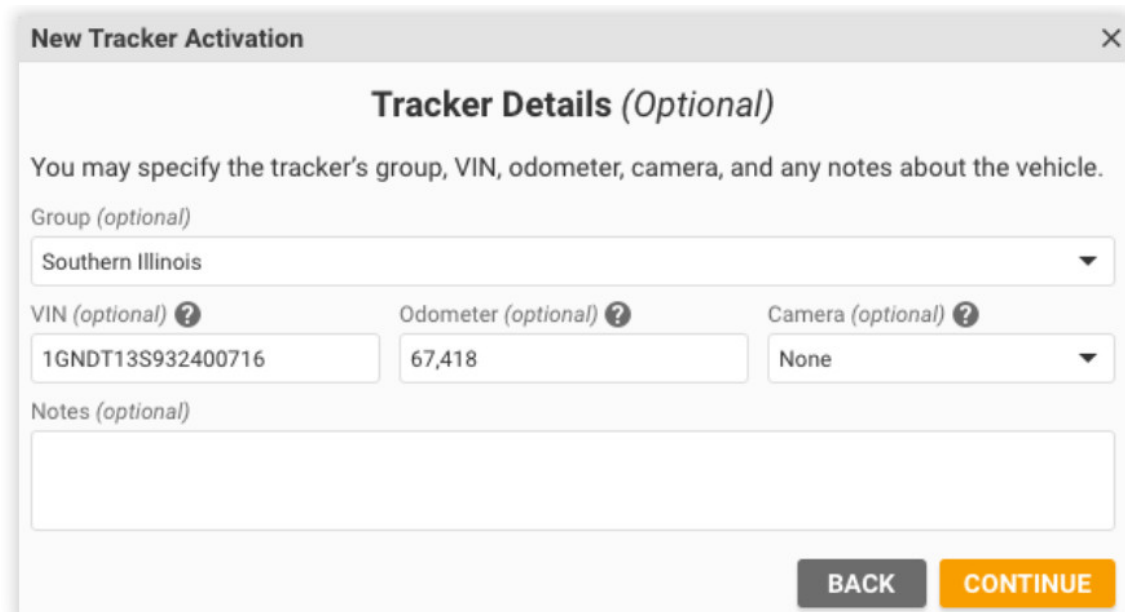

New Tracker Activation X

Tracker Details (Optional)

You may specify the tracker's group, VIN, odometer, camera, and any notes about the vehicle.

Group (optional)
Southern Illinois ▼

VIN (optional) ? 1GNDT13S932400716 Odometer (optional) ? 67,418 Camera (optional) ? None ▼

Notes (optional)

BACK **CONTINUE**

4. **Congratulations!** You have now set up your first device and your portal has been activated for use. From here, you can either choose to Activate More Trackers or Complete the process and begin using your system.

Installing Your Wired Asset Tracker

1. You have purchased a wired asset tracker device which contains an internal rechargeable battery. This battery may not be fully charged when you first receive it. In order to register and activate this device, please either charge the asset tracker device for a minimum of four hours, or wire the device for installation to an appropriate power source.



For Non-Powered Assets:



Wire to constant power

- If available, obtain the wiring diagram online or from your owner's manual. Find the constant power wire on your equipment. Strip this wire.
- Strip the asset tracker's red and white wires, then connect them to the constant power wire from your equipment and crimp. This connection provides power to the device.
- Strip the asset tracker's black wire and connect it to a grounded source.
- Using screws, zip ties or tape, secure the device to your asset in a spot where there is a direct line of sight to the sky from the top of the device.

For Powered Assets:


(Note: this is REQUIRED for Mower Tracker)

- If available, obtain the wiring diagram online or from your owner's manual. Find the ignition wire on your asset. Verify the ignition wire by measuring the operating voltage while the key is in the ON or START position (voltage should read 0VDC when OFF, and typically between 11V and 14V when ON). Strip this wire.
- Strip the asset tracker's red and white wires, then connect the white wire to the ignition source and the red wire to constant power. This connection lets the asset tracker report ignition ON/OFF events as well as engine hours for maintenance.
- Strip the asset tracker's black wire and connect it to a grounded source.
- Using screws, zip ties or tape, secure the device to your asset in a spot where there is a direct line of sight to the sky from the top of the device.

Confirm The Power Connection.

Following installation, allow 5-10 minutes for the FleetSharp asset tracker to power up and obtain a cellular and GPS fix. Your asset must be outside and not in a covered area so that it will receive GPS signal. Once you have LED confirmation of power, your installation is complete.

Install Positioning Matters

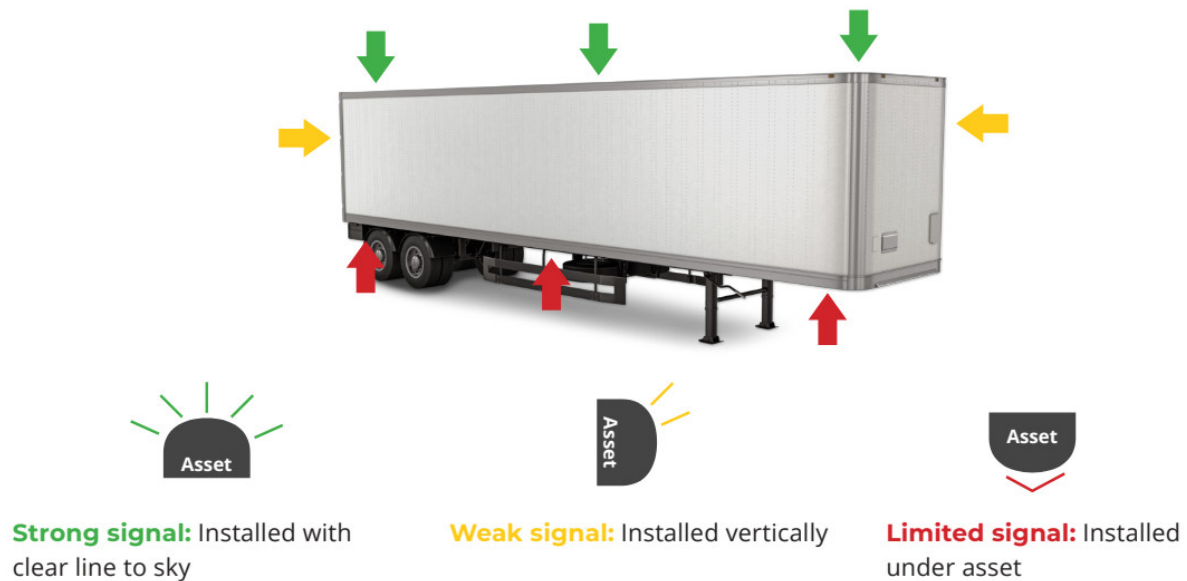

Not Intended For Use:


- Indoors
- Inside of metal casings
- Underground
- In remote, “no cell coverage” areas

Performance and results will vary if used in the above environments.

If you need help or have any questions, contact us at 1-844-498-9450 or support@fleetsharp.com



Documents / Resources

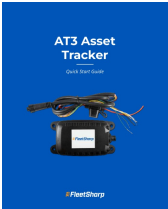	<p>FleetSharp AT3 Asset Tracker [pdf] User Guide AT3 Asset Tracker, AT3, Asset Tracker, Tracker</p>
---	---

References

-  [Activate Your Devices](#)

Manuals+.