



FleetSharp Wire-In Vehicle and Car Tracker User Guide

[Home](#) » [FleetSharp](#) » FleetSharp Wire-In Vehicle and Car Tracker User Guide 

Contents

- [1 FleetSharp Wire-In Vehicle and Car Tracker](#)
- [2 Product Information](#)
- [3 Account and Device Activation](#)
- [4 Wired Vehicle Tracker Installation](#)
- [5 Welcome to FleetSharp](#)
- [6 Account Activation](#)
- [7 Device Activation](#)
- [8 Installing Your Wired Device](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



FleetSharp Wire-In Vehicle and Car Tracker



Product Information

Wired Vehicle Tracker

The Wired Vehicle Tracker is a GPS device that allows you to track the location of your vehicles and equipment. The device can be easily installed in the passenger compartment of a vehicle and connected to the vehicle's

ignition wire to report ignition ON and OFF events. The device requires cellular and GPS signal to function properly.

Account and Device Activation

To use the FleetSharp Wired Vehicle Tracker, you need to activate your account and device using the following steps:

1. Open your web browser (Chrome is recommended) and go to <https://activate.fleetsharp.com>
2. Follow the instructions to activate your account
3. Name your tracker based on the naming convention you use to manage your vehicles or equipment
4. Enter any optional information you would like to add for your tracker
5. Complete the process and begin using your system

If you need help or have any questions, contact FleetSharp at 1-844-498-9450 or support@fleetsharp.com.

Wired Vehicle Tracker Installation

To install the FleetSharp Wired Vehicle Tracker, follow these steps:

1. Locate the vehicle's ignition wire using the vehicle's wiring diagram
2. Verify the ignition wire by measuring the operating voltage while the key is turned to the ON or START position
3. Connect the white wire on the FleetSharp device to the vehicle's ignition wire
4. Secure the device under the vehicle dash with the included plastic zip tie
5. Confirm the power connection by allowing 5-10 minutes for the device to power up and obtain a cellular and GPS fix
6. Ensure that the vehicle is outside and not in a covered area to receive GPS signal
7. Check that the blue light blinks once every 3 seconds and the green light blinks when searching for satellite signal

If your vehicle requires a jump start, you will need to replace the fuse in the wiring harness with a 3 volt fuse. Visit www.fleetsharp.com/wiredinstall to watch a video on the installation process. If you need help or have any questions, contact FleetSharp at 1-844-498-9450 or support@fleetsharp.com.

Welcome to FleetSharp


This simple step-by-step guide will walk you through activating your account and installing your GPS tracker. You'll also find easy instructions to customize your Customer Portal for tracking vehicles and equipment, monitor reports, set alerts, and much more. Let's get started!

Account Activation

Open your web browser (Chrome is recommended) and go to: <https://activate.fleetsharp.com>
You will be directed to the Activation Page where you will finish your account registration. Fill out the following information:

New Customers

Fill out the following to complete your registration:

Activation Code*  Tracker Purpose* ▼

Email Address*

Create Your Password*

Confirm Password*

☐ I agree to the [Terms and Conditions](#)*

CONTINUE

Already a Customer?

Simply log in and we'll walk you through the process of adding your new units.

Email Address*


Your Password*

[FORGOT YOUR PASSWORD?](#)

[SIGN IN](#)

- **Activation Code:** You can enter either the Activation Code found on your device OR your Billing Account Number (BAN) provided in your confirmation email.
- **Email Address:** Please use the email address you provided when completing the order.
- **Create/Confirm Your Password:** Make it strong and secure!
- Read through our Terms & Conditions and then click the radio box to agree before clicking "Next".

Device Activation

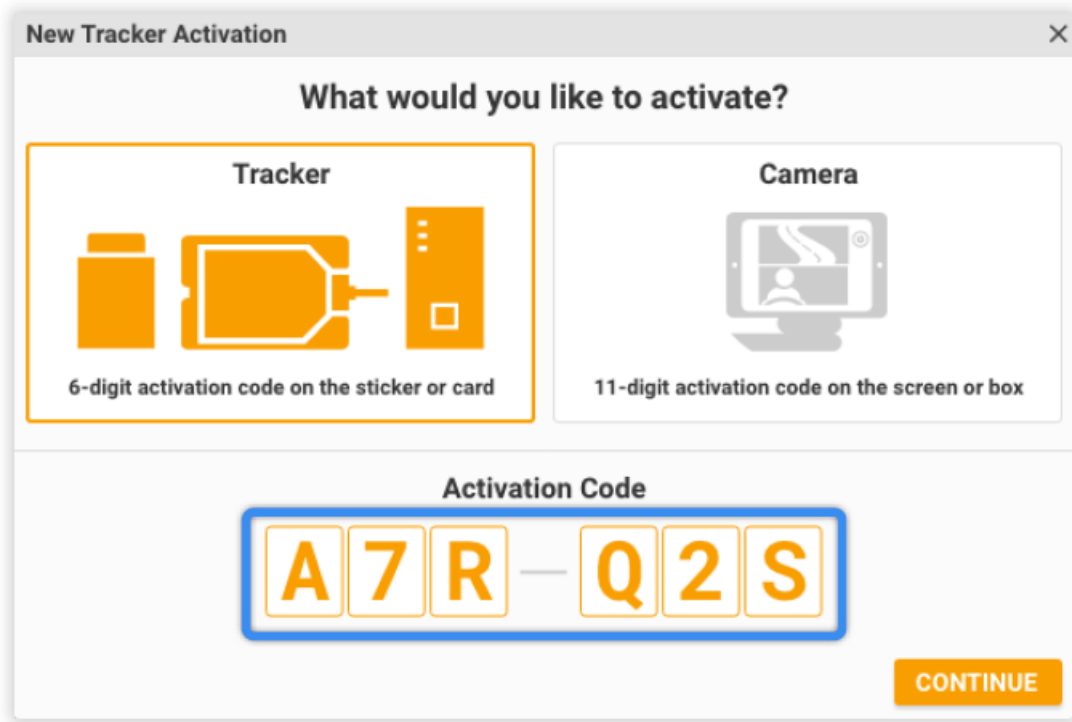

The 'New Tracker Activation' window has a title bar with a close button. The main heading is 'What would you like to activate?'. Below this are two options: 'Tracker' and 'Camera'. The 'Tracker' option is highlighted with an orange border and shows icons of a battery, a device, and a card, with the text '6-digit activation code on the sticker or card'. The 'Camera' option shows a monitor icon with the text '11-digit activation code on the screen or box'. Below these is an 'Activation Code' section with a blue border containing the code 'A7R-Q2S'. A 'CONTINUE' button is in the bottom right corner.

New Tracker Activation

What would you like to activate?

Tracker

6-digit activation code on the sticker or card


Camera

11-digit activation code on the screen or box

Activation Code

A7R-Q2S

CONTINUE

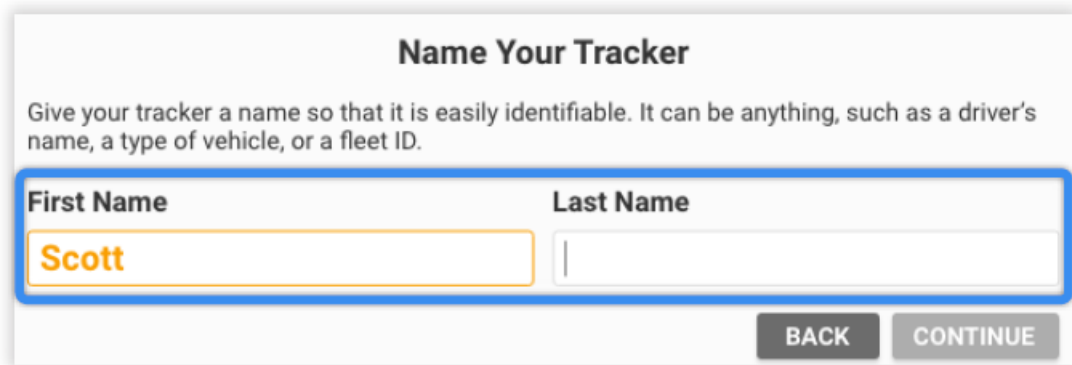

The 'Name Your Tracker' window has a title bar. The heading is 'Name Your Tracker'. Below it is a paragraph: 'Give your tracker a name so that it is easily identifiable. It can be anything, such as a driver's name, a type of vehicle, or a fleet ID.' There are two input fields: 'First Name' with the value 'Scott' and 'Last Name' which is empty. Both fields are highlighted with a blue border. At the bottom are 'BACK' and 'CONTINUE' buttons.

Name Your Tracker

Give your tracker a name so that it is easily identifiable. It can be anything, such as a driver's name, a type of vehicle, or a fleet ID.

First Name Last Name

Scott

BACK CONTINUE

1. Welcome to your portal!
 - If you entered in your activation code on the previous screen it will auto populate here.
 - If you entered your Billing Account Number (BAN), you will need to enter the activation code shown on your device here.
2. Name your tracker based on the naming convention you use to manage your vehicles.
 - Some common ways to name your vehicle: Blue Truck, Van ##, Sophie's Car, Ford F150, Tractor ###, etc.
3. Enter in any optional information you would like to add for your tracker.
 - **Tip:** If you are adding trackers into multiple groups, complete Group Setup before activating the remainder of your devices.
4. Congratulations! You have now set up your first device and your portal has been activated for use. From here, you can either choose to Activate More Trackers or Complete the process and begin using your system.

New Tracker Activation

×

Tracker Details (Optional)

You may specify the tracker's group, VIN, odometer, camera, and any notes about the vehicle.

Group (optional)

Southern Illinois

VIN (optional) ?

1GNDT13S932400716

Odometer (optional) ?

67,418

Camera (optional) ?

None

Notes (optional)

BACK

CONTINUE

Installing Your Wired Device

1. Wiring the device into a vehicle is easy, and requires installation inside the passenger compartment of the vehicle. The FleetSharp wired device has a series of wires — you will only need to attach three of these wires to your vehicle (the additional wires are for future features or functions). The three wires you need are: the red wire (power), the longer of the two black wires (ground) and the white wire (ignition sense).
 - **a.** Find the constant red power wire in your vehicle. Cut and strip this wire.
 - **b.** Cut and strip the red wire on the FleetSharp GPS device.
 - **c.** Connect the two red wires and crimp. This connection provides power to the device.
 - **d.** Connect the FleetSharp black wire to your vehicle's chassis. This connection serves as a ground for the device.
 - **e.** Locate the vehicle's ignition wire (reference the vehicle's wiring diagram in order to locate).
 - **f.** Verify the ignition wire by measuring the operating voltage while the key is turned to the ON or START position (the voltage should read 0 VDC when the key is in the off position, and typically between 11V and 14V when in the ON position).
 - **g.** Connect the white wire on the FleetSharp device to the vehicle's ignition wire. This connection allows the device to report ignition OFF and ON events.
 - **h.** An optional plastic zip tie is included to secure the device under the vehicle dash with the label that reads "Label Side Down" facing down.

Visit www.fleetsharp.com/wiredinstall to watch a video on the installation process.

Confirm The Power Connection.

Following installation, allow 5-10 minutes for the FleetSharp device to power up and obtain a cellular and GPS fix. Your vehicle must be outside and not in a covered area so that it will receive GPS signal. When working properly, the blue light will blink once every 3 seconds and you will see a blinking green light.

You should see your car's location on the map (may take up to two hours).



<div>● Cell (Blue)</div>	Blinking 1x/second	Searching for a GSM network
	Blinking 1x/3seconds	GSM lock (connected to network)
	Off	Modem reboot
<div>● GPS (Green)</div>	Solid	Searching for satellite
	Blinking	GPS lock (connected to satellite)

Please note: Should your vehicle require a jump start, you will have to replace the fuse in the wiring harness with a 3 volt fuse.

If you need help or have any questions, contact us at 1-844-498-9450 or support@fleetsharp.com

Documents / Resources

	FleetSharp Wire-In Vehicle and Car Tracker [pdf] User Guide Wire-In Vehicle and Car Tracker, Vehicle and Car Tracker, Car Tracker, Tracker
--	---

References

- [Wired Device Installation Video | FleetSharp](#)
- [Activate Your Devices](#)