



Home » Fleischmann » Fleischmann 7760003 Electrical Multiple Unit Instruction Manual

Contents [hide]

- 1 Fleischmann 7760003 Electrical Multiple Unit
- 2 Specifications
- 3 Product Usage Instructions
- 4 INTRODUCTION
- 5 Starting operation
- 6 Maintenance
- 7 CONTACT
- 8 FAQ
- 9 Documents / Resources
 - 9.1 References



Fleischmann 7760003 Electrical Multiple Unit



Specifications

• Model: Triebwagenzug ICE 2, DB-AG

• Manufacturer: Modelleisenbahn GmbH

• Contact: Email: info@moba.cc, Tel.: 00800 5762 6000 AT|D|CH

(International: +43 820 200 668)

Product Usage Instructions

Starting Operation

- 1. Unwrap the model carefully from the packaging.
- 2. Before use, let the model run forward and backward without load for about 30 minutes each to optimize circuit and tractive power.
- 3. The model should run on a minimum radius of R1 of the FLEISCHMANN track system (R1 = 192 mm).
- 4. Clean the tracks before running the model for smooth operation.
- 5. For digital mode, open the body, remove the jumper from the interface, and plug the decoder into the interface.

Maintenance:

- 1. Service the model regularly after approximately 30 hours of operation.
- 2. Clean wheel contacts with a small brush to remove dirt.
- 3. Lubricate the designated spots with tiny oil drops using Fleischmann oiler (item no. 6599).
- 4. For motor changing, carefully remove the body, unclip the spring clips, and reassemble in reverse order.
- 5. When changing traction tires, avoid twisting them during installation.

INTRODUCTION

Please store the model's packaging carefully. It offers the best protection when storing the model. A model that has been upgraded with the enclosed accessories will only fit back into the original packaging to a limited extent, as the packaging must be very tight to secure it during transportation. It is advisable to cut out the original packaging in certain places with a sharp knife. Smaller parts of the model, such as buffers, are designed as upgraded plug-in parts for the sake of attention to detail and are therefore

not fully attached to the main body. In the event of loss through your own fault, please order such a part again. (In this case, you can reorder these parts as spare parts, a complaint cannot be made).

• Please retain these instructions for further reference!

Safety instructions: This product may only be used in closed rooms. Do not expose the model to direct sunlight, severe temperature fluctuations or high air humidity.

Attention! At an incorrect use there exists a danger of hurting because of the cutting edges and tips

We reserve the right to change the construction and design!

The latest version of the instruction manual can be found on our website under downloads at the article.

Starting operation


Unwrap model: Take out the model cautiously with foil.

Operating instructions: Before use is advisable to let the model go around about 30 minutes forwards an 30 minutes backwards without load, to obtain an optimal circuit and best tractive power. The smallest radius this model should run is R1 of the FLEISCHMANN track system (R1 = 192 mm).

Your model will run smoothly on clean tracks only. For this purpose, we recommend using item no. 6595, FLEISCHMANN track cleaning rubber.

Running in digital mode: First open the body (fig. 5). Open the body by prising it open wide above the wheels. Remove the jumper from the interface (fig. 6). Finally, put the plug of the decoder into the interface.

Fig. 2 Fig. 1 Fig. 3 Fig. 4 Steuerwagen Driving trailer Remorque pilote Fig. 5 ICE

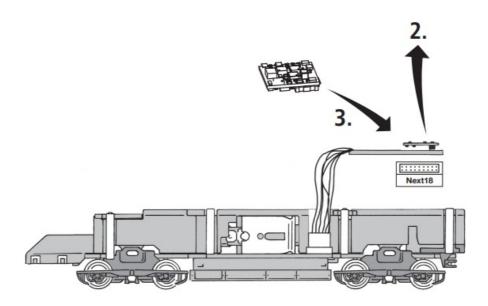

Note: The headlight switching is done by the DCC functional decoder as well for analog running as for digital running. The functional decoder is located in the driving trailer.


Note: This model has been designed without an overhead catenary function.

Maintenance

To enjoy your model for a long time, it is necessary to service it regularly (i.e. after it has been in operation for approximately 30 hours).

1. Cleaning of wheel contacts: Wheel contacts easily get dirty on tracks that are not entirely clean. Use a small brush to remove dirt from spots marked in fig. 8.

Fig. 8

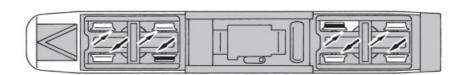


2. **Lubrication:** Apply tiny oil drops to spots marked in fig. 7. We recommend using item no. 6599, Fleischmann oiler.

Fig. 9







3. **Motor Changing:** First, remove the body (fig. 5). Unclip the spring clips, carefully using a screwdriver to bend the spring clips outwards (fig. 10). Reassemble in inverse sequence.

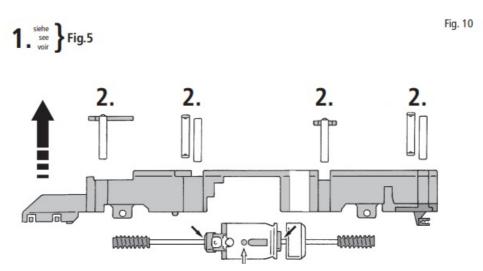

4. **Change of traction tyre:** Remove the traction tyre using a pin or a fine screwdriver (fig. 9). When pressing on the new traction tyre, please avoid twisting it.

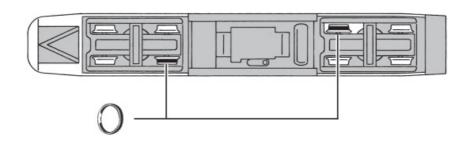

Pay attention when mounting the motor that the hole is located as indicated, see above.

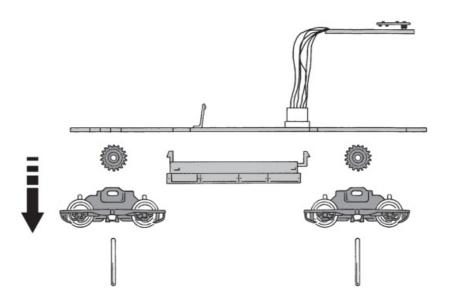

CONTACT



Modelleisenbahn GmbH Plainbachstraße 4

A-5101 Bergheim

Email: info@moba.cc
Tel.: 00800 5762 6000

free of charge

International: +43 820 200 668

chargeable

local tariff for landline / Mobile max. 0,42€/min.

7760003-920

FAQ

- Q: How often should I service the model?
 - A: It is recommended to service the model after approximately 30 hours of operation to ensure its longevity.
- Q: Can I use any cleaning rubber for track maintenance?
 - A: For track cleaning, it is recommended to use item no. 6595, FLEISCHMANN track cleaning rubber for optimal performance.

Documents / Resources



Fleischmann 7760003 Electrical Multiple Unit [pdf] Instruction Manual 7760003, 7770003, 7760003 Electrical Multiple Unit, 7760003, Electrical Multiple Unit, Multiple Unit, Unit

References

- User Manual
- Fleischmann
- ◆ 7760003, 7760003 Electrical Multiple Unit, 7770003, Electrical Multiple Unit, Fleischmann, Multiple Unit, Unit

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.