

FLX VRA REM01 Remote Control



REM01 Flex VRA Remote Control User Manual

[Home](#) » [FLEX VRA](#) » REM01 Flex VRA Remote Control User Manual 

Contents

- [1 REM01 Flex VRA Remote Control](#)
- [2 Package Contents](#)
- [3 Flex VRA System Operation](#)
- [4 Un-Pairing Process](#)
- [5 Button Assignments](#)
- [6 Replacing the Battery](#)
- [7 FCC](#)
- [8 MORE INFO](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



REM01 Flex VRA Remote Control



About this guide

This guide explains the setup and operation of the Flex VRA remote control, P/N Flex-Remote-1.

Package Contents


The package contains the remote and the USB receiver.




Overview

- Flex wireless remote control is a single-frequency remote that transmits a 433.92 MHz (FSK) signal to Visual Reinforcement Audiometry (VRA) system.

Flex VRA System Operation

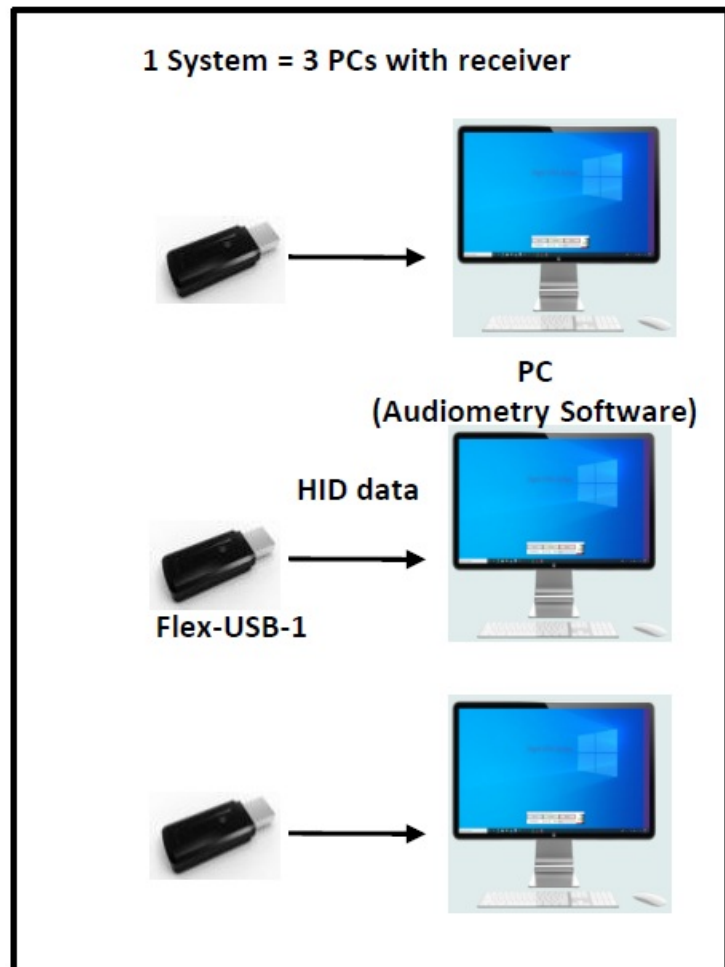

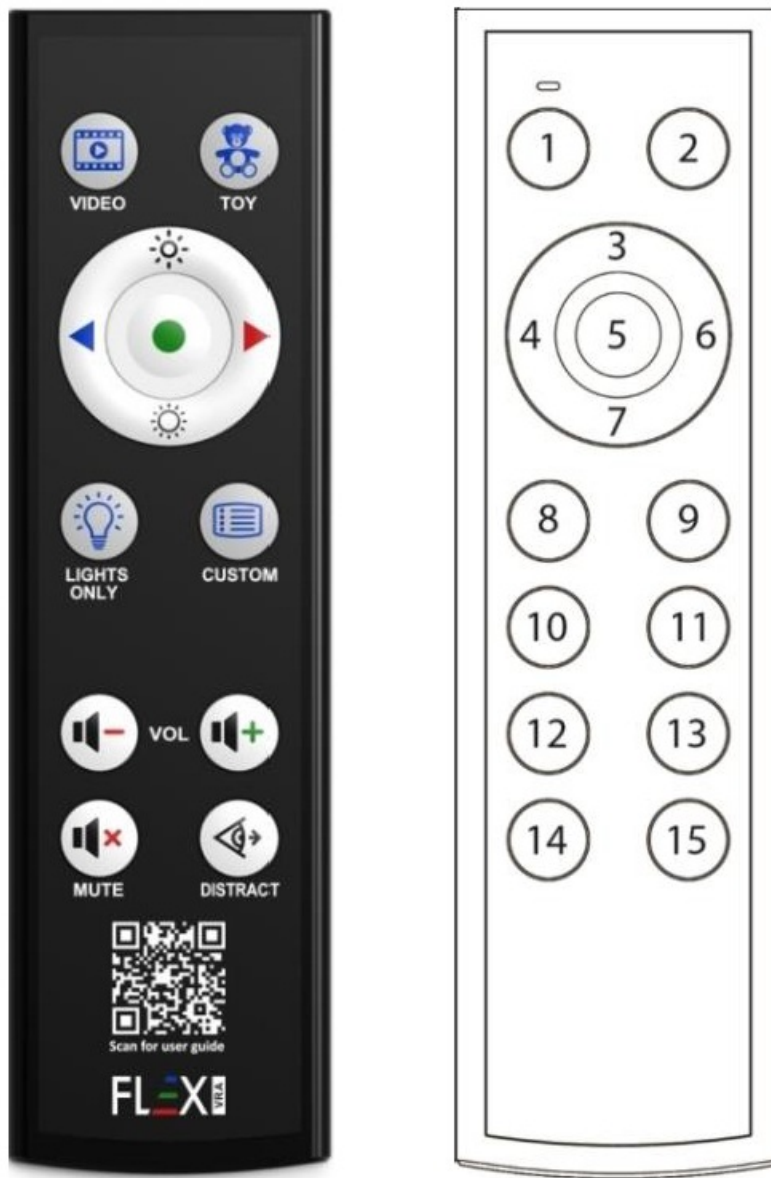

Pairing the Remote

- **To pair the remote control with the USB receiver:**
 - Press and Hold the Light On Button (3) and Lights Only Button (8) for 3 seconds.
 - The red Feedback LED turns ON and flashes.
 - Press the pairing button on the USB receiver once.
 - The Remote accepts the USB receiver pairing request.
 - Green Feedback LED blinks one time (slowly), turns OFF, and remote exits pairing mode.
 - The Remote is now paired to the USB receiver.

Un-Pairing Process

- Press and Hold the Light On Button (3) and Custom Button (9) for 3 seconds.
- RED Feedback LED turns ON.
- RED feedback LED blinks 5 times (slowly).
- Remote is now un-paired to the USB receiver.

Button Assignments

Button	Description
Video	Change Stim to Video Image
Toy	Change Stim to Toy Image
Light On	Turn on Light
Left	Activate Left Reinforcer
Center	Activate Center Reinforcer
Right	Activate Right Reinforcer
Light Off	Turn Light Off
Light Only	Change Stim to Only Lights (No Image)
Custom	Change Stim to Custom Content
Vol Down	Turn Volume Down
Vol Up	Turn Volume Up
Mute	Mute Volume
Distract	Toggle On/Off Distract Mode

Normal Use – Remote Paired

- **The user pushes a button on the remote.**
 - THE GREEN LED on the remote blinks for the duration of the button being held down.
 - Attempted Use – Remote Not Paired
- **The user pushes a button on the remote.**
 - The RED LED on the remote blinks while the button is held down, but no signal is received by the USB receiver.

Replacing the Battery

- This remote needs a battery to operate.
- Replace the battery when needed with 2 AAA batteries.

To replace the battery:

- Pull the battery compartment out and remove the old batteries.
- Insert the replacement batteries.
- Close the battery compartment.
- If necessary, perform the pairing procedure.

FCC

Regulatory Compliance Statements FCC Compliance Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions :

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Interference Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- **FCC ID:** YI5-REM01

Industry Canada Statement

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.


IC: 9065A-REM01

MORE INFO

- Flex VRA

- 100 E. Whitestone Blvd.
- St. 148, #160
- Cedar Park, TX 78613
- flexvra.com.
- **Model:** Flex-Remote-1

Documents / Resources

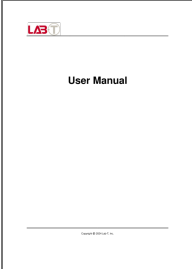	<p>FLEX VRA REM01 Flex VRA Remote Control [pdf] User Manual REM01, REM01 Flex VRA Remote Control, Flex VRA Remote Control, VRA Remote Control, R emote Control, Control</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.