

flic Smart Button User Manual

Home » flic » flic Smart Button User Manual

Contents [hide

- 1 flic Smart Button
- 2 Connecting your Flic
- 3 Bluetooth connection
- 4 Sticking your Flic
- 5 Cleaning the adhesive
- **6 Wearing your Flic**
- 7 Changing the battery
- 8 Factory reset
- 9 Handling the battery
- 10 Safety usage guidelines
- 11 Warranty
- 12 Notice
- 13 Documents /

Resources

14 Related Posts






To get started make sure that you have:

- 1. An iOS or Android device with at least Bluetooth 4.0+
- 2. Active internet connection
- 3. The Flic app, available on the App Store or Google Play
- 4. A Flic 2 button ("Flic")

For the up-to-date requirements and further information visit https://flic.io/start

Connecting your Flic

1.

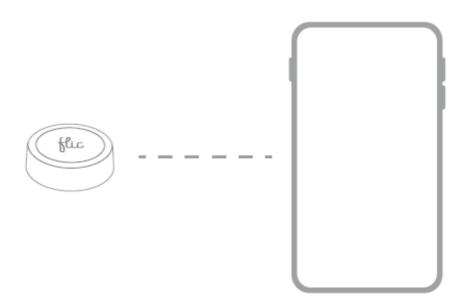

Make sure Bluetooth is activated on your phone.

- 2. Open the Flic App, create an account and login.
- 3. Follow the setup guide in the app to get your Flic paired.
- 4. Now you are ready to set up your first actions.


Bluetooth connection

When setting Flic up make sure to connect to your device through the Flic App.

iOS users: an in-app pop up will ask you to confirm the Bluetooth connection with your device. **Android users:** do not try to pair with your Flic through the Bluetooth settings 'Available devices' page.

Always keep your Bluetooth on to ensure your Flic stays connected with your device. Bluetooth works within the range of up to 50m depending on the obstacles within the signal propagation and your device capability. Make sure your Flic stays close to your device to ensure a stable connection.

Sticking your Flic

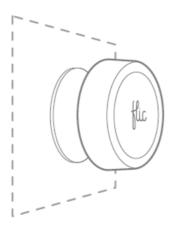

Each Flic comes with a reusable adhesive sticker, pre-attached to the back.

Simply peel off the protective layer and stick your Flic on any clean surface.

If you want to change the position of your Flic, twist the button to the right in order to exert horizontal force which makes it easier to remove the adhesive from the surface.

Note: consider that the adhesive is super strong before you stick it to any surface. Removing the adhesive might damage the surface attached.

Cleaning the adhesive

If the adhesive starts to lose its stickiness then you can clean it

- 1. Carefully wash off the adhesive with water.
- 2. Give it a rub and repeat the wash.
- 3. Leave it to air-dry and it will return to full stickiness.

Flic is not waterproof. Do not expose it to rinsing water, submerge or attempt to use underwater as this will result in irreversible damage that is outside the scope of the Shortcut Labs AB warranty.

Do not apply solvents, chemicals or abrasive cleaning products as this will damage the adhesive.

Wearing your Flic



To wear Flic you will need to have a Metal Clip. In case if you do not have it, you can get it from our webshop. When all set, just simply expand the metal frame and carefully slide your Flic in the frame. Done! You are good to go.

Changing the battery



To change the battery you will need to follow these steps:

- 1. Open the battery hatch, by sticking your Flic to a surface and twisting it to the left.
- 2. Remove the old battery and replace it with a new CR2032 battery with the "+" side facing towards you.
- 3. Place back the top part of Flic to the bottom and twist to the right until it clicks and the adhesive releases the surface.

Note: consider that the adhesive is super strong before you stick it to any surface. Removing the adhesive might cause damage to the surface attached.

Factory reset



If, for any reason, you must perform a factory reset, perform the following steps:

- 1. Remove the battery, see the page "Changing the battery".
- 2. Insert the battery.
- 3. Within 5 seconds push and hold the button for 10 seconds.

By pushing the button, all your settings will be lost and the Flic will return to default.

Problems

If you have any issues setting up or using the Flic products that are not answered here, please read FAQ's at https://start.flic.io/faq
Alternatively, you can contact us via flic.io/support

Compliance

Shortcut Labs declaration of conformity is available at Declaration-of-Conformity-10-01-20 [PDF] For full compliance, list visit https://flic.io/compliance Flic 2 is certified as FCC, IC, CE, AUS, R-NZ and WEEE, RoHS, REACH compliant.

Handling the battery

This device contains a CR2032 battery composed of lithium, organic solvents, and other combustible materials. For this reason, improper handling of the battery could lead to distortion, leakage, overheating, explosion or fire, causing personal injury. Please observe the following instructions to prevent accidents. Never swallow charge, heat, expose to open flames, moisture or liquid. Never attempt to disassemble, reverse the polarity or short circuit. Keep away from children and pets.

When disposing of used batteries please remove the battery in advance. If not possible then dispose of the entire product a waste bin for electronics as per the WEEE directive. Battery disposal may be regulated by national or local regulations, as such please follow applicable guidelines.

Safety usage guidelines

The Flic is not a toy. It contains small parts and accessories that present a choking hazard. As such it is not suitable for children or pets.

General

- Do not attempt to service the product.
- Do not use the product in temperatures below -10°C or above +40 °C.
- Clean with a damp cloth only. Do not submerge and do not use chemical or abrasive cleaning products.

Flic specific

- Battery life will be shortened with heavy usage and/or use in extreme conditions.
- Flic is not waterproof. Do not submerge or attempt to use underwater as this will result in irreversible damage that is outside the scope of the Shortcut Labs AB warranty.

Warranty

Shortcut Labs AB warrants that your Flic hardware product ("the product") will be free from defects in materials and workmanship for a period of 24 months from the date of delivery to the original retail purchaser ("the warranty period").

If a defect in the product arises within the warranty period, Shortcut Labs will, at its sole option and subject to applicable laws:

- (1) repair or replace it with a new or refurbished product or component; or
- (2) refund the original purchase price upon return of the defective product.

This warranty does not apply to products you purchase from unauthorized resellers, or where the instructions for use and activation of the product are not complied with or where the product is damaged as a result of abuse, accident, modification, moisture or other causes beyond our reasonable control.

Note: Battery usage is regarded as normal wear and tear and is therefore not covered by the 24 month warranty. **For detailed warranty information visit:** https://flic.io/documents/warranty-policy

Notice

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Caution

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency (RF) Exposure Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Canada, Industry Canada (IC) Notices

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- 1. this device may not cause interference; and
- 2. this device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner that the potential for human contact during normal operation is minimized.

 
This device has also been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions (antennas are greater than 20cm from a person's body).



Join us! https://community.flic.io/

Share your ideas with other Flic users and keep up to date with the latest news and happenings from the Flic team.

Documents / Resources



Manuals+, home privacy