



Home » FlightScope » FlightScope i4 Range Finder User Manual 📆

Contents [hide]


- 1 FlightScope i4 Range Finder
- 2 In the Box
- 3 The i4 Rangefinder
- 4 Viewfinder indicators
- 5 Operating instructions
- 6 Get the FS Golf App
- 7 Set up FS Mode
- 8 Operating FS Mode
- 9 Charging
- 10 Care
- 11 Avoid
- 12 Technical specifications
- 13 Support
- 14 Documents / Resources
 - 14.1 References



FlightScope i4 Range Finder




In the Box

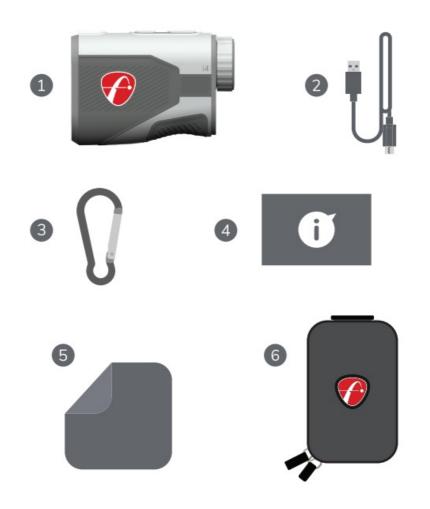

1. i4 Rangefinder

- 2. USB-A to USB-C charging cable
- 3. Carabiner
- 4. Quickstart Guide
- 5. Microfiber cloth
- 6. Carry case (not to scale)

The i4 Rangefinder

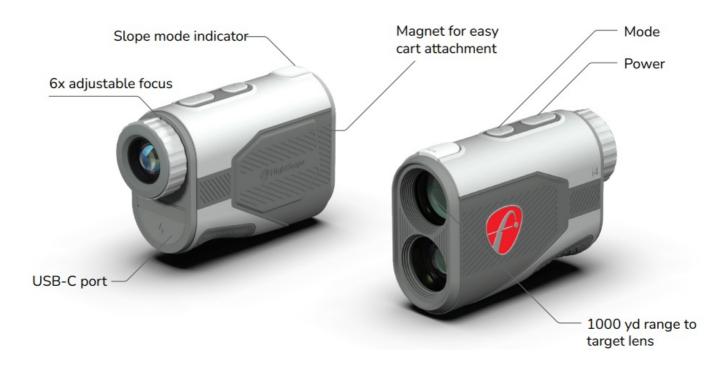


Viewfinder indicators

Viewfinder indicators

Personalized club recommendations based on

personal launch data, current weather and environmental conditions

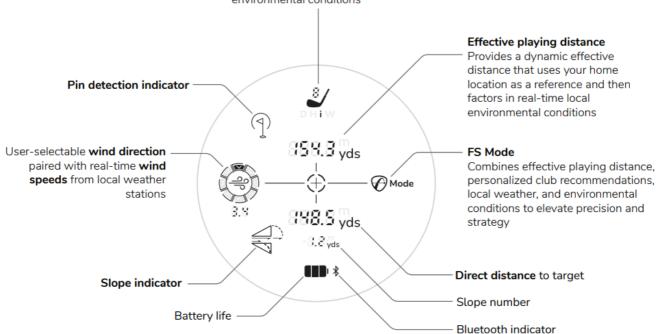


Operating instructions




1. Press the power button briefly to turn on the Rangefinder. Look through the viewfinder to see the display. It will turn off automatically after 10 seconds.



 2. Aim at a target and briefly press the power button again to measure the direct distance. You will feel a vibration indicating that the measurement has been taken.



3. To shoot the distance to an object such as a flag stick, press and hold the power button while moving the viewfinder around the object until the target detection logo appears. Release the power button, and the rangefinder will display the distance.

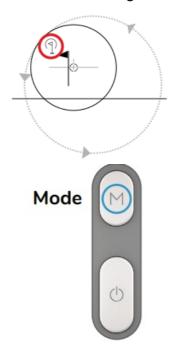

4. Briefly press the mode button to toggle the SLOPE MODE on and off.



5. Press and hold the mode button to change the units of measurement between METERS and YARDS.



6. Press and hold the power button and short-press the M button to toggle Bluetooth on / off. ?



Get the FS Golf App

Download FS Golf from the App Store or Google Play



Your username and password will be the same on myflightscope.com



myflightscope.com

Set up FS Mode

- Use your mobile device or tablet to setup your i4 rangefinder for use with FS Mode.
 Make sure your smart device's bluetooth connection is turned on.
- 2. Allow location access while using the FS Golf App for accurate weather and wind conditions and ensure precise location is turned ON.



- 3. On your smart device, open the FS golf app. Select devices, then select i4 Rangefinder.
- 4. Turn your i4 Rangefinder on and activate Bluetooth. Now your i4 Rangefinder will automatically pair with your FS golf profile.
- 5. Look into the viewfinder and see if FS mode is active or repeat the pairing process.

Operating FS Mode

FS mode requires your smart device to be nearby (within 30 feet or 10 meters), running the FS Golf application and having Bluetooth activated on your i4 Rangefinder. When the Rangefinder is switched on, it will return to the same mode and settings as were used previously. FS mode can be disabled by simply deactivating Bluetooth.



Toggle Wind direction

To adjust the wind direction, start by taking a measurement in FS Mode. Then, press the **mode button** briefly to change the wind direction. The wind direction will appear at the 12 o'clock position (head wind) and will rotate clockwwsie with each press of the **mode button**.



Charging




40inch


USB-A

USB-C


Care

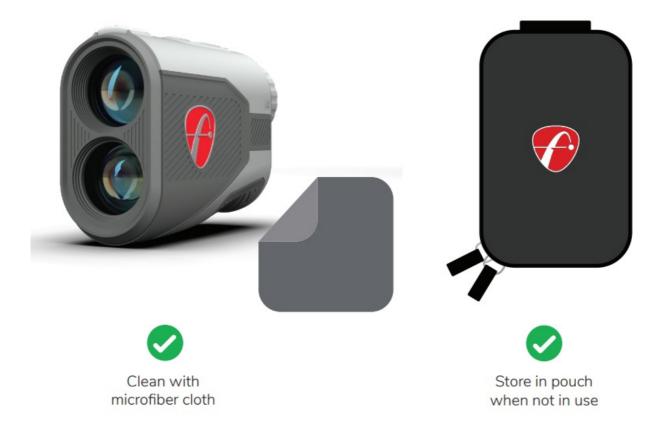

Avoid

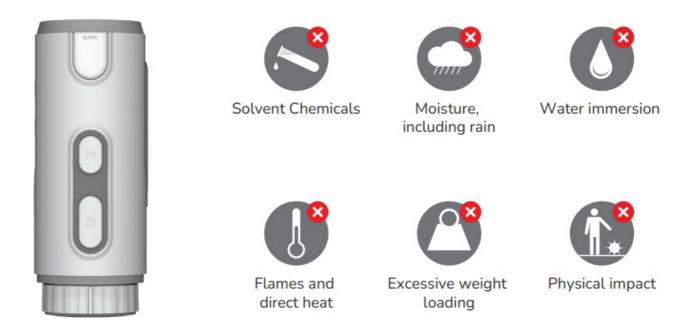

Technical specifications

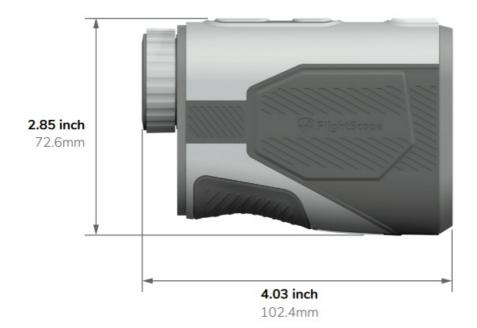



Support

If you need assistance, please email our support at

customercare@flightscope.com

E19-UF184-ISS2

@flightscopegolf

www.flightscope.com

Documents / Resources



FlightScope i4 Range Finder [pdf] User Manual

i4 Range Finder, i4, Range Finder, Finder

References

- User Manual
 - Finder, FlightScope, i4, i4 Range Finder, Range
- FlightScope Finder

Leave a comment

Your email address will not be published. Required fields are marked*	
Comment *	
Name	
Email	
Website	
☐ Save my name, email, and website in this browser for the next time I comment.	
Post Comment	
Search:	
e.g. whirlpool wrf535swhz	earch
Manuals+ Upload Deep Search Privacy Policy @manuals.plus YouTube	

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.