

Flip Side 25254 Electronic Handheld Game INSTRUCTIONS Manual

Home » Flip Side » Flip Side 25254 Electronic Handheld Game INSTRUCTIONS Manual

Contents

- 1 Flip Side 25254 Electronic Handheld Game
- **2 INSTRUCTIONS**
- **3 GAMES**
- **4 BATTERIES**
- **5 INSTRUCTION MANUAL FINAL ART**

CHECKLIST

- **6 FCC Statement**
- 7 Contents
- 8 FAQs
- 9 Video-Flip Side 25254 Electronic Handheld

Game

- 10 References
- 11 Related Posts




Flip Side 25254 Electronic Handheld Game



INSTRUCTIONS

ATTENTION:

Upon removing the FLIPSLIDE unit from packaging, remove the tab on the rear side of the product to activate full game modes. Refer to the BATTERIES section.

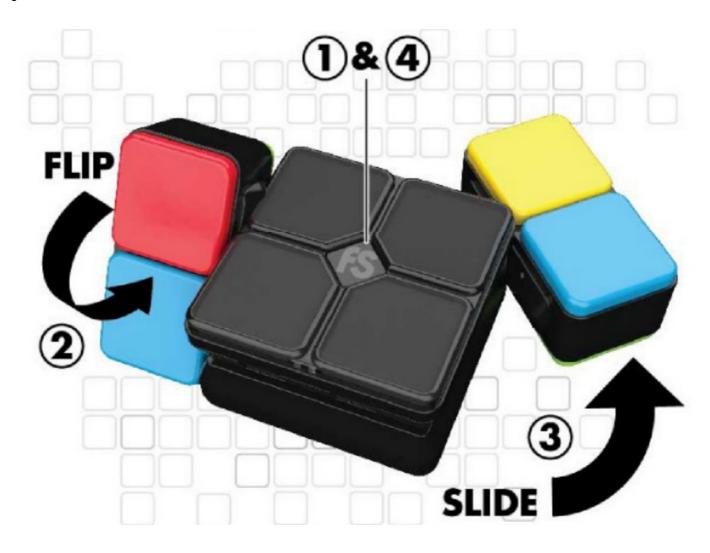


1. POWER BUTTON

Press this once quickly to power up the FLIPSLIDE unit. Press and hold for 3 seconds to power OFF the unit. **NOTE:** The unit will automatically power Off if left alone for 20 seconds at any time.

- 2. FLIP either side block to scroll through the different game modes.
- 3. SLIDE either side block around a corner to select a game mode.
- 4. To RESET all high scores, ensure unit is off then hold the Power Button down for 10 seconds until you hear the word 'zero'. TO ADJUST THE VOLUME, FLIP either side block until the 'VOLUME' mode appears (white colour light). SLIDE either block around a corner to select, then FLIP a side block to scroll through the four volume options Silent > Quiet > Medium > Loud. To select the required volume, SLIDE a block around the corner again. The unit will then return to Mode Selection.

GAMES

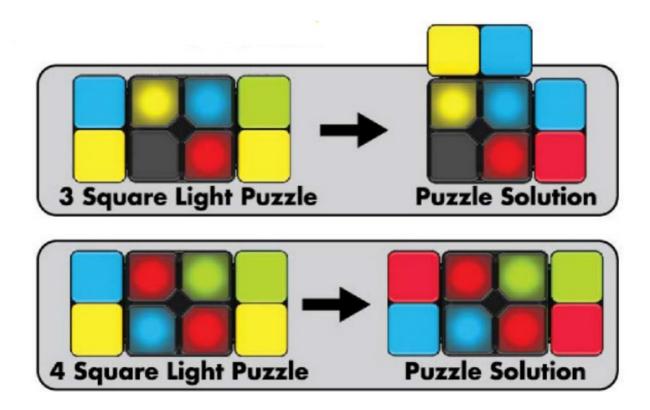

SPEED MODE

Complete 10 moves as fast as you can! To complete a 'move' you must correctly match the colors on the side blocks to the lit-up colors on the FLIPSIDE unit. Every time a move is completed the lights will change, requiring you to flip or slide the side blocks again to solve the next light puzzle. The score is displayed in seconds.

LEVEL MODE

Progress through as many levels as you can! Each level has 5 moves, and as you progress through the 10 levels the time you get to complete a 'move' gets less and less. To complete a 'move' you must correctly match the colors on the side blocks to the lit-up colors on the FLIPSIDE unit. Every time a move is completed the lights will change, requiring you to flip or slide the side blocks again to solve the next light puzzle. Score is displayed in moves completed.

MEMORY MODE

Remember the flashing light sequences to progress through the 11 levels. Each level has 3 'moves' that must be completed.

Each move consists of a flashing light sequence that will get progressively longer and harder after each level. To complete a move you must correctly match the colors on the side blocks in the order that the flashing light sequence occurred. All four squares will flash green if you complete a move. For each light match you must correctly align the side block within 8 x FLIP or SLIDE movements or else the game will end! Score is displayed in moves completed.

MULTIPLAYER MODE

Challenge your friends to a game of Multiplayer FLIPSIDE, but don't be the last one holding the unit or you will lose! Play starts with the youngest first. The FLIPSLIDE unit will call out the amount of moves that must be completed on each player's turn. To complete a move you must correctly match the colors on the side blocks to the lit-up colors on the FLIPSLIDE unit.


Every time a move is completed the lights will change, requiring you to flip or slide the side blocks again to solve the next light puzzle. Only when all moves have been completed and the FLIPSLIDE unit says "PASS" may you pass to the next player.

Play continues until time runs out. If you are the last player holding the unit when time runs out you lose! After completing a game, SLIDE a block around a corner to play again, or FLIP a block to return to mode selection.

BATTERIES

Requires 2 x AA/LR6 Batteries.


Phillipsicross head screwdriver (not included) needed to replace batteries.

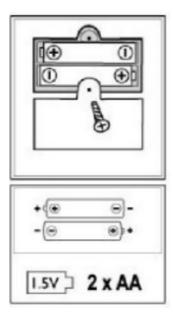

- Use new batteries to obtain best performance.
- Alkaline batteries are recommended.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- · Batteries should be replaced by an adult.

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from product.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the product before long term storage,
- Batteries should be recycled or disposed of as per state and local guidelines.
- Do not dispose of batteries in fire.
- x2 TEMPORARY BATTERIES INCLUDED FOR TRY-ME FEATURE.

REPLACEMENT BATTERIES NOT INCLUDED

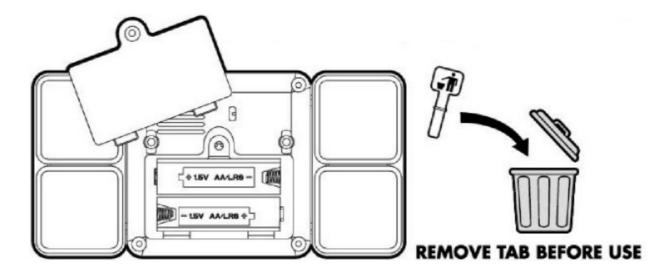

- Works best with fresh batteries. Replace with 2 x AA/LR6 batteries.
- Phillips/cross-head screwdriver (not included) needed to replace batteries.

INSTRUCTION MANUAL FINAL ART CHECKLIST

• Date: 09/04/2019

• Item Code: 25250MEI


• SKU: 25254_FLIPSLIDE

• Product Manager: Nathan

• Designer: Sandra/Brett

• Finished Artist: Brett

Colour Information

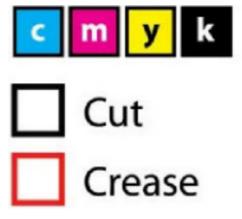

FA File Attach Documents

- Final Stage Approval Form
- · Approval Checklist
- Written Spec "Save As" file name with item code
- · Unlock and Unhide all
- · Delete unused artwork and layers
- Bleed

FAOL File

- · Unlock and Unhide all
- · Fonts Outlined
- Ensure correct Dieline Setup (Esko specifications)
- Trim marks and fold lines (Where applicable)
- · Document raster effects to 300dpi
- · Unused swatches deleted
- · Expand effects on Links
- Embed all Links at 300dpi, CMYK
- · Ensure Drop Shadows & Effects are correct facing
- Ensure the MEI logo is on the artwork
- · List Font information
- Expand Appearances
- · Create JPEG

Font Information

To ensure Moose is compliant with our legal obligations when supplying fonts, no fonts are supplied. Locations where fonts can be sourced are listed below:

- Myriad Roman (Type 1) Included with Adobe Illustrator
- Myriad Bold (Type 1) Included with Adobe Illustrator The following font can be found on www.fonts.com

Futura Condensed Bold

- Arial Black
- Arial Bold
- · Arial Narrow Bold
- Myriad Bold
- Helvetica Condensed Medium
- Helvetica Bold Condensed
- Futura Book
- · Futura Medium
- · Futura Extra Bold

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interterence received, including interterence that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in Go guider clingy land, if hit insula ng user lins, accordance miracle radio instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help.

Contents

- 1 x Flipslide Game
- 1 x Instruction Manual

WARNING: DO NOT PLAY SOUNDS CLOSE TO YOUR EAR! PRODUCT OPERA- TION MAY BE IMPAIRED BY EMC / STATIC DISCHARGE. SWITCH THE PRODUCT OFF THEN ON AGAIN TO RESET THE DEVICE. IF NORMAL OPERATION IS NOT RESTORED PLEASE MOVE TO A DIFFERENT LOCATION.

CAUTION: ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. PLEASE RETAIN PACKAGING DETAILS FOR FUTURE REFERENCE SINCE THEY CONTAIN IMPORTANT INFORMATION. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT. PLEASE REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD.

PATENT PENDING

www.flipslidegame.com

0-3

WARNING: CHOKING HAZZARD - Small parts.

Not for children under 3 years. 25254-00/03/11-R1 2mooser www.moeseteys.com ©2016 Moose. MADE IN CHINA

FAQs

What is the maximum number of players supported by the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game supports up to 4 players in Multiplayer Mode, making it a great choice for family and friends.

What is the recommended age for playing the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game is recommended for players aged 8 and up, but it's fun for all ages due to its simple gameplay and challenging modes.

What types of game modes are available in the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game offers four exciting game modes: Speed Mode, Multiplayer Mode, Level Mode, and Memory Mode, providing a variety of ways to play.

What is the size of the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game measures 3.23 inches x 8.66 inches x 10.28 inches, making it compact and easy to carry.

How many different game pieces or components come with the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game includes 4 components: the main console, instructions, and the included batteries.

What is the difficulty level of the Flip Side 25254 Electronic Handheld Game?

The Flip Side 25254 Electronic Handheld Game is suitable for all skill levels, from beginners to advanced players, thanks to its adjustable modes like Level Mode.


How is the Flip Side 25254 Electronic Handheld Game powered?

The Flip Side 25254 Electronic Handheld Game is powered by AA batteries, which are included with the game for immediate use.

What colors is the Flip Side 25254 Electronic Handheld Game available in?

The Flip Side 25254 Electronic Handheld Game is available in black, which gives it a sleek and modern look.

Video-Flip Side 25254 Electronic Handheld Game

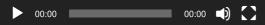

Dougload this Malus Applip Side 25254 Electronic Handheld Game INSTRUCTIONS Manual content/uploads/2024/12/Flip-Side-25254-Electronic-Handheld-Game.mp4

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.