



floorMuffler LVT Floating Floor Instruction Manual

[Home](#) » [floorMuffler](#) » floorMuffler LVT Floating Floor Instruction Manual 

Contents

1 floorMuffler LVT Floating Floor

2 HOW TO USE

3 Documents / Resources

3.1 References

4 Related Posts

 
floorMuffler®LVT

floorMuffler LVT Floating Floor




HOW TO USE


1. Make sure the subfloor is structurally sound, level and is free of dust and debris.

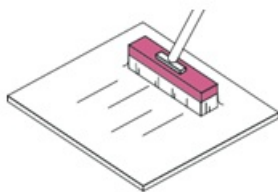

 
2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed 3 lbs. per 1000 square feet per 24 hours as measured by the Anhydrous Calcium Chloride Test.
3. Start in a corner and begin installing the floorMuffler® LVT parallel to the wall in the opposite direction that you plan to install the flooring planks.

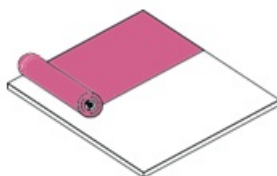

 
4. When installing the floorMuffler® LVT, leave at least 2" going up the wall.
5. Roll out the next roll of floorMuffler® LVT in the same manner, making sure that the foam seams are butted together.

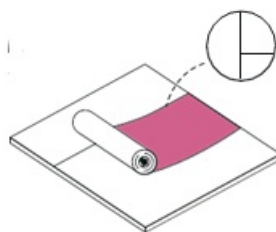

 6. If installing floorMuffler® LVT on concrete or below grade subfloors, be sure to tape the seams together with 2" tape that meets the moisture vapor transmission rate for this type of installation.

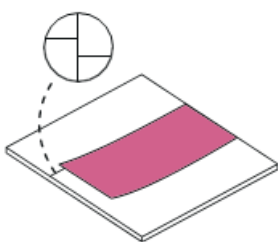


 7. Install the flooring per manufacturer's instructions.

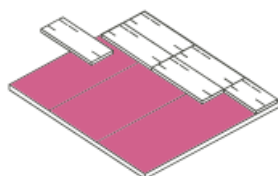

For glue down installations, always follow the adhesive manufacturer's instructions. Make sure to use a floorMuffler approved adhesive. The list of approved adhesives can be found on each product page on the floorMuffler website

 Documents / Resources

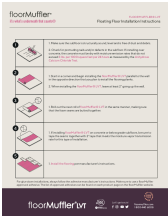	<p>floorMuffler LVT Floating Floor [pdf] Instruction Manual LVT Floating Floor, LVT, LVT Floor, Floating Floor, Floor</p>
---	---

References

- [LER.com](#)