

FLOW Wireless Optical Mouse



FLOW Wireless Optical Mouse User Manual

[Home](#) » [FLOW](#) » FLOW Wireless Optical Mouse User Manual 

Contents

- 1 FLOW Wireless Optical Mouse
- 2 INSTRUCTION MANUAL
- 3 SAFETY INSTRUCTIONS
- 4 INSERTING THE BATTERIES
- 5 INSTALLING THE DEVICE
- 6 CONTACT
- 7 Documents / Resources
 - 7.1 References

FLOW

FLOW Wireless Optical Mouse






INSTRUCTION MANUAL

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions, the receipt, and, if possible, the box with the internal packing.
- If you give this device to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions to avoid accidents and prevent damage to the machine:

-  **WARNING:** This sign warns you of dangers to your health and indicates possible injury risks.
-  **CAUTION:** This sign refers to possible hazards to the machine or other objects.
-  **NOTE:** This sign highlights tips and information.

SAFETY INSTRUCTIONS

1. Do not use the device with wet hands.
2. Do not pour water or any other liquid on the device.
3. Do not place/ use the device on or near flammable material and sources of heat.
4. Do not place/ use the device near places with very high or very low temperatures.
5. To ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene, etc.) out of their reach.

WARNING: Do not allow small children to play with the foil. The danger of suffocation!

6. Do not operate the device if it has any damage.
7. Do not disassemble the device or attempt to repair or modify the device by yourself. Contact an authorized technician when service is required.
8. If you do not intend to use the device for a long time, remove the battery before storage to avoid a battery fluid leakage.

BATTERY SAFETY INSTRUCTIONS

1. Batteries should be kept away from children.
2. Batteries must be correctly installed following the correct polarity.
3. Different types of batteries or new and used batteries should not be used together.
4. Never use batteries with electrolyte leaks or cracks.
5. **CAUTION:** Never swallow the battery. If the battery is swallowed, seek medical attention immediately.
6. Never short-circuit battery terminals or attempt to open batteries.
7. **WARNING:** Remove the batteries if the appliance is not used for a long time to avoid battery fluid leakage.
8. Check the cover so that it remains closed.
9. **CAUTION:** Do not attempt to charge expired or non-rechargeable batteries. Buy new rechargeable batteries.
10. Batteries should not be exposed to excessive heat.
11. **CAUTION:** Never dispose of batteries in a fire. Risk of explosion and fire!
12. Batteries must be replaced under applicable disposal regulations. Please bring used batteries to a dedicated recycling center where they will be treated in an environmentally friendly manner.

INSERTING THE BATTERIES

1. Open the battery compartment of the mouse.
2. Insert 1x AA battery into the battery compartment with the correct polarity.
3. Remove the USB receiver that is located beside the battery compartment
4. Close the battery compartment of the mouse.

WARNING

- Do not expose the battery to high temperatures or direct sunlight.
- Keep battery away from children. Risk of swallowing!
- If the device is not used for a prolonged period of time, please remove the battery in order to prevent leakage of battery acid.

MOUSE

1. Left button
2. Scroll wheel
3. Right button
4. Forward button
5. Back button

6. DPI +/- button



INSTALLING THE DEVICE

1. Connect the USB Nano receiver to the USB port of your computer. (The USB receiver is located under the battery cover, next to the battery compartment.)
2. The computer will automatically detect the mouse and install the appropriate driver.
3. When the installation is finished, you can start using your mouse.

CHANGE DPI

Press the DPI toggle key to choose between 3 different resolutions (800 / 1200 / 1600).

CLEANING

1. Always turn off the device before cleaning it.
2. Clean the device housing with a damp cloth.
3. Do not use anything abrasive that can scratch or damage the device.
4. Do not use a wire brush or other abrasive utensils for cleaning.

STORAGE

1. Keep the device away from high temperature, dust, and humidity.
2. Always store the device in a safe and clean place. For better protection, store them in their original packaging.

DISPOSAL OF APPLIANCE AND ACCESSORIES



- This symbol appearing on the product, its accessories, or accompanying manuals indicates – that the product and its electronic accessories should not be disposed of with other household trash.
- In order to avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

DISPOSAL OF BATTERIES

This marking on the battery, manual, or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.


DECLARATION OF CONFORMITY

Hereby, SUN S.A. declares that NOD FLOW radio equipment complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available on the following website: www.sun.gr

CONTACT

- Ic.:iviac; Ka>-oxe0p1, 570 09 0mcra>-oviK17, EM66a, THA. +30 23 1 0 700.777 Ionias Kalochori, 570 09 Thessaloniki, Greece, TEL. +30 23 1 0 700.777
- e-mail: info@sun.gr. www.nod.com.gr

Documents / Resources

	<p>FLOW FLOW Wireless Optical Mouse [pdf] User Manual</p> <p>FLOW Wireless Optical Mouse, FLOW, Wireless Optical Mouse, Optical Mouse, Mouse</p>
---	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.