



fluentalk T1 Portable Translator User Manual

[Home](#) » [fluentalk](#) » fluentalk T1 Portable Translator User Manual 



T1 Portable Translator User Manual

Contents

- [1 Package List](#)
- [2 Get to know your translator](#)
- [3 Basic Operation](#)
- [4 Translation Functions](#)
- [5 FAQ](#)
- [6 Product Specification](#)
- [7 Safety](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Package List



Translator



Type-C
Charging Cable



Slot Pin

 


Lanyard




User Manual

Get to know your translator

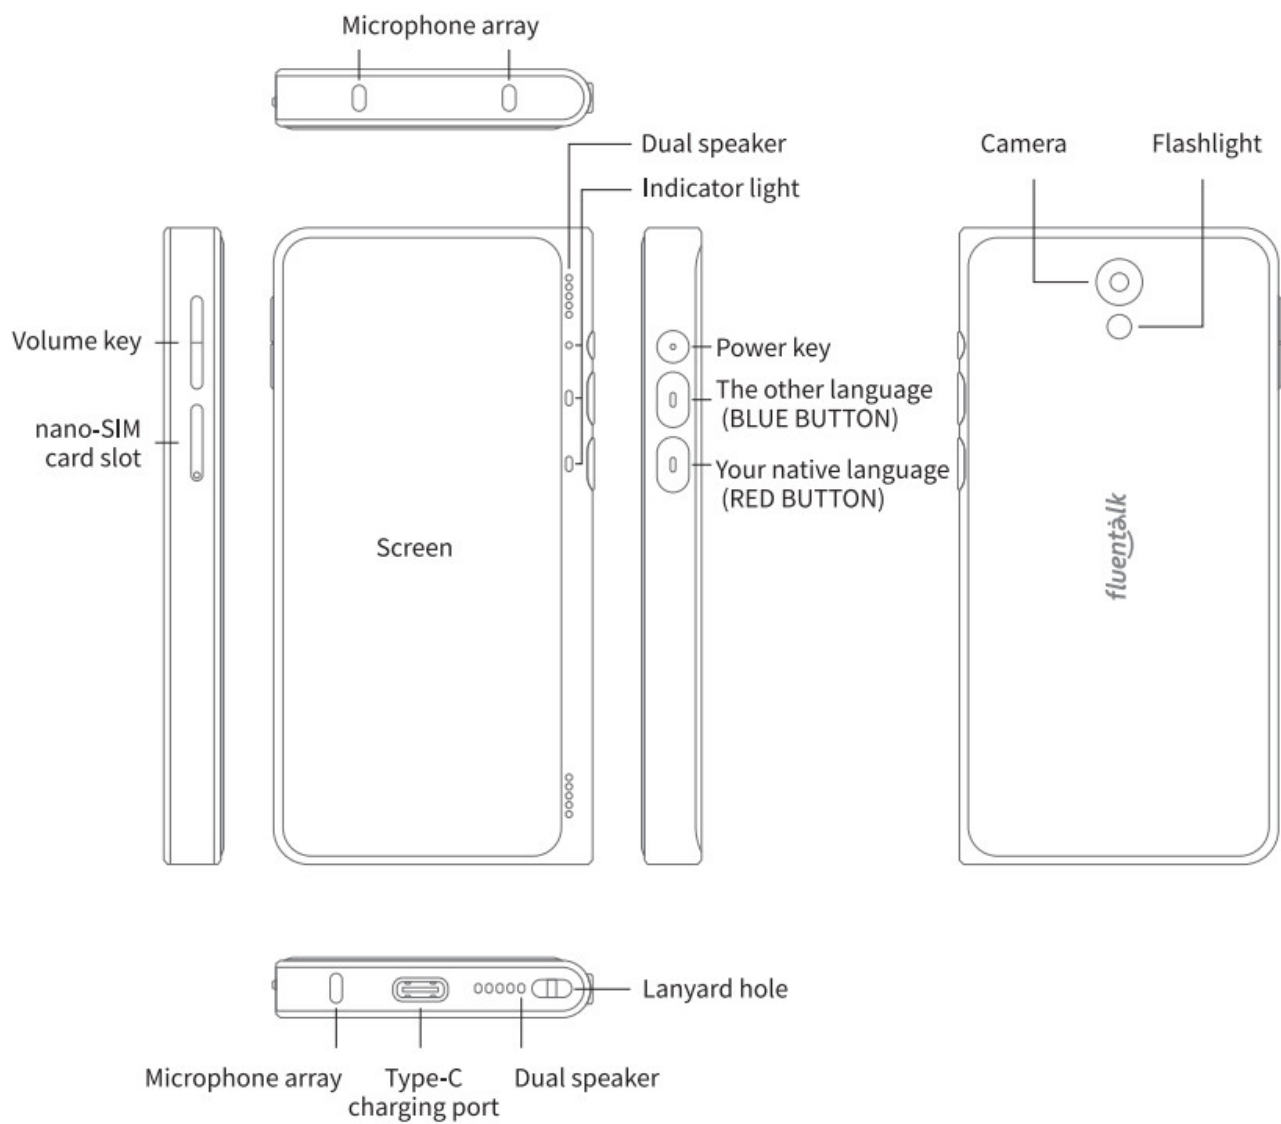


Basic Operation

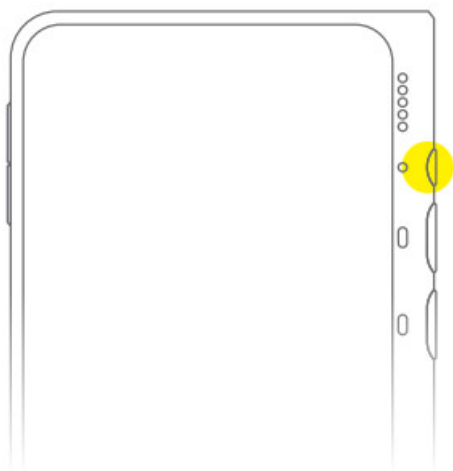 

Power on/Power off/Restart:

- Power on: press and hold the power button;

 - Power off/restart: press and hold the power button to select Power Off/Restart.

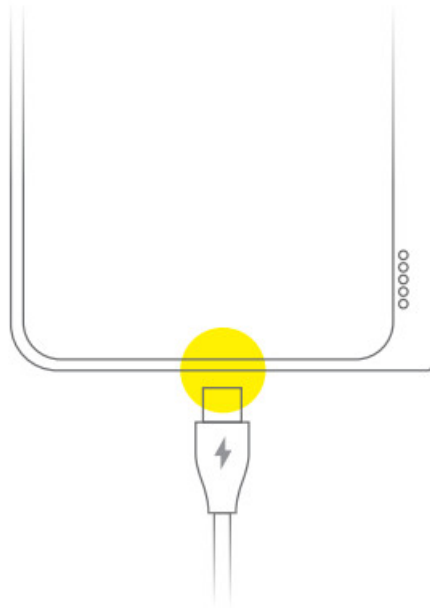


Charging

Connect the Type-C charging cable with a standard 5V1A charger to charge the Fluentalk T1.

Install nano-SIM card

 
1. Use the Slot Pin to eject the SIM card slot.
2. Put the nano-SIM into the card slot.

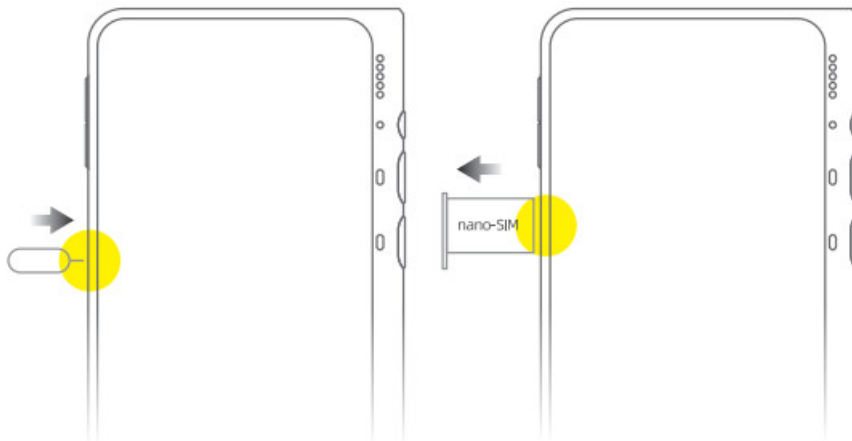

Use WLAN hotspot


The Fluentalk T1 will be able to share mobile data with other devices when nano

 - SIM card is activated. *Pease switch the network to your nano
- SIM card in the setting after you have installed it in the card slot. [Setting
- Network and Connection – MobileData]

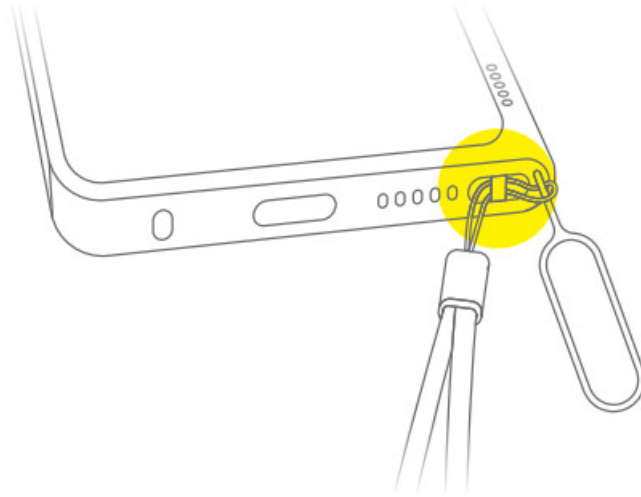

How to use lanyard

 Put one end of the lanyard through the hole, and pull the other end out from the other side with the Slot Pin.

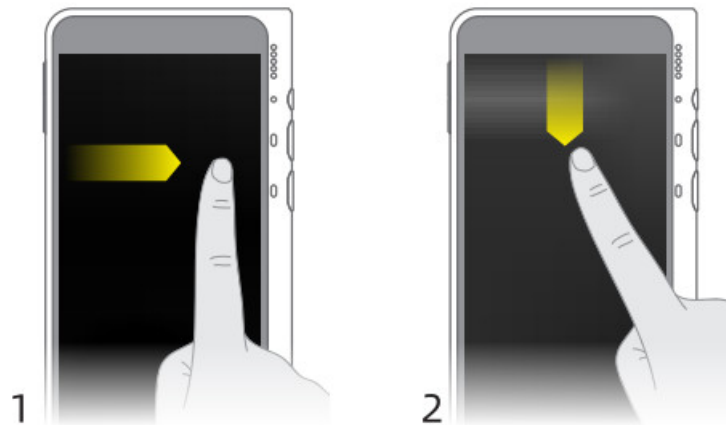

GESTURES


1. The previous screen: Swipe right on the edge of the left-hand side of the screen to return to the previous screen;
2. Quick settings bar: Swipe down to bring up the quick setting for WiFi, transfer data, Bluetooth, and flight mode. enable Bluetooth and flight mode.

Translation Functions

Please refer to “User Guide” for detailed information about functions. *The machine’ s interface is subject to modifications or updates without prior notice!

1. One-Click Translation

Hold the RED button to speak your native language, and the translation will play automatically when you release. Hold the BLUE button to pick up another language from the other person, and the translation will play automatically when you release. You can select your native language and the other language on the home screen or on the translation screen.

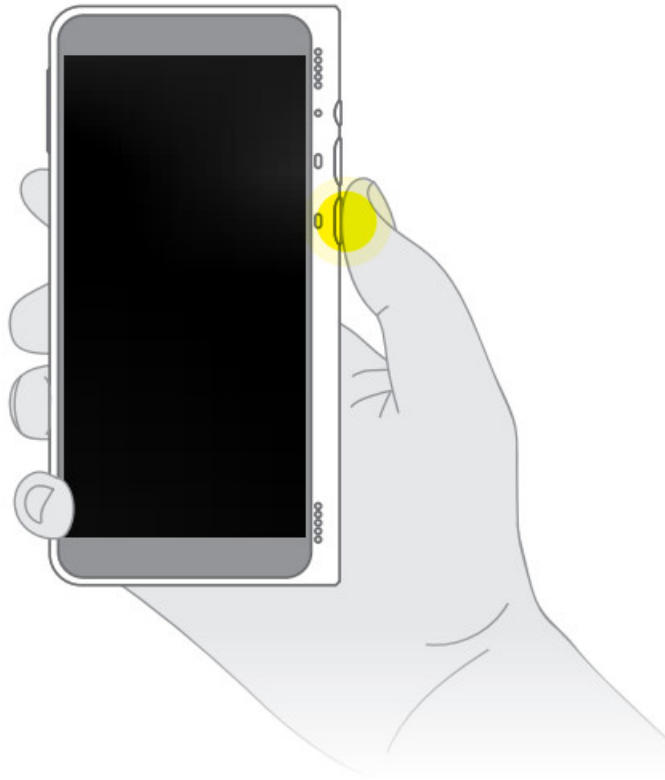

Rotate the screen

You can tap the switch button on the translation screen and rotate the screen to have a side-by-side conversation in different languages. You can tap the language button on the screen to pause the translation.


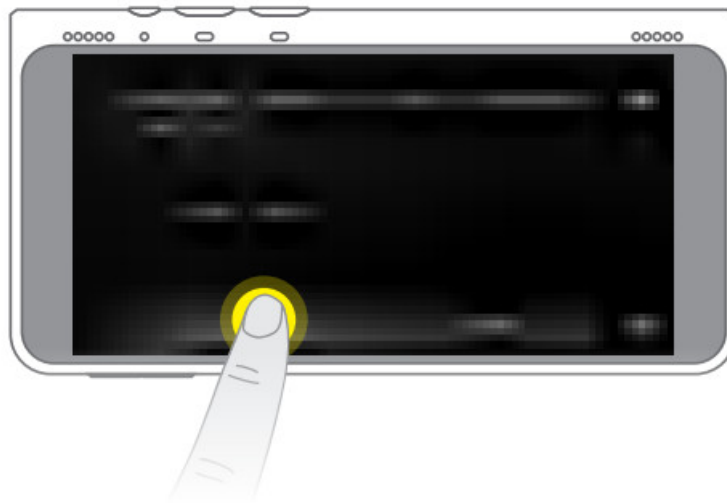 



Photo Translation

 - Select the language you want to translate before taking the photo.
- Make sure the text you want to translate is clearly visible and as centered as possible.
- Tap the camera button, and Fluentalk Ti will automatically scan and translate the text. You can turn on the flashlight if too dark.
- Tap [Save] on the upper right corner, and the translated photo will be saved in the album.

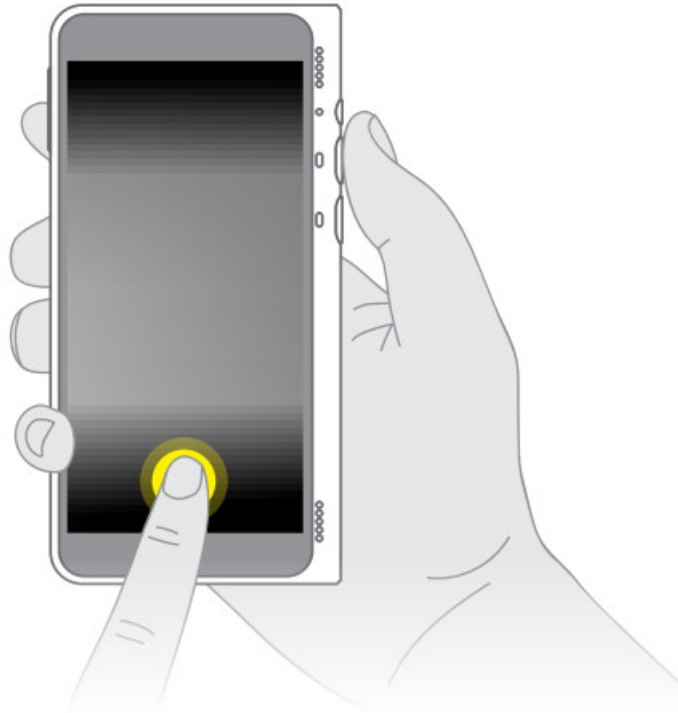

Ask for Directions

Mode Double-push the power button, and Fluentalk Ti will automatically play the pre-configured translation you set up in advance. You can configure the translation anytime on the [Custom] page.

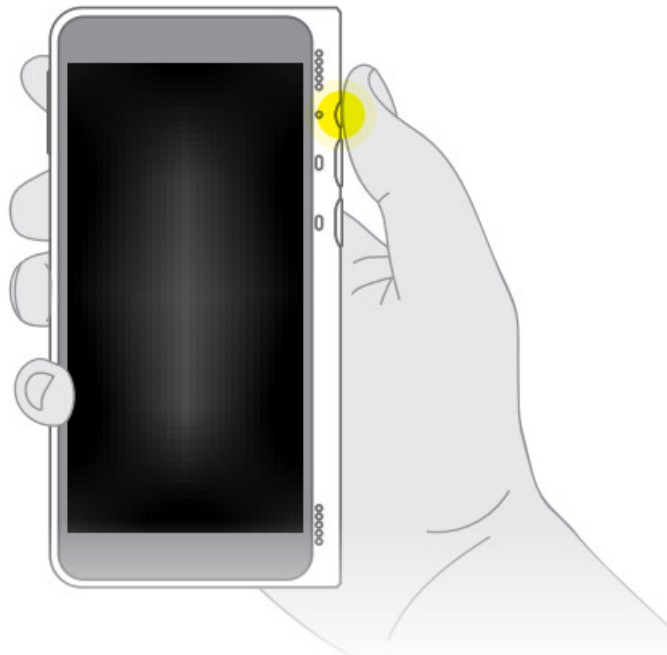


Listen Mode

Place the Translator in front of the speaker, click [Record] to start recording and translating in real time.



Chat Translation

Select your native language and the other language, and put the Fluentalk T1 in corresponding direction. Tap Start button to begin the translation.

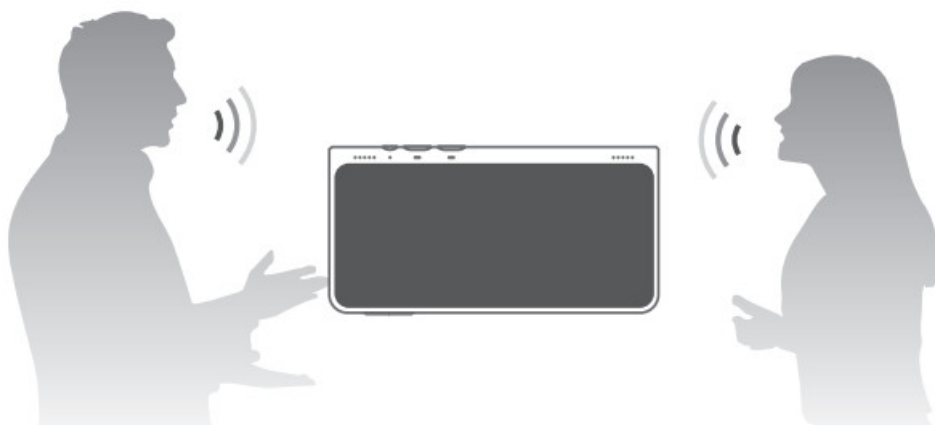

Offline Translation

You can enable or disable this function in the translation settings of any modes. Please be advised that offline language packs must be downloaded with internet connection before you can use Offline Translation. *Notes: Offline Translation Package could only be downloaded with Internet connection.



Translation setting

Tap the upper right corner of any translation functions to enter the translation setting. Speaking interval: configure the speaking interval depending on your preferred speaking speed and habits, and the translation engine will optimize the performance for you.

Voice playback: Fluentalk T1 automatically plays the translation by voice by default. To avoid disturbing others, you can disable "Voice playback".

FAQ

1. Inaccurate translation

If your surroundings is noisy, it may affect the recording quality. It is recommended that you can find a place with less noise and try again.

If you speak too far from Fluentalk T1, it may lead to incomplete recording of your sentences. It is recommended that you can keep Fluentalk T1 close to the mouth.

2. Fluentalk T1 not responsive

The storage may be full. You may delete unnecessary files in [Storage Space] or reboot Fluentalk T1.

3. Freeze up or breakdown

Improper use of Fluentalk T1 may cause it to freeze. In this case, you can hold the power button for 20 seconds to reboot Fluentalk T1.

4. No voice playback

You may have disabled the voice playback in the setting or the volume is too low.

5. Battery runs out too fast

If your Internet connection is unstable, Fluentalk T1 may have to search the Internet frequently, causing the battery to run out fast. In this case, you may switch to a stable WiFi connection.

6. No mobile data after nano-SIM card is inserted

Check if the nano-SIM card has been inserted properly;

After checking it's inserted properly, reboot Fluentalk T1;

Wait one to two minutes, and check if roaming and mobile data are enabled.

Product Specification

Product Name: Portable Translator

Product Model: T1

Size: 116.8*58.6*11.2 mm Weight: 115 g Processor: Quad-core ARM, 14nm, up to 2.0GHz Storage: 3G (RAM), 32G (ROM)

Operating system: Android 10

Screen size: 4 inch On-cell Resolution: 540*1080

Camera: 8 megapixel

Microphone: Multiarray microphone

Speaker: Dual speakers Charging: Type-C 5V 1A Battery capacity: 1500 mAh

Communication mode: WI FI/Nano-SIM/ e-SIM (embedded) Network: 2G/3G/4G LTE

Safety

Please read the following safety and warning information before using TI.

1. Do not use unofficially recommended charging methods to avoid fire, explosion, or other dangers.
2. Do not deliberately drop, burn, penetrate, squeeze, or immerse in liquid to avoid product damages.
3. Do not expose to high temperatures or around heating equipment such as microwaves or ovens.
4. Use the device within the range of 0°C – 35°C and store within the range of -20°C – 45°C. If the temperature is too high or too low, it will cause the device to malfunction.
5. Timekettle is not responsible for quality issues, product failures, and safety accidents caused by the use of unofficially approved accessories.

Corporate Information

Manufacturer: this product is authorized for manufacturing by Shenzhen Time kettle Technologies Co., Ltd.

Address: Room 612, Building 4, Minqi Science Park, Xili Road, Shenzhen, Guangdong Province, China

All rights reserved by Shenzhen Timekettle Technologies Co., Ltd.

Please read the following safety and warning information before using TI.

1. Do not use unofficially recommended charging methods to avoid fire, explosion, or other dangers.
2. Do not deliberately drop, burn, penetrate, squeeze, or immerse in liquid to avoid product damages.
3. Do not expose to high temperatures or around heating equipment such as microwaves or ovens.
4. Use the device within the range of 0°C – 35°C and store within the range of -20°C – 45°C. If the temperature is too high or too low, it will cause the device to malfunction.
5. Time kettle is not responsible for quality issues, product failures, and safety accidents caused by the use of unofficially approved accessories.

Corporate Information

Manufacturer: this product is authorized for manufacturing by Shenzhen Time kettle Technologies Co., Ltd.

Address: Room 612, Building 4, Minqi Science Park, Xili Road, Shenzhen, Guangdong Province, China

All rights reserved by Shenzhen Time kettle Technologies Co., Ltd.

Warranty regulations

1. If the product and accessories have any quality issues within 1 year (unless otherwise states by local laws & regulations) and 6 months respectively from the date of purchase, you may be qualified for free repair service

with proof of purchase and warranty card.

2. What is NOT covered by the warranty:

1. Product is worn due to regular usage.
2. Failure to use in accordance with the instructions.

Damage caused by human or irresistible factors.

3. Repair costs will incur for damages caused by man-made faults, beyond the warranty period, and irresistible factors.


Contact US

TEL: +1(833) 491-1328

Support: Official Website: www.timekettle.co

Customer Service: support@timekettle.co

Documents / Resources

 <small>Copyright © 2019 Time Kettle Inc. All rights reserved.</small>	fluentalk T1 Portable Translator [pdf] User Manual T1 Portable Translator, T1, Portable Translator
--	---