



FLYCAM FLCM-FLN-PA-01 Flowline with Stabilizing Arm Instruction Manual

[Home](#) » [FLYCAM](#) » FLYCAM FLCM-FLN-PA-01 Flowline with Stabilizing Arm Instruction Manual 

FLYCAM FLCM-FLN-PA-01 Flowline with Stabilizing Arm



Contents

- [1 What's In The Box](#)
- [2 Flowline Vest Setup](#)
- [3 Placid Arm + Fly am Vest Setup](#)
- [4 YOUR FLYCAM FLOWLINE WITH STABILIZING ARM](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.


Flowline Vest Setup

- in support bar with section of support jacket by push-fit technique. Similarly, join front section with support bar as shown.
-

- Wear support jacket and tighten the buckles provided at waist and chest and adjust as per your convenience.
-

NOTE: The four knobs provided on back of support jacket allows height adjustment of support bar.

- Use spring at back of support jacket to adjust tension of rope as required.
 - Attach camera to hook and tighten with provided knob to ensure slip-free connection.
 - Loosen knob at support bar to adjust position of camera according to eye-level, if required.
-

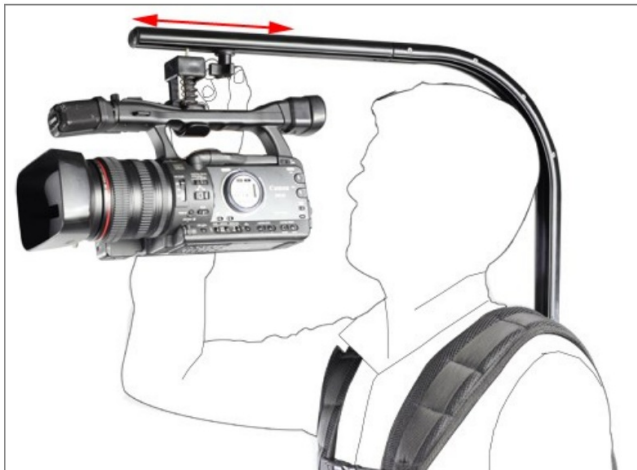

Placid Arm + Fly am Vest Setup

- Rotate the knob to release the spring tension.
 - Loosen the knob of Hook and remove the spring of Hook.
 - Now loosen the knot of rope in order to remove the rope from hook. Remove extension arm of Flowline. Re-attach arm upside down and tighten the knob properly
 - Loosen Allen bolt of Placid Arm with help of Allen Key.
 - Now pass the rope through Placid adapter as shown in the image. Mount Placid on Flowline arm and tighten the Allen bolt with help of Allen key.
 - Align the rope with the pulley of Placid Arm.
-

- Then insert the rope into Hook and tie the knot of Rope properly.



- Attach the spring to Hook and tighten the knob to secure it properly.
-
- Secure the Placid on Flowline Arm with provided tie to ensure slip-free connection.
-
- Now mount your camera setup on hook of Flowline and tighten the knob to secure it properly.
-

Install Fly am Flowline Placid and change the Spring, Follow this <https://bit.ly/3Ae0t7a>

YOUR FLYCAM FLOWLINE WITH STABILIZING ARM

ALL DRESSED UP AND READY TO GO!

(SHOWN WITH OPTIONAL ACCESSORIES)


Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.

FLYCAM

Documents / Resources

	FLYCAM FLCM-FLN-PA-01 Flowline with Stabilizing Arm [pdf] Instruction Manual FLCM-FLN-PA-01, FLCM-FLN-PA-01 Flowline with Stabilizing Arm, Flowline with Stabilizing Arm, Stabilizing Arm, Arm
---	---

References

- [User Manual](#)