

Flydigi APEX 4 Elite Gaming Controller User Manual

Home » FLYDIGI » Flydigi APEX 4 Elite Gaming Controller User Manual

Flydigi APEX 4 Elite Gaming Controller



Contents


- **1 Force Adjustable Joystick Instruction**
- **2 Force Feedback Trigger Instruction**
- **3 Open Flydigi Space Station For More Customize Setting**
- 4 Connect to an Android/iOS device
- **5 Specifications**
- **6 Appearance**
- 7 FAQ
- 8 Documents / Resources
 - 8.1 References

Force Adjustable Joystick Instruction


Scan QR code to read the user manual




1. Remove the joystick cap by pulling it upwards vertically and take off the 0-pad.

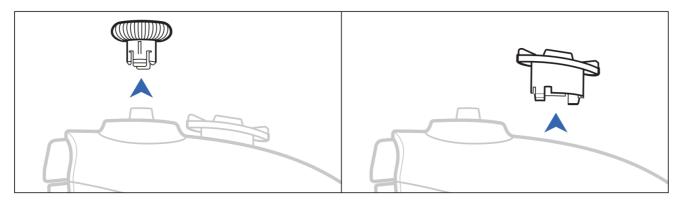

2. Remove the magnetic cover from the gap of the grip, and take out the force adjustment paddle from the right side of the controller.

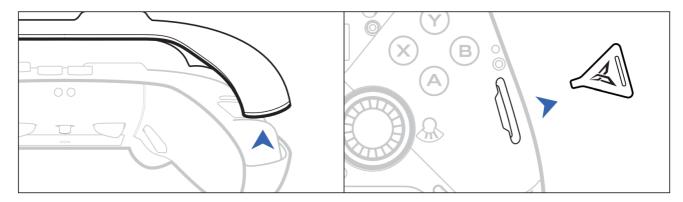

3. Adjust the joystick sensitivity by rotating the screw on the right side of the joystick using the adjustment paddle. You can use the tangent position between the edge of the screw and the scale as a reference to remember the current sensitivity of the joystick. Once the adjustment is complete, you can put the joystick cap back on to conveniently experience the sensitivity in real-time.

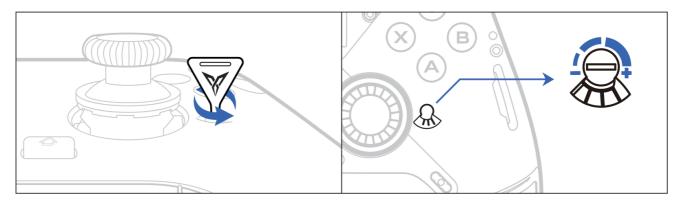

Force Feedback Trigger Instruction


According to the real-time changes in the game scene, the force feedback sensation of the triggers is automatically switched. Please access www.flydigi.com on your computer and download "Fly Digi Space Station" to enable adaptive mode.

Custom mode

Mode	Introduction
Regular	Force feedback function disabled, regular linear triggers
Race	Simulate the damping sensation when pressing the throttle
Sniper	Simul ate the sensation of pressing the trigger on a sniper rifle
Recoil	Simul ate the continuo us oscillation of the trigger when firing a machine gun in sustain ed automatic fire
vibration	Simult onerously vibrate with the grip to enhance immersion
trigger lock	Adjust the trigger travel

Open Flydigi Space Station For More Customize Setting

Visit our official website www.flydigi.com to download "Flydigi Space Station". You can customize buttons, macros, motion sensing, joystick and other functions.

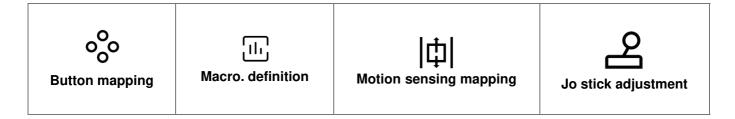

Connect Your Controller

Pull the reel switch of the controller to ON, then short press the to open the menu on the screen, where you can configure the controller mode and button settings.



Connect to a PC


Open the on-screen menu, select [Connect] – [PC], and connect the computer and the controller using a receiver or a cable. Home Capture



If the controller is not used for a period of time, it will automatically enter sleep mode. Press the to wake up the controller. You can modify the sleep timeout in the Flydigi Space Station.

Connect to a Switch

Adjust the controller to Switch mode, click on the controllers icon on the home page of your Nintendo Switch, and go to [Change Grip/Order]. The controller will automatically pair and connect.

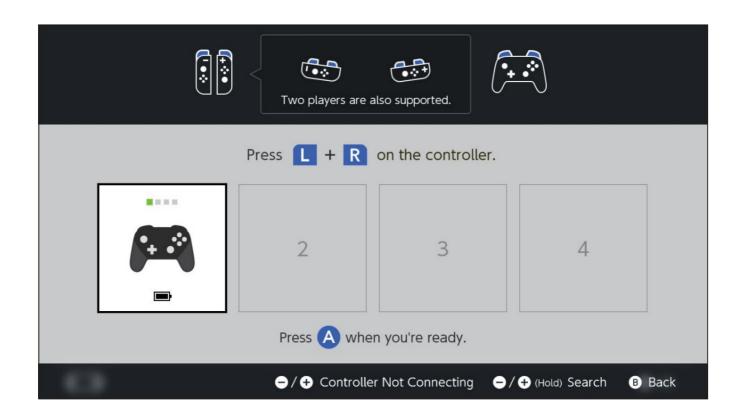

At Switch mode, the button-to-key mapping is as follows

Α	В	Х	Υ	SELECT	START	\triangle	0
В	Α	Υ	X-	_	+	Home	Screenshot

Switch

Connect to an Android/iOS device

- 1. Scan the QR code to download and install the Flydigi Game Hall app.
- 2. Enter Aydigi Game Hall Peripheral Management and dick on "Add Device". Follow the instructions provided in the game hall to connect the controller.



Specifications

Platform	Mode	Connection method	System Requirement	
PC	XInput/DInput	Dongle/Cable/ BT	Win 7 and above	
Switch	Switch	ВТ	Switch	
Android	Dinput/ Fla shplay	ВТ	Android 10 and above	
iOS	iOS	ВТ	iOS 14 and above	

XInput Mode: This mode is suitable for games that natively support controllers.

Dinput Mode: This mode is suitable for emulator games that natively support controllers. **Flashplay mode:** This mode is suitable for mobile games that do not support controllers.

It requires the use of the Flydigi Game Hall app as a companion.

Wireless RF: BT 5.0, BT 5.0 BLE

Operating Distance: Less than 10 meters

Battery Information: Rechargeable lithium-ion battery, battery capacity 1 S00mAh, charging time 3-4 hours,

charging voltage SV, charging current 1 000mA


Operating Current: Current less than 80mA during use (excluding motors and force feedback triggers), current

less than 0.1 mA in standby mode

Temperature Range: Use and store between -10°C and S0°C.

Appearance



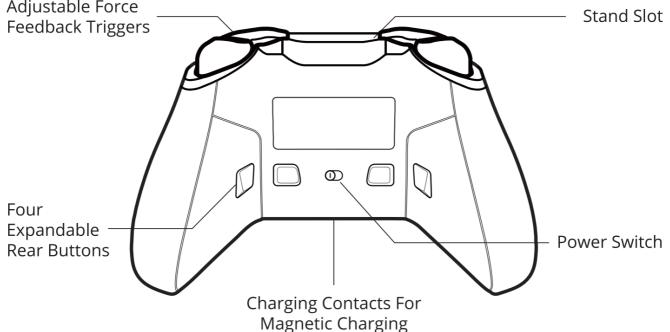

FAQ

Q: The controller BT cannot connect?

A: In the screen menu – Connect, click Re-pairing. The controller will display "Pairing" at this time. Open the device's BT settings and reconnect.

Q: Dongle connection signal is unstable. (delay/disconnect etc)

A: If there are many 2.4GHz signals in the vicinity, it may cause interference. It is recommended to use a USB extension cable between the dongle and the computer to enhance the signal.

Q: Joystick/trigger/motion sensor has anomalies?

A: Install the Flydigi Space Station on your computer, enter the test page, and follow the instructions to calibrate the controller.

The name and content of harmful substances in the product

Part Name	Toxic or Hazardous Substances and Elements					
rait Name	Pb	Hg	Cd	Сс	PBB	PBDE
PCB Borad	0	0	0	0	0	0
Shell	0	0	0	0	0	0
Packaging	0	0	0	0	0	0
Wire	0	0	0	0	0	0
Polymer battery	0	0	0	0	0	0
Silicone	0	0	0	0	0	0
Small structural parts Such as m etal and tape	0	0	0	0	0	0

This form has been prepared in accordance with the provisions of SJ/T 11364

O: Indicates that the content of the hazardous substance in all homogeneous materials of this part is within the limit specified in GB/T 26572-2011 Require the following

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the provisions of GB/T 26572-2011 The limited requirements



Documents / Resources



<u>Flydigi APEX 4 Elite Gaming Controller</u> [pdf] User Manual APEX 4 Elite Gaming Controller, APEX 4, Elite Gaming Controller, Controller

References

User Manual

Manuals+, Privacy Policy