

Flyrivergo B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand User Manual

[Home](#) » [Flyrivergo](#) » Flyrivergo B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand User Manual 

 


PHOTOGRAPHY
TURNTABLE


Contents

- [1 B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand](#)
- [2 13.7INCH/3SCM REMOTE CONTROL](#)
- [3 16.SINCH/24INCH REMOTE CONTROL](#)
- [4 PHOTOGRAPHY TURNTABLE INSTRUCTION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)


B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand

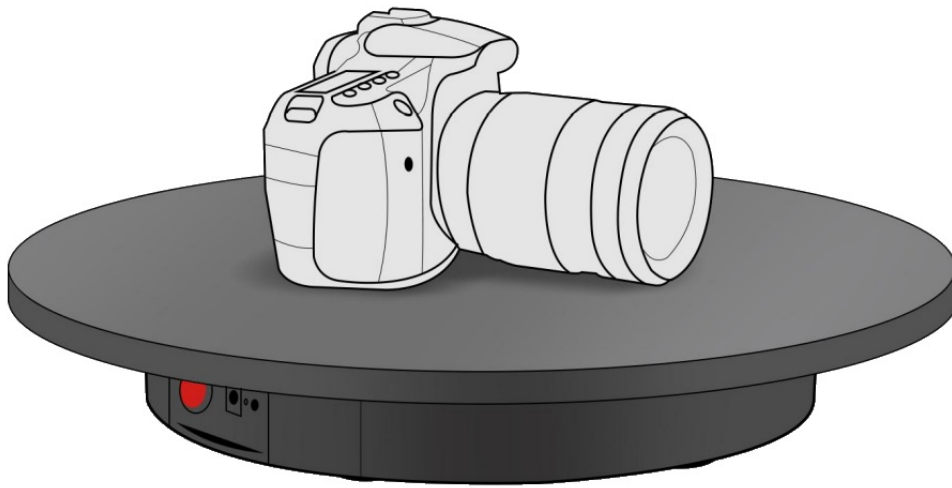

Machine User Manual

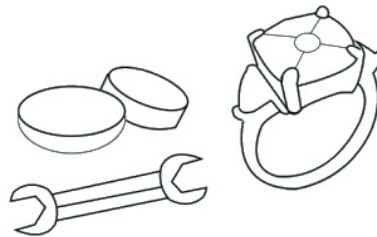 


 13.7INCH/3SCM REMOTE CONTROL

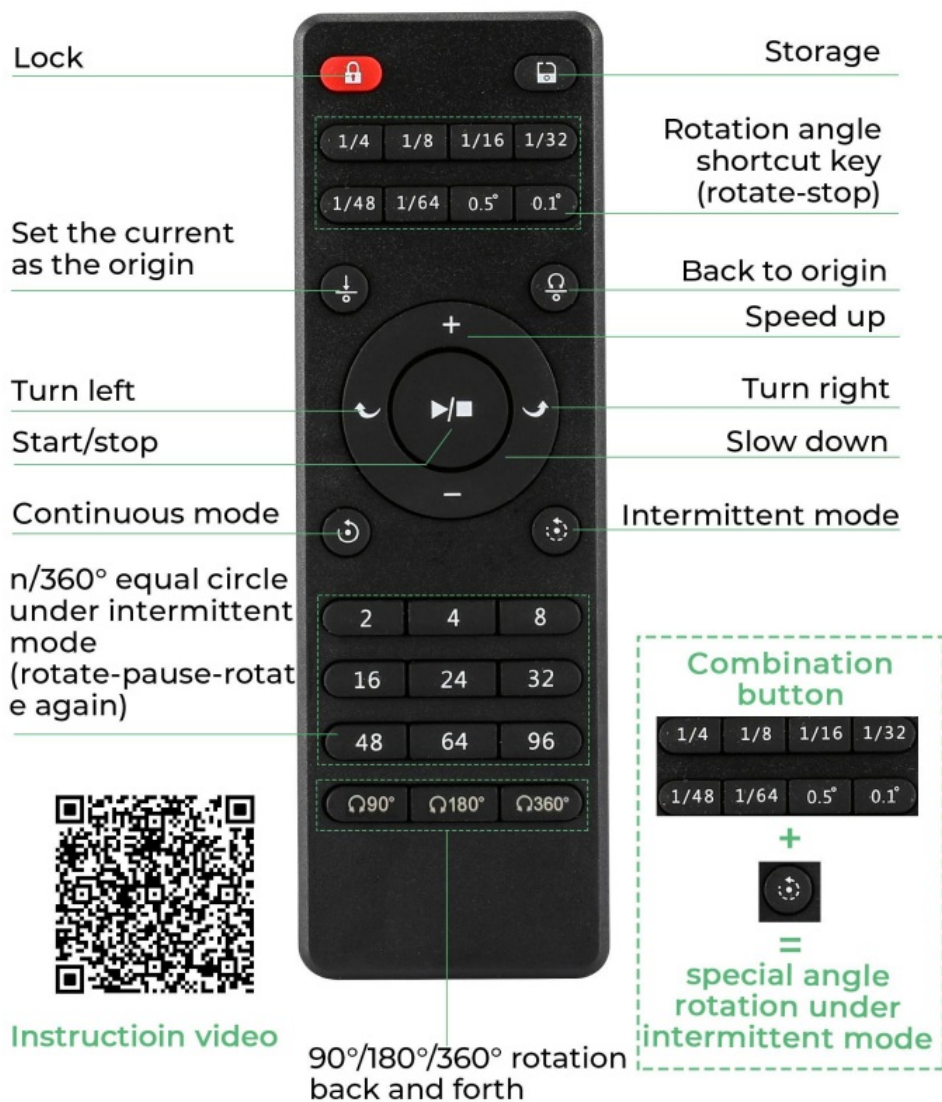

https://www.amazon.com/vdp/0487dbd3aa8c4d5ba7c30c4646eb6ca2?ref=dp_vse_ibvc0

 16.SINCH/24INCH REMOTE CONTROL

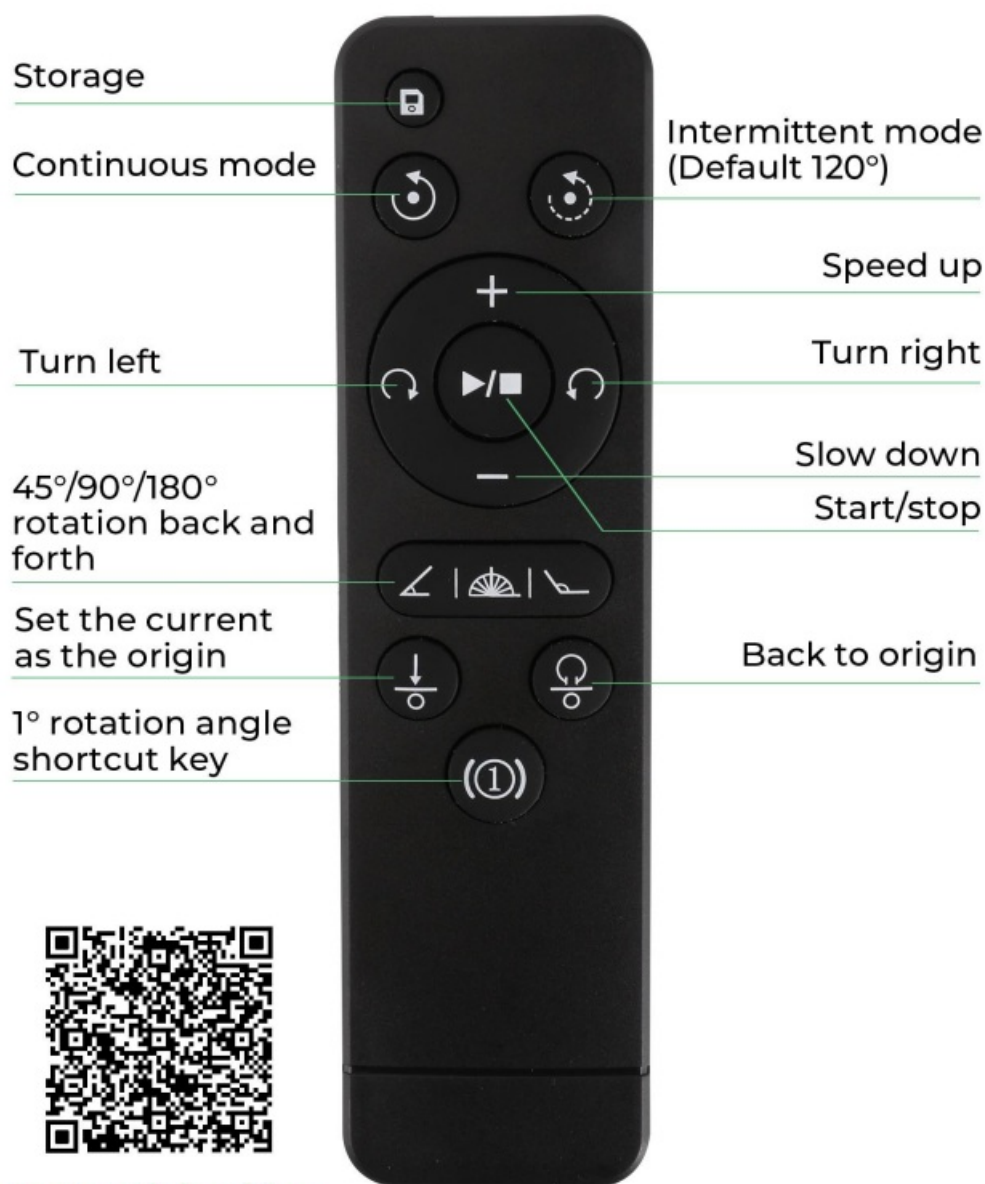

Instruction video

https://www.amazon.com/vdp/0a0e37ec21fb445c876bc4593ce73e51?ref=dp_vse_ibvc0

PHOTOGRAPHY TURNTABLE INSTRUCTION

(YOU NEED TO KNOW)

STEPS 1 Put the turntable at an appropriate place where you are going to display your product, you may need to consider the lights, settings, etc. Different light angles during rotation show the characteristics of the items more delicately.

STEP 2 Plug in, then turn on the switch to check if the turntable can rotate well. (The 13.7inch turntable will beep twice when you turn on.)

STEP 3 Put the product on the turntable, align the remote control with the switch (receiver position). you could try every key on the remote to get familiar with it. Every time a key is pressed, the turntable will beep. STEP 4 Choose an appropriate rotation mode, adjust the speed you want, then you can start making a video.

(SPECIAL NOTES IN THE USE)

1. The turntable belongs to the category of electrical appliances and is not waterproof or heat resistant. If not used for a long time, the remote control battery should be removed and the remote control and turntable should be **stored in a dry place**.

2. Only slight shaking will occur due to the operation of the motor.

Products that are lightweight and have a certain height will amplify this vibration. So, if your product is small and light, please choose a smaller size turntable!!

3. If the turntable **cannot rotate**: Please firstly check whether the turntable is powered. If the turntable still does not work, please contact with us.


4. If the **remote control does not work or beep** after you replace the batteries, please contact with us.

5. The size of the display object requires less than the diameter of the turntable.



Our email: flyrivergo@outlook.com

Documents / Resources

	<p>Flyrivergo B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand [pdf] User Manual B0B4NRSQF5 Photography Turntable Motorized Rotating Display Stand, B0B4NRSQF5, Photography Turntable Motorized Rotating Display Stand, Turntable Motorized Rotating Display Stand, Motorized Rotating Display Stand, Rotating Display Stand, Display Stand, Stand</p>
---	---

References

- [User Manual](#)