

FORCE1 Velocity High Speed RC Boat



FORCE1 Velocity High Speed RC Boat Instruction Manual

[Home](#) » [FORCE1](#) » FORCE1 Velocity High Speed RC Boat Instruction Manual 

Contents

- 1 [FORCE1 Velocity High Speed RC Boat](#)
- 2 [SAFETY GUIDELINES](#)
- 3 [MAINTENANCE AND CARE](#)
- 4 [INSIDE THE BOX](#)
- 5 [PRODUCT SPECIFICATIONS](#)
- 6 [BOAT DIAGRAM](#)
- 7 [TRANSMITTER DIAGRAM](#)
- 8 [BATTERY INSTALLATION – TRANSMITTER](#)
- 9 [CHARGE THE BATTERY](#)
- 10 [BATTERY INSTALLATION – BOAT](#)
- 11 [WEAK SIGNAL AND LOW POWER ALERT](#)
- 12 [REPLACE THE BOAT'S WATERPROOF RING](#)
- 13 [PARTS](#)
- 14 [Documents / Resources](#)
 - 14.1 [References](#)
- 15 [Related Posts](#)



FORCE1 Velocity High Speed RC Boat



 
SAFETY GUIDELINES

1. Use under adult supervision. The recommended age is 8 years old or older.
2. Wait for the battery to cool before recharging, after the boat is used.
3. When driving, make sure no humans or animals are in the water to avoid injury. There must be no weeds or debris on the surface of the water to prevent the propeller from becoming entangled or damaging the boat.
4. Remote control distance is about 260 feet (80 meters), please do not exceed the effective control distance, to avoid losing the boat.
5. Please keep a safe distance from the high speed rotating propeller to avoid the risk of lacerations, entanglement or other injury. If the water sensor is wet, the propeller may move while out of the water, be cautious of this. There are two small silver water sensors on the top and two on the bottom of the boat.
6. Always keep small parts and electrical parts out of the reach of children.
7. The charger is not a toy. Only use the original charger provided.
8. Battery charging should be done in a location out of reach of children. When charging, it must be kept away from expensive or flammable materials such as beds, carpet, wood floors etc.
9. Keep the battery out of direct sunlight, always store it at half charge and keep it in a lipo safe battery bag (not included).
10. Do not leave battery charging unattended or overcharge the battery.
11. Do not reverse polarity or puncture batteries. Do not store the batteries near any heat source.
12. Only use the boat in fresh water or pools without liners as the boat can damage liners, salt water may cause erosion.
13. Force 1RC cannot be held liable for any damages to property or personal injury.

MAINTENANCE AND CARE

1. If the boat is not being used, remove the battery and store in a lipo safe battery bag (not included) at about a half charge.

2. If you do not plan to use your boat for an extended period of time, remove the batteries from the transmitter to avoid battery leakage, which may damage the controller.
3. The boat and the transmitter should be protected from prolonged exposure to the sun to prevent damage.

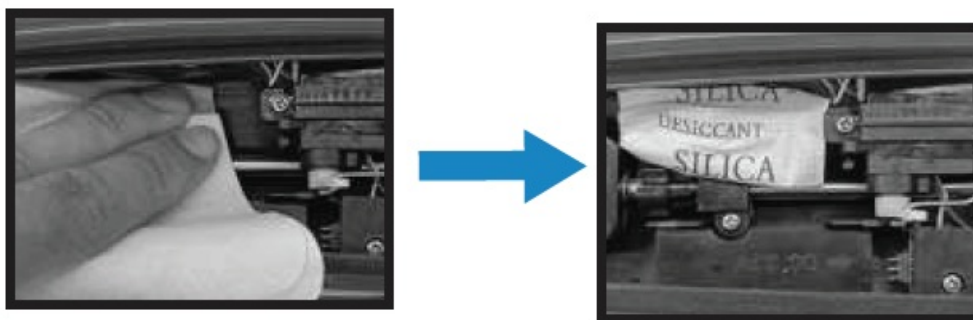

Note: When you're finished driving the boat, drain any water from the hull. A small amount of water in the hull is ok. Be sure to dry the boat out completely with a cloth and desiccant if you have it.

 
INSIDE THE BOX

- RC Boat
- Remote controller
- 3.7V 800mAh Li-ion battery x 2
- USB charger
- Manual
- Spanner
- Spare propeller
- Spare nut for propeller
- Display rack


PRODUCT SPECIFICATIONS

- Drive system: 180 strong magneto motor Control
- distance: Approximately 260 feet (80 meters) Control
- frequency: 2.4GHz Charging time.
- Approximately 120 minutes Play time. Approximately 10 minutes per fully charged battery Boat
- Battery: Li-ion 3.7V 800mAH (2 x included) Remote controller
- battery: 3 x AA (not included)
- Charger: USB charger Speed: About 20KM/H


BOAT DIAGRAM

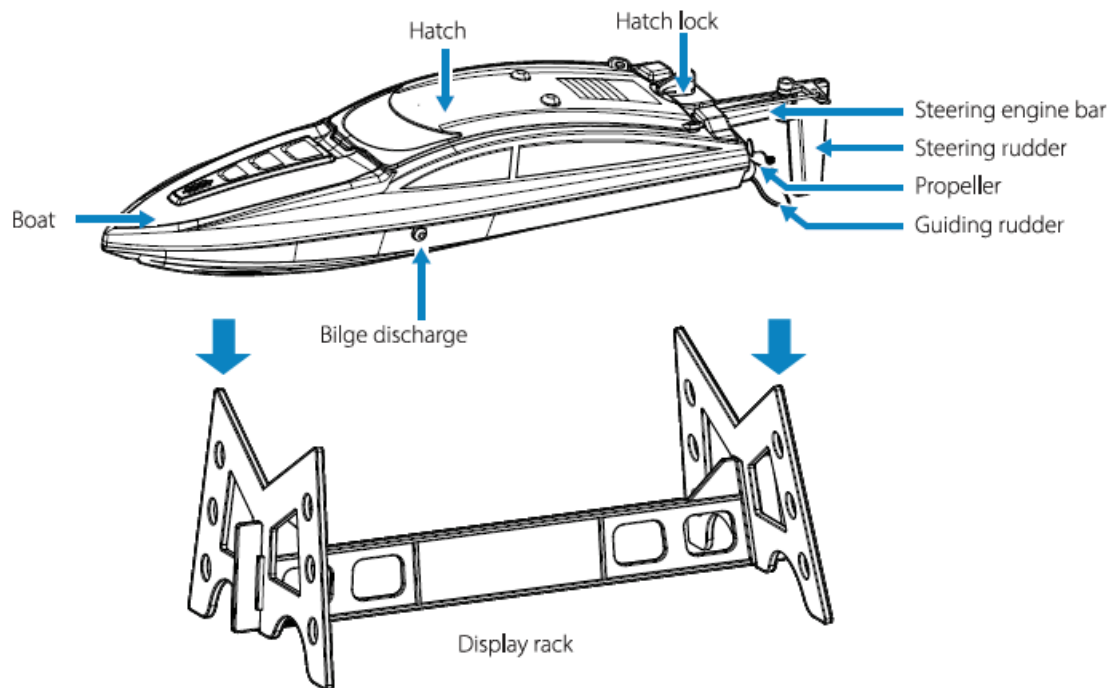

TRANSMITTER DIAGRAM

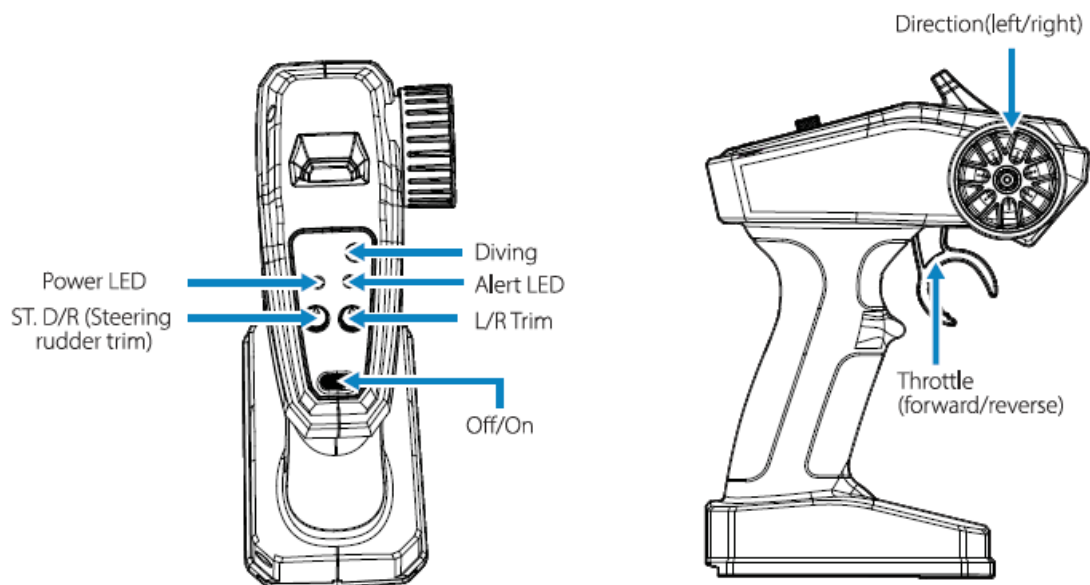 

BATTERY INSTALLATION – TRANSMITTER

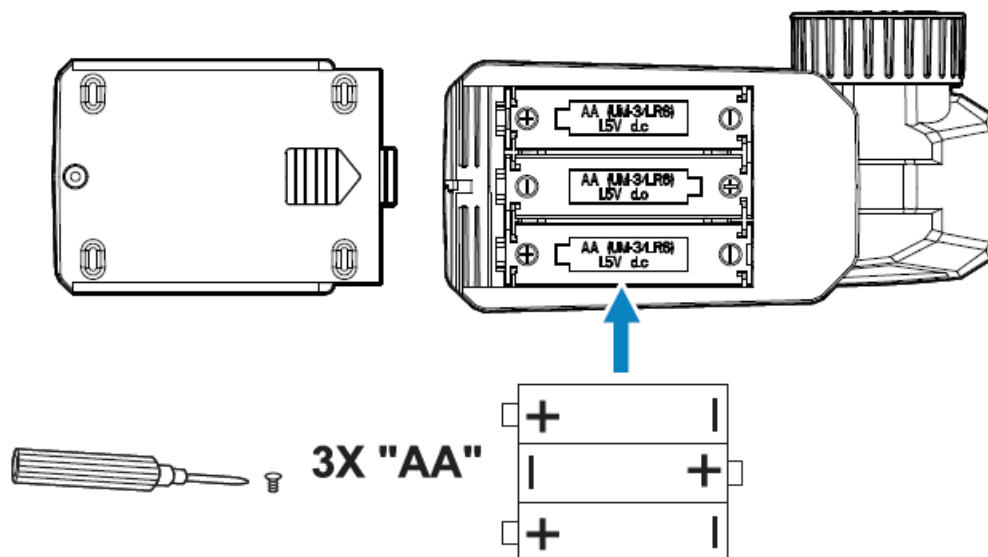 

Unscrew and open the battery cover on the bottom of the remote. Insert 3 x AA Batteries in the correct direction. If the transmitter will not be used for a long time, please remove the batteries to prevent battery leakage and damage to the transmitter.

Note: While driving the boat, if the transmitter BEEPS 1 time repeatedly and the POWER RED light flashes, it indicates that the transmitter's battery is low. Please replace or recharge the battery.

CHARGE THE BATTERY



Please connect the USB charger to USB output on computer, power bank or AC/DC adaptor.



 
 
Insert the battery into the black connector of the USB charger.

 
When the transmitter beeps twice repeatedly and the "ALERT" LED flashes GREEN, it indicates that the boat's battery is low. Bring the boat back immediately and replace the battery.

- Power output of 5V 0.5-1 A must be used for safe charging
- Always only use the USB cable provided.
- While charging the red light of the USB charger will be off.
- When charging is complete, the red light of the USB charger will turn on.

BATTERY INSTALLATION – BOAT

1.

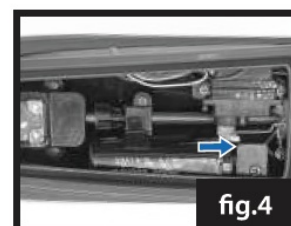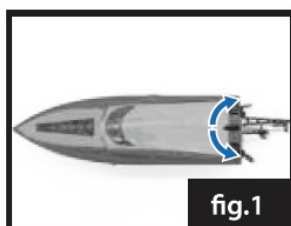

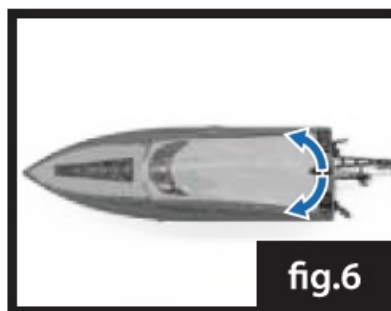


Unlock the switch to open the cabin cover, fig. 1 and fig.

2. Install the rechargeable battery and connect it to the power input of boat, fig. 3 and fig.


3. Close and secure the cabin cover of the boat, fig. 5 and fig. 6

 1. FORWARD

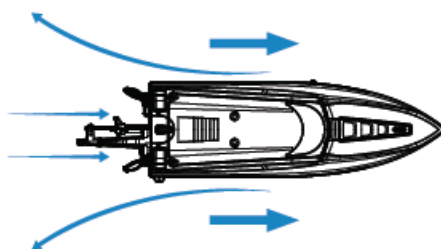


Pull the throttle backwards and the boat moves forward.

 2. BACKWARD

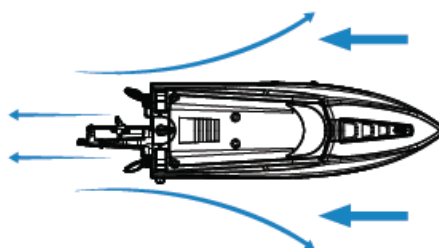


Push the throttle forward and the boat moves backward.

 3. TURN LEFT

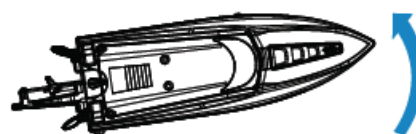



Turn the wheel to the left when the boat is moving, and the boat turns left.

 4. TURN RIGHT

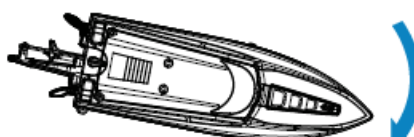



Turn the wheel to the right when the boat is moving, and the boat turns right.

  5. LEFT TRIM

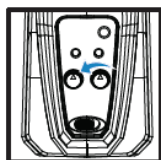



If while the boat is moving forward it's veering to right then slightly turn the "steering" to the left until the boat is moving straight.

  6. RIGHT TRIM

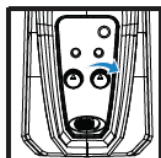

If while the boat is moving forward it's veering to left then slightly turn the "steering" to the right until the boat is moving straight.

  7. RUDDER SETTING

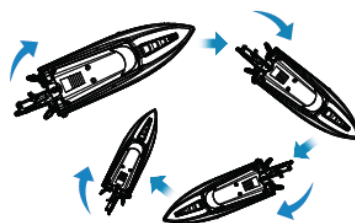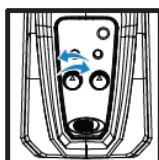

Turn the switch to the left to increase the turning radius. Turn the switch to the right to reduce turning radius. (A too small turning radius can tip the boat over.)

8. CAPSIZE RECOVERY

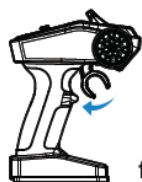 



fig.1



fig.2

If the boat capsizes, push and pull the throttle backwards and forwards repeatedly until the boat flips upright.

 9. DIVE MODE

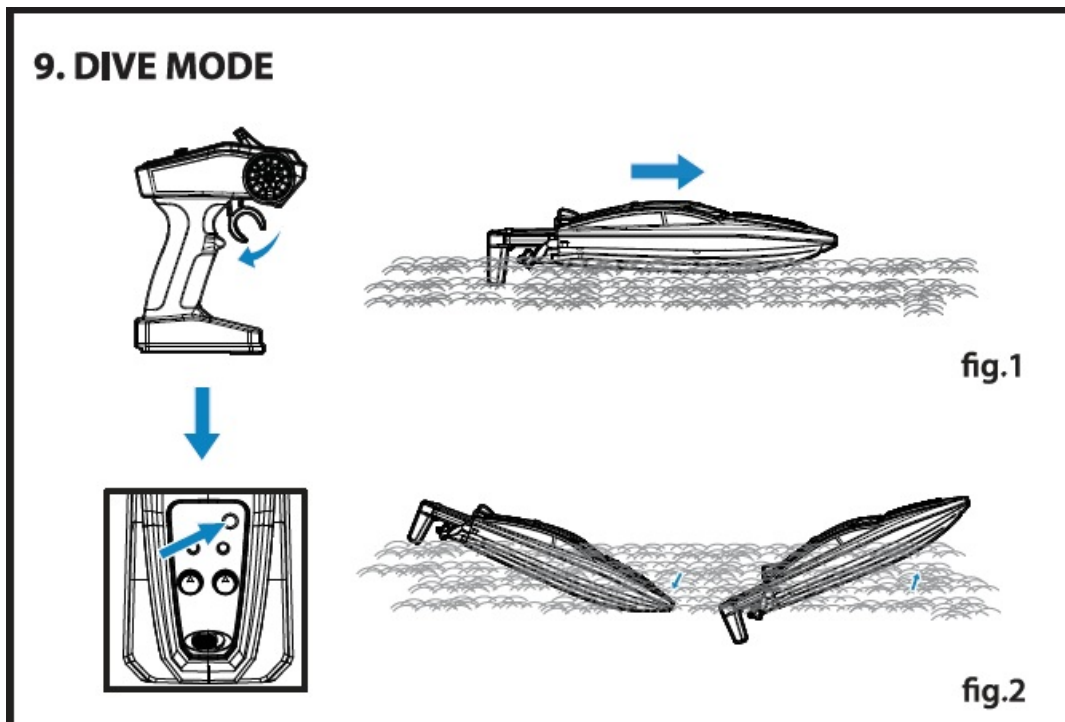





1. Pull the throttle backwards and the boat moves forward (fig.1)
2. Push the throttle all the way forward then press the dive button. The boat diving lasts approximately 3-5 seconds then rises to the surface (fig.2).

Note: If the boat cannot dive after following instructions adjust the rudder setting on the remote control to the right then try diving again.

WEAK SIGNAL AND LOW POWER ALERT

1. While driving the boat, if the transmitter BEEPS 1 time repeatedly and the POWER RED light flashes, it indicates that the transmitter's battery is low. Replace all the batteries in the transmitter with NEW batteries.
2. When the transmitter BEEPS 2 times repeatedly and the ALERT LED flashes GREEN, it indicates that the boat's battery is low. Bring the boat back immediately and replace or recharge the battery.
3. When the transmitter BEEPS 3 times repeatedly and the ALERT LED is solid GREEN, it indicates that the boat is about to go out of range. Quickly steer the boat back within range or risk losing control of the boat. Note: If the boat is diving and the transmitter beeps or has a green LED illuminated, that is normal, it may not happen every time with diving mode.

    REPLACE THE BOAT'S WATERPROOF RING

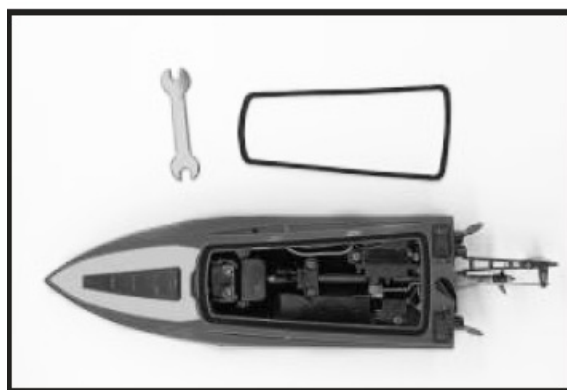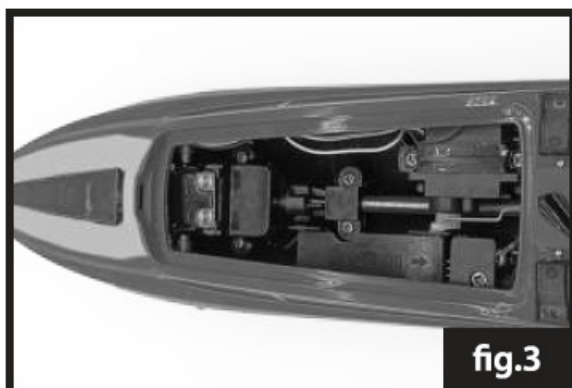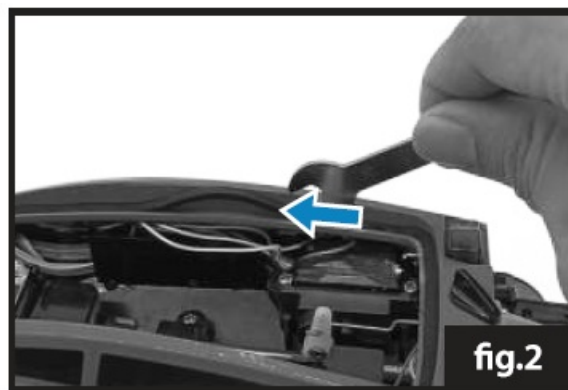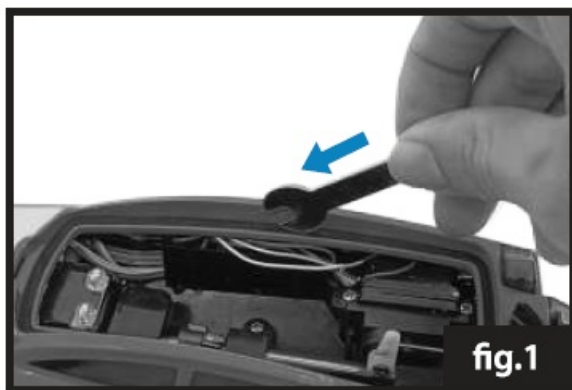

1. Put the tool on the waterproof ring.(fig. 1)
2. Push the tool downward to push out the waterproof ring on the boat (fig.2)
3. Take out the old waterproof ring (fig.3)
4. Install the new waterproof ring into the boat (fig.4)

PARTS



 
H153-01
Receiving Plate



H153-02
Motor



H153-03
Battery

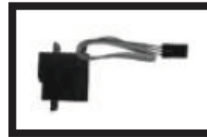

H153-04
Steering Engine



H153-05
USB Charging Line



H153-06
Discharge Tube



H153-07
Steering Engine Bar



H153-08
Propeller



H153-09
Tail Vane



H153-10
Guiding Rudders



H153-11
Screw



H153-12
Spindle Tube



H153-13
Light Board



H153-14
Body



H153-15
Hatch



H153-16
Display Racks



H153-17
Silicone Water
Proof Plug

Please contact Support@force1rc.com with your order number and shipping address for fast and friendly service!

Documents / Resources



[FORCE1 Velocity High Speed RC Boat](#) [pdf] Instruction Manual
Velocity High Speed RC Boat, High Speed RC Boat, Speed RC Boat, RC Boat, Boat

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.