

FOREST EasyTouch Remote Control User Guide


Home » FOREST » FOREST EasyTouch Remote Control User Guide 🖺

Contents


- 1 FOREST EasyTouch Remote Control
- 2 Contents box
- 3 Features & Benefits
- 4 Troubleshooting
- **5 Technical Specification**
- **6 FCC Compliance Statement**
- 7 Documents / Resources
 - 7.1 References

FOREST


FOREST EasyTouch Remote Control

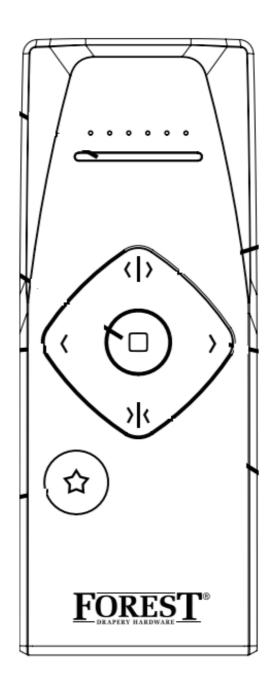

FRONT

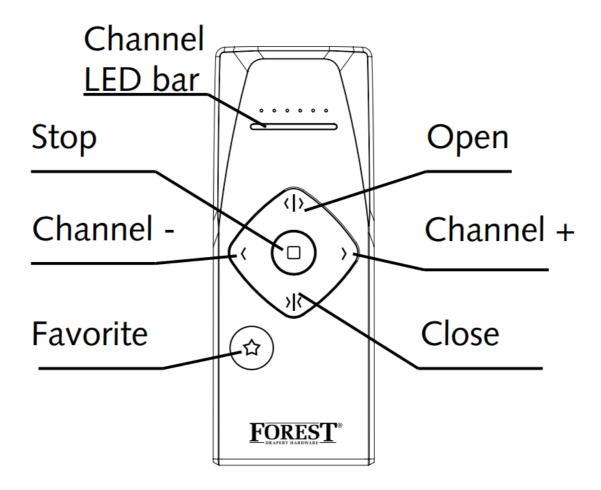

BACK

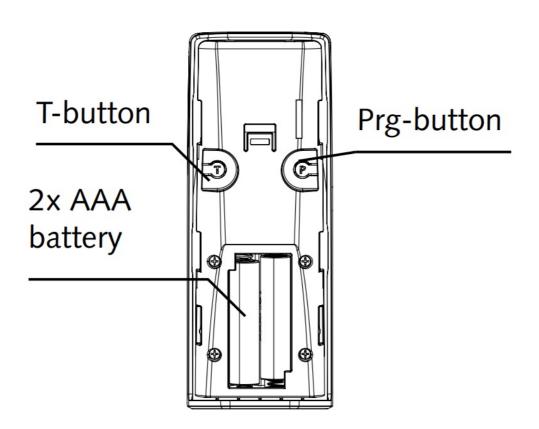

Welcome to the EasyTouch family! Thank you for purchasing the EasyTouch remote control. With this remote control, you are ready to operate your Forest Shuttle[™] and Forest tubular motors effortlessly. In this manual, you will find all the information you need to get the most out of your EasyTouch.

General

Read this installation guide and the safety instructions carefully before you start using this Forest product. Follow the instructions given in this manual and keep this manual for the entire life of the product. This manual describes the use and commissioning of the

EasyTouch. Any installation or use that falls outside the scope defined by Forest is not permitted. Ignoring the instructions in this manual will void all liability and warranty of Forest Group.

Contents box

- 1x Remote
- 1x wall mount
- 2x AAA battery in seal
- 2x plastic plug
- 2x 4x 40 screw
- 1x Manual

Features & Benefits


- 6-channel Forest RF control
- · low battery alert
- low power standby
- · child lock function
- Configure for use as a wall-mount control or handheld control.
- Utilizes Forest Link 2 RF technology

| Button | | Description/ function |
|----------|-----------|---|
| (I) | Open | Opens the curtains or blinds |
|)k | Close | Closes the curtains or blinds |
| | Stop | Stops the movement |
| () | Channel + | Pressing Channel Up increments the channel or moves the LED in the bar to the next. |
| (v) | Channel - | Pressing Channel Up decrements the channel or moves the LED in the bar to the previous. |
| (| Favorite | allows users to quickly access their preferred curtain positions with a single press.* |
| P | Prg | The Program button, accessible upon removing the back case, enables users to access programming functions |


This function applies only to Forest Link 2 motors.

Place or Change the battery


1. Press and slide the back cover from the remote control upward, exposing the battery compartment.

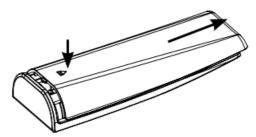

2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.

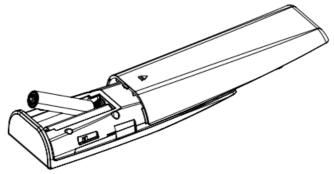

3. Slide the battery cover back into place.

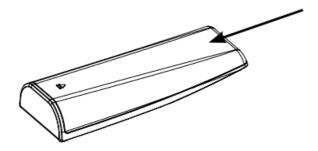

Select channel

- 1. Navigate with or or
- 2. LED indicates the channel number
- 3. Repeat the above, to activate again.

Child lock: locks all programming functions

- 1. Press P for 10 seconds
- 2. LED flickers 1x
- 3. Repeat the above, to activate again.

Set number of channels

- 1. Press for 3 seconds the
- 2. Set the number of active channels with the buttons
- 3. Press to approve
- 4. The

Note: if all LEDs are lit, that is channel 0 (all channels moving together)

Switch Protocol

Note: if you only have Forest motors without the Forest Link 2 protocol, you can switch from dual to single

protocol for legacy compatibility.

1. Remove the batteries





General safety instructions

This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety or supervision. use of the product.

- Do not let children play with the remote control
- · Never immerse the device in any liquid
- Do not drop, drill holes in, or disassemble the device, otherwise the warranty will be void.
- Do not expose the device to high temperatures or place it in direct sunlight.

Troubleshooting

- 1. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced
- 2. When the battery voltage is insufficient, an orange LED will flicker upon pressing a button, signaling the need for battery replacement.

Instructions for connecting to Forest Motors

To connect the remote to the Forest product, please refer to the user manual of the respective Forest motor or visit the landing page containing all manuals and videos (accessible via a QR code).



Technical Specification

- Battery: 3V (AAA battery×2) LR03
- Battery life < 3 years
- Transmit range indoor max. 30mtr

• Transmit power max. 10mW (ERP)

Working temperature -10°C - +50°C

Frequency 433.92MHz±100KHz

· Radiocoding: Legacy Forest Protocol followed by Forest Link 2

• Dimension: 130x50x20

• Gewicht: 78g incl. batteries (55g excl.)

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

 
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Recycling

Do not throw away the product with household waste. Make sure you hand it in at a collection point or depot so that it can be recycled. Forest Group (Nederland) BV hereby declares that the product complies with the requirements of Directive 2014/53/EU.

The complete declaration of conformity is available on the website <u>www.forestgroup.com/ce</u> The images in this document are not binding, and no rights can be derived from them.

Documents / Resources

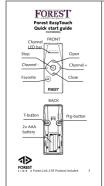

<u>FOREST EasyTouch Remote Control</u> [pdf] User Guide 520108X00, 2AFO8520108X00, EasyTouch Remote Control, EasyTouch, Remote Control, Control, Remote

References

- $\bullet \ \ F\underline{\ \ Home \mid ForestGroup.com}$
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.