

FORSTER TECHNIK Automatic calf feeder 2.1 SynchroFeed **User Guide**

Home » FORSTER TECHNIK » FORSTER TECHNIK Automatic calf feeder 2.1 SynchroFeed User Guide 🖺



Contents

- 1 FORSTER TECHNIK Automatic calf feeder 2.1
- **SynchroFeed**
- 2 How To Use
- 3 Documents / Resources
- **4 Related Posts**




FORSTER TECHNIK Automatic calf feeder 2.1 SynchroFeed




This document provides a brief overview of how to set up a single or quadruple IFS.

How To Use


- Mount the SynchroFeed feeding station
 Not higher than the teat and near to the automatic feeder. The maximum length of the suction hose with pump
 8m.
- 2. Establish ground connection
- Insert the pump hose into the servo pump
 The pump hose (from Förster-Technik) has to lie against the pumps housing in the top half.
- 4. Mount the power supply unit
- Mount the pressure sensorClose to the teat but min. 35 cm below.

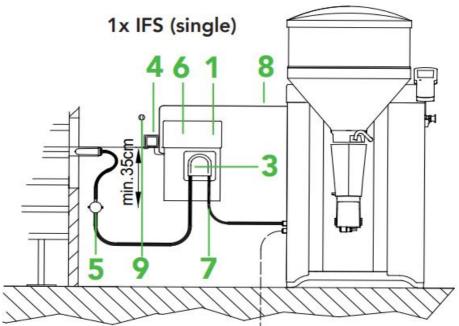


- 6. Connect the antenna to the IFS
- 7. Connect the suction hose & prepare rinse return flow Per feeding station a complete suction hose should not be longer than 8 m.
- 8. Connect IFS and feeder via CAN-bus cable
- 9. Connect the power supply

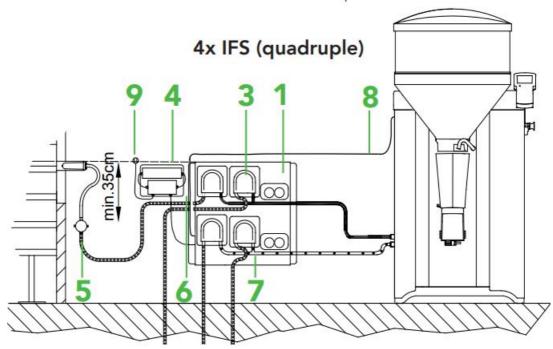


10. IFS feed station

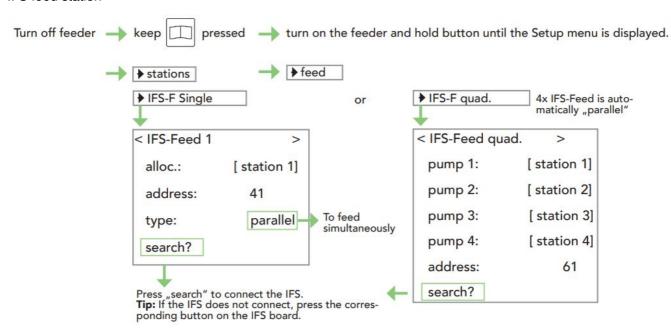

11. Calibrate the IFS

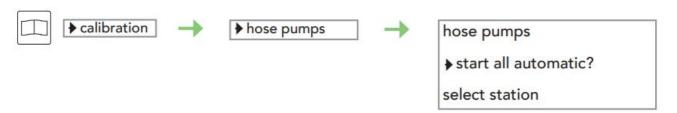

12. Perform cleaning Connect suction hose and flushing return line.

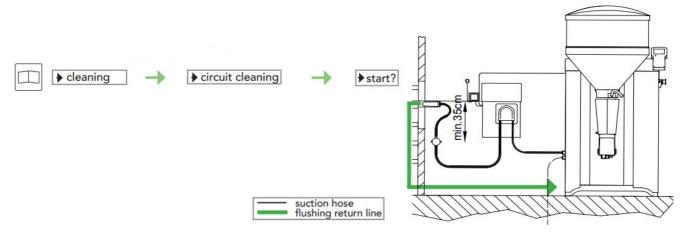

13. Further Information

• The pump speed can be adjusted for each individual group.



- Only use Förster-Technik teats with open ends. Don't use teats with a cross pump.
- Has the suction hose been replaced by a technician if damaged?
- Don't ignore calibration warnings. If warnings come back daily, check the pump and replace the pump hose by a technician if necessary.
- Clean the membrane of the pressure sensor at least every 3 months with warm water. Replace if damaged or out of shape.
- Only use Förster-Technik hoses.

Documents / Resources



FORSTER TECHNIK Automatic calf feeder 2.1 SynchroFeed [pdf] User Guide Automatic calf feeder 2.1 SynchroFeed

Manuals+,