



# FORTIN 90981 All-In-One Data Interface Remote Starter Installation Guide

[Home](#) » [FORTIN](#) » FORTIN 90981 All-In-One Data Interface Remote Starter Installation Guide 

## Contents

- [1 FORTIN 90981 All-In-One Data Interface Remote Starter](#)
- [2 WIRING / CONNECTION GUIDE](#)
- [3 PROGRAMMING REMOTE TRANSMITTER\(S\)](#)
- [4 FUNCTION PROGRAMMING](#)
- [5 MANUAL TRANSMISSION SEQUENCE FOR COMPATIBLE VEHICLES ONLY](#)
- [6 DISARM / ENTER / EXIT VALET MODE](#)
- [7 REMOTE START DIAGNOSTICS](#)
- [8 ALARM DIAGNOSTICS](#)
- [9 WARNING](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



**FORTIN 90981 All-In-One Data Interface Remote Starter**



## WIRING / CONNECTION GUIDE

### WIRING / CONNECTION GUIDE

GUIDE # 90981


#### (20-PIN) SECONDARY CONNECTOR

	(+) Foot Brake	Black	IN		IN Yellow	(+) BYPASS IGNITION	
750mA	(-) Parking lights	Pink	OUT		OUT Purple	(-) LOCK	750mA
750mA	(-) Trunk Release/AUX	Yellow/Black	OUT		OUT Purple/White	(-) UNLOCK	750mA
	(-) Hand Brake	Brown/White	IN		OUT Green	(-) IGNITION	750mA
	(-) Hood/Door	Pink/Black	IN		OUT White	(-) START	750mA
	Bypass config.	Purple/Yellow	⊖		OUT Orange	(-) DISARM	750mA
	Bypass config.	Green/White	⊖		OUT Orange/Black	(-) HORN/SIREN	2 Amp
	Bypass config.	Green/Red	⊖		OUT Dk.Blue	(-) GWR/PROGRAMMABLE	750mA
	Bypass config.	White/Black	OUT		IN Red/Blue	BYPASS CONFIG.	
	Bypass config.	Lt.Blue	⊖		⊖ Lt.Blue/Black	BYPASS CONFIG.	

750 mA MAXIMUM OUTPUT. DO NOT EXCEED THE MAXIMUM CURRENT OR PERMANENT DAMAGE TO THE MODULE WILL OCCUR THAT WILL NOT BE COVERED UNDER WARRANTY.


#### (5-PIN) POWER CONNECTOR

	Ground	Black	IN		OUT White	(+) PARKLIGHTS/IGN2/ACC/START	
	(+) Ignition	Pink	OUT		OUT Orange	(+) ACC / IGN2	
	(+) Starter	Yellow	OUT		IN Red	(+) 12V	

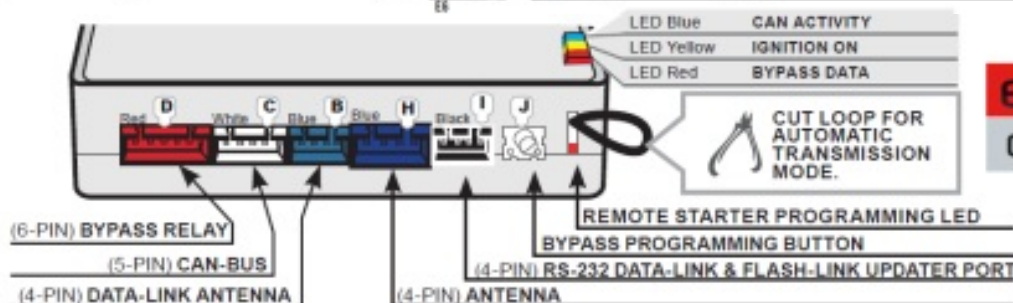

#### (3-PIN) SHOCK SENSOR

(2-PIN) Valet/  
Programming Button

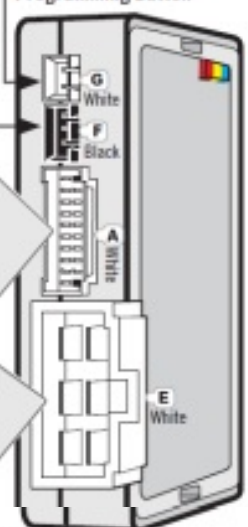














DOWNLOAD THE  
SPECIFIC VEHICLE  
INSTALLATION GUIDE AT:  
[WWW.FORTIN.CA](http://WWW.FORTIN.CA)







PAGE 1

## PROGRAMMING REMOTE TRANSMITTER(S)









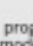


The system can learn up to a maximum of 4 transmitters.  
Any transmitters can be stored in more than 1 memory slot.  
When a 5th transmitter is learned the 1st remote is erased (FIFO).

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
 Turn the Ignition ON.	<b>WITH IGNITION SWITCH</b>  Turn the Ignition OFF.	 Turn the Ignition ON.	 The LED will turn ON.	 <b>HOLD</b> →  On each Transmitter press and release the  button then press and hold the  button, release when the green Led on the remote turn ON. The LED will stop flashing for a second confirming programming.	 Turn the Ignition OFF to exit programming.
	<b>WITH VALET SWITCH*</b>  Press and hold the valet switch* until the parking lights turn ON, the horn/siren will chirp.	 <b>x5</b> Press and release the valet switch* five time. The parking lights will flash and the horn/siren will chirp each time to confirm.	 <b>x4</b> Press and release the brake pedal four times.	 <b>x1</b> Press and release the brake pedal once. The LED will flash rapidly.	



## ERASES ALL REMOTES THAT HAVE BEEN PROGRAMMED AND RESETS ALL FUNCTIONS BACK TO DEFAULT.

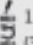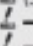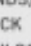

 STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
Disarm the system (The antenna led must not be flashing, see enter/exit valet mode p.6).  Turn the Ignition ON. Within 5 sec. →	<b>OR</b>  Press and hold the valet switch* or the antenna button until the Parking lights turn ON, the horn/siren will chirp.	<b>OR</b>  Press and release the valet switch* or the antenna button 23 TIMES.	 <b>x1</b> Press and release the brake pedal once.	<b>OR</b>  Press and hold the valet switch* or the antenna button for 5 seconds. The Parking lights will flash to confirm.	 Turn the Ignition OFF to exit programming. The Parking lights will flash 4 times.

## FUNCTION PROGRAMMING

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
Disarm the system (The antenna led must not be flashing, see enter/exit valet mode p.6).  Turn the Ignition ON. Within 5 sec. →	 <b>OR</b>  Press and hold the valet switch* or the antenna button until the Parking lights turn ON, the horn/siren will chirp. *Valet switch sold separately	 <b>OR</b>  Press and release the valet switch or the antenna button X time for the desired function. The Parking lights will flash and the horn/siren will chirp each time to confirm.	 <b>x1</b> Press and release the brake pedal once.	 MODE 1 -  LOCK MODE 2 -  UNLOCK MODE 3 -  1 SEC. →  3 SEC. START MODE 4 -  (3 SECONDS) MODE 5 -  LOCK MODE 6 -  UNLOCK Press the BUTTON on a programmed remote to select the mode (X). The Parking lights will flash 1-6 times to confirm.	 Turn the Ignition OFF to exit programming. The Parking lights will flash 4 times.
Return to step 3 to programmed the next option					










	FUNCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6
1	—	—	—	—	—	—	—
2	Programmable Output (+) Ign/Acc/Start (FUNCTION 31 MODE 4)	White (+)Ignition2	White (+)Accessory2	White (+)Start2	White (+)Start	—	—
		Orange (+)Accessory	Orange (+)Accessory	Orange (+)Accessory	Orange (+)Ignition2		
		Pink (+)Ignition	Pink (+)Ignition	Pink (+)Ignition	Pink (+)Ignition		
		Yellow (+)Start	Yellow (+)Start	Yellow (+)Start	Yellow (+)Start2		
3	Tachless sensitivity	Increase crank time 	+++++	++++ (By default)	+++	++	 Decrease crank time
4	Remote car starter runtime	Gas: 15 minutes Diesel: 30 minutes	Gas: 7 minutes Diesel: 14 minutes	Gas: 3 minutes Diesel: 6 minutes	—	—	—
5	Add Remote on FMH antenna series	Add Remote	—	—	—	—	—
6	Doorlock option	No	Unlock before remote-start & Lock after remote-start.	Lock after remote-start.	Unlock and relock after shut-down.	Relock 10 sec. after shut-down.	Disarm before shut down.
7	Ignition Doorlock option	No	Lock after foot-brake & unlock after key is turned OFF.	Unlock after key is turned OFF.	Doorlock Output at Ignition only.	—	—
8	Unlock Pulse Time	Single 0.25 sec	Double 0.25 sec	Single 4.0 sec	Single 2.5 sec	Single 1.5 sec	Single 0.75 sec
9	Active or Passive Alarm & Starter Kill	Active Press LOCK to activate the Alarm and starter-kill.	Passive (Lock disabled) Arm alarm activate starter-kill 30(MODE 4), 60(MODE 5), or 120(MODE 6) sec. after the door is closed.	Passive (Lock enabled) Arm alarm, activate starter-kill and lock doors 30(MODE 4), 60(MODE 5), or 120(MODE 6) sec. after the door is closed.	Passive arm 30 seconds (by default if MODE 2 or 3 is activated).	Passive arm 60 seconds. If MODE 2 or 3 is activated.	Passive arm 120 seconds. If MODE 2 or 3 is activated.
10	Starter Kill Output, Required function 32 mode 4, - Dk Blue (AB) = starter-kill.	Starter-kill & anti-grind	Anti-grind only	Relay normally open	—	—	—

	FUNCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6				
11	Sound Confirmation & LED antenna Antidismantur	1 <sup>st</sup> LOCK/UNLOCK silent 2 <sup>nd</sup> LOCK/UNLOCK sound Antenna LED active.	LOCK/UNLOCK sound always.	Antenna LED disabled.	Antenna LED disabled with ignition.	Confirmation sound at LOCK only	Panic mode disabled				
12	Output horn/siren configuration	Horn(-) only.	Siren(+) Output (E1) white	Siren(+) Output (E1) white and Horn(-)	Siren(-) only (A7)	---	---				
13	Confirmation Pulse	Long	Short	---	---	---	---				
14	Alarm ON/OFF Starter ON/OFF	Alarm OFF Remote-starter ON	Alarm ON Remote-starter ON.	Alarm ON Remote-starter OFF	---	---	---				
15	Smart Arming Smart Doorlock Smart Lock pulse	Disable	(Unlock signal) Automatically LOCK and rearm alarm if doors are not opened after 30 seconds.	Automatic Lock when starter kill arms.	Lock pulse only when its Unlock	---	---				
16	Cold Start Timer	3 hours at -5°C/Runtime	1.5 hours at -5°C/Runtime	3 hours at -5°C/5 minutes	1.5 hours at -5°C/5 minutes	Cold time OFF	---				
17	---	---	---	---	---	---	---				
18	Diesel Mode	Disable	Enable (20 seconds) Delay between ignition power up and Starter (crank).	Enable (10 seconds) Delay between ignition power up and Starter (crank).	Enable No delay between ignition power up and Starter (crank).	Enable (5 seconds) Delay between ignition power up and Starter (crank).	---				
19	Turbo timer	Disable	Run 2 minutes.	Run 4 minutes.	---	---	---				
20	Engine supervision: -Tachless - -analog tach- -Tach Data-Link-	Tachless on crank and supervision Tach Data-Link.	 Tachless only. (vehicles with automatic transmission only)	Start (Crank) 20 sec + Supervision by Data-Link Tach	 Start (crank) 8 seconds on Tachless. vehicles with automatic transmission only)	Start (Crank) 8 sec + Supervision by Data-Link Tach	Tach Data-Link only				
21	Start Attempts	2	1	3	---	---	---				
22	---	---	---	---	---	---	---				
23	Master RESET	RESET all programming options by default. (Retains already programmed remote.)	---	---	---	---	---				
24	---	---	---	---	---	---	---				
25	Yellow/Black (A13) + <b>HHOLD</b> -> LOCK	0.5 seconds & disarm alarm	0.5 seconds	10 sec latch or until a button is pressed	20 sec latch or until a button is pressed	30 sec latch or until a button is pressed	Latch until shutdown				
26	Hybrid mode	Gas / Diesel vehicle	Hybrid vehicle	---	---	---	---				
27	---	---	---	---	---	---	---				
28	---	---	---	---	---	---	---				
29	Alarm Duration	30 seconds	60 seconds	120 seconds	---	---	---				
30	Valet code	Ignition ON Valet button x3 times.	Ignition ON Valet button x3 times and x1 times 3 seconds.	Ignition ON Valet button x4 times and x1 times 3 seconds.	Ignition ON Valet button x5 times and x1 times 3 seconds.	Ignition ON Valet button x6 times and x1 times 3 seconds.	Ignition ON Valet button x7 times and x1 times 3 sec.				
31	Special application Programmable output (+)	No special application Priority on function 2	Special application - Function 2 (all option) not available.		White	(+) Parking Lights	White	(+) Parking Lights	White:(+) Parking Lights		
					Orange	(+) Accessory	Orange	Ign.2	Orange:(+) Parking lights		
			White wire (E1) - Enable at ground out, disable with vehicle Ignition OFF.		White wire (E1) - Trunk Output		Pink	(+) Ignition	Pink	Ign.1	Pink:(+) Ignition
							Yellow	(+) Start	Yellow	(+) Start	Yellow:(+) Start

	FUNCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6
32	Ground Out	Dk Blue (Ground out): Shut-down 1 second after remote start run time.	Dk Blue (Ground out): Shut-down 3 seconds after remote start run time.	Dk Blue (Ground Out): Shutdown After	Dk Blue (Ground Out): Starter-Kill	Dk Blue (Ground Out): Arm / Rearm	Controlled by CAN learning
33	Manual transmission function	Manual transmission completed by door closed.	Automatically activated by hand-brake and Foot Brake	Manual sequence completed by locking the doors	Cancel ready mode when trunk open.	—	—
34	Trunk output	Pulse 0.5 seconds	Pulse 2.5 seconds	Unlock before trunk pulse 0.5sec	Trunk Output at Ignition only	—	—
35	Door unlock Special application	No special application	Activate vehicle ignition at unlock.	Activate vehicle ignition and accessory at unlock.	—	—	—
36	Activation/deactivation remote Valet Mode	—	By remote : <b>HOLD</b> -> LOCK + UNLOCK or valet button	By Valet button only	—	—	—
37	Security Remote car starter Special application	No special application	Security ON: Shutdown Engine if the door is opened before UNLOCK is pressed. (Door trigger required).	—	—	—	—
38	System control by OEM Remote	Disable	Press 3x Lock to remote start	Start/Stop on trigger shock sensor	Alarm control by OEM Remote.	Press Lock, Unlock Lock to remote start	—
39	Temperature option	Disable	Enable : AUX1 activated at 5°C when remote started (see function 25)	—	—	—	—



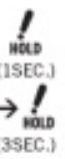

LEGEND: FUNCTION BY DEFAULT

## MANUAL TRANSMISSION SEQUENCE FOR COMPATIBLE VEHICLES ONLY

MANUAL TRANSMISSION SEQUENCE ⚠ FOR COMPATIBLE VEHICLES ONLY						
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6	STEP 7
 <p>Make sure that all doors are closed and the transmission is in the NEUTRAL position.</p>	 <p>Press the brake</p>	 <p>While the engine is running, Engage the parking brake.</p>	 <p>Release the brake pedal</p>	 <p>Press / <b>HOLD</b> 1 sec release and press the / <b>HOLD</b> again 3 sec. The Parking lights will flash once and then remain on.</p>	 <p>Remove the key from the ignition barrel. The vehicle will remain running with the Remote-Starter.</p>	 <p>Exit the vehicle and close all of the doors. The Remote-Starter will stop running once all the doors are closed.</p>
WILL DISABLE MANUAL TRANSMISSION SEQUENCE						
STANDARD		<ul style="list-style-type: none"><li>• Open the hood</li><li>• Disengage the parking brake</li></ul>			<b>Note :</b> If the Parking lights flash 3 times when Remote-Starting, Ready Mode is not enabled.	
<ul style="list-style-type: none"><li>• Open any door(s)</li></ul>						

## DISARM / ENTER / EXIT VALET MODE

### DISARM / ENTER / EXIT VALET MODE

			STEP 1	STEP 2		
			OR		Within 10 seconds press and release the Valet switch or the antenna button <b>3 TIMES.</b>	
to disarm the system		System armed : DEL flash		3x		System disarmed : LED is OFF
to enter and exit valet mode		System disarmed : LED is OFF	Insert the key and turn it to the ignition (ON/RUN) position.		3x	System disarmed and in valet mode : LED is ON.

## REMOTE START DIAGNOSTICS

### Parking Lights flashes (before starting) :

- 3x Ready mode disabled
- 4x Valet mode activated (The LED is on)
- 5x Hood open

### Parking Lights flashes (after Shutdown) :

- 1x: Normal stop (Brake, Park Brake)
- 3x: Runtime expired or shut down by the transmitter
- 4x: No tachometer signal
- 5x: Hood open
- 6x: Over crank threshold (8 seconds)

## ALARM DIAGNOSTICS

### Parking Lights flashes (after disarm) :

- 3x: Door open – zone 3
- 4x: Shock sensor – zone 4
- 5x: Hood open – zone 5

- 6x: Trunk open – zone 6

## WARNING

### NOTICE

The manufacturer will accept no responsibility for any electrical damage resulting from improper installation of the product, including either damage to the vehicle itself or to the remote-starter module. This module must be installed by a certified technician including all of the supplied safety devices. Please note that this guide has been written for trained professional technicians, a certain level of skills and knowledge is therefore assumed. Please review the Installation Guide carefully before beginning any work.


### WARNING

By default, this system is set up for vehicles with a manual transmission. For vehicles with an automatic transmission, the safety wire loop on the main unit must be cut. Before proceeding to the installation, make sure that the vehicle does not attempt to start when the vehicle is in the “drive” or “reverse” position. If an automatic transmission vehicle starts when the transmission is in gear, ensure that the safety wire loop on the unit is not cut. Once the safety wire loop is cut, the system is considered an automatic transmission remote-starter indefinitely. Once a loop is cut all warranties, guarantees, and liability is immediately void if the unit is installed on a manual transmission vehicle. Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be installed by a qualified technician. This instruction guide may change without notice. To download the installation guide, user guide, or the latest quick installation guide, visit: [WWW.FORTIN.CA](http://WWW.FORTIN.CA)

**Technical support:** TEL: 514-255-4357 / 1-877-336-7797

Copyright © 2014-2021, FORTIN AUTO RADIO INC ALL RIGHTS RESERVED MADE IN CANADA

## Documents / Resources

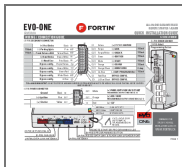

[FORTIN 90981 All-In-One Data Interface Remote Starter](#) [pdf] Installation Guide  
90981 All-In-One Data Interface Remote Starter, 90981, All-In-One Data Interface Remote Starter

## References

- [Fortin | Bypass modules, remote starters and alarm systems](#)