Home » FORTIN » FORTIN EVO-ALL Remote Starter And Interface Module Installation Guide

# FORTIN EVO-ALL Remote Starter And Interface Module Installation Guide







#### **Contents**

- 1 STAND ALONE INSTALLATION
  - 1.1 PARTS REQUIRED (NOT INCLUDED)
  - 1.2 STAND ALONE CONFIGURATION
  - 1.3 REMOTE STARTER FUNCTIONNALITY
  - 1.4 REMOTE STARTER WARNING CARD
  - 1.5 CONFIG.1 DESCRIPTION
  - 1.6 CONFIG.1 AUTOMATIC TRANSMISSION WIRING CONNECTION
  - 1.7 CONFIG.2 DESCRIPTION
  - 1.8 CONFIG.2 AUTOMATIC TRANSMISSION WIRING CONNECTION
  - 1.9 DCRYPTOR PROGRAMMING PROCEDURE
  - 1.10 OPTIONAL RF-KIT PROGRAMMING
    - 1.10.1 PROGRAM BYPASS OPTION
    - 1.10.2 OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9
    - **PROGRAMMING**
- 1.11 REMOTE STARTER FUNCTIONALITY
- 2 Documents / Resources
  - 2.1 References
- **3 Related Posts**

#### STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

				Vehicle functions supported in this diagram (functional if equipped)														
		1 RATI AT IG ON 2	FIGU RATI ON 2	Immo bilize r byp	L r o l c c	U n I	n A	D is a r	Tr un k ( op	R A P Di sa	Ta ch o m	D oo r St	Tr un k St	Ho od St atu	Han d-Br ake Stat	Foot -Bra ke S	PK 3, Pa ssl	
VEHI CLE		YEAR S	NITIO N SWI TCH	AT B CM	ass	k	c k		m	en	bl e	et er	at us	at us	s*	us	tatus	ock
BUICK																		
Enco	Flip -key	2013- 2016	P.3-4	P.5-6	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

**70.[41]** GM MINIM UM To add the firmware version and the options, use the **FLASH LINK UPD ATER** or **FLASH LINK MOBILE** tool, sold separately



# Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FU NCTIONAL HOOD PIN:

n		IIT OP TON	DESCRIPTION					
U I:	A 1 1	OFF NON	Hood trigger (Output Status).					

Program bypass option (If equiped with OEM alarm):

D2

Ε

5

Unlock before / Lock after (Disarm OEM alarm)



ATTENTI ON!



1. DATE: XX-XX




SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED



MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



The vehicles Flip-key remote will not be functional during remote start.

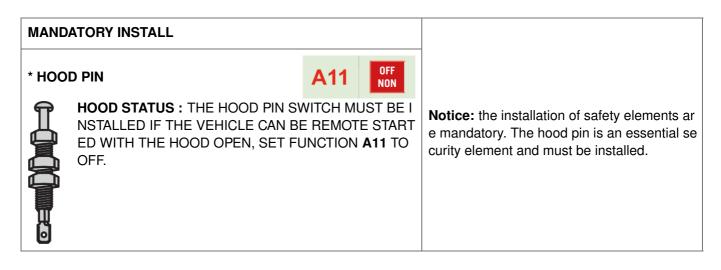

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.



This guide may change without notice. See <a href="www.fortin.ca">www.fortin.ca</a> for latest version.

#### PARTS REQUIRED (NOT INCLUDED)








OR





1x Smartphone Android or iOS with Internet connection (provider charges may apply).

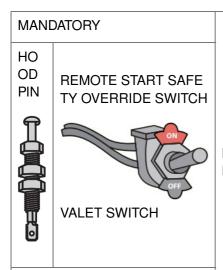

**Notice:** the installation of safety elements are mandatory. The hood pin and t he valet switch are essential security elements and must be installed.

Part #: RSPB available, Sold se parately.

#### STAND ALONE CONFIGURATION

		UNIT OPTION	DESCRIPTION	
ALL	Program bypass option:	D1	Standalone enable	

	UNIT OPTI ON	DESCRIPTION	
Program bypass option with RF KIT a ntenna:	H1 to H6	Supported RF Kits and select RF Kit	

#### REMOTE STARTER FUNCTIONNALITY



# RF KIT REMOTE STARTER required (sold separately)

REMOTE STARTER DIAGNOSTICS				
MODULE RED LED				
x2 flash :	Brake ON			
x3 flash :	No tach			
x4 flash :	Ignition before start			
x5 flash :	Hood Open			

## **REMOTE STARTER WARNING CARD**



# CUT THIS WARNIN G CARD AND STIC K IT ON A VISIBLE PLACE:

or use the package **RSPB**, Sold separat ely.




## **WARNING**

## **REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


#### **CONFIG.1 DESCRIPTION**

#### AT IGNITION SWITCH

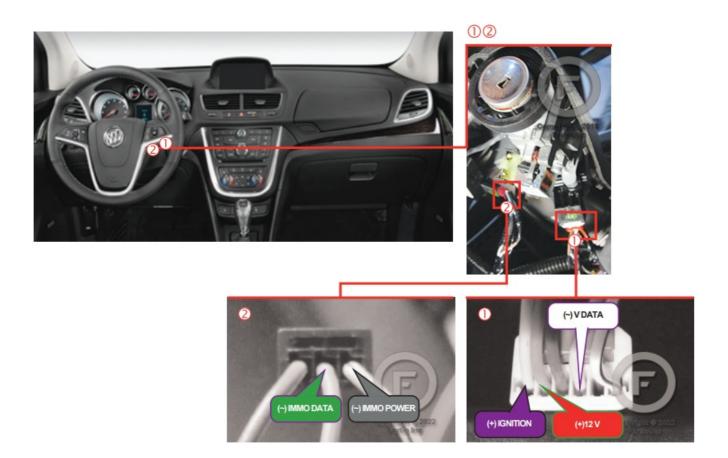

(1)(2) Ignition barrel

**CONFIG.1 AUTOMATIC TRANSMISSION WIRING CONNECTION** 

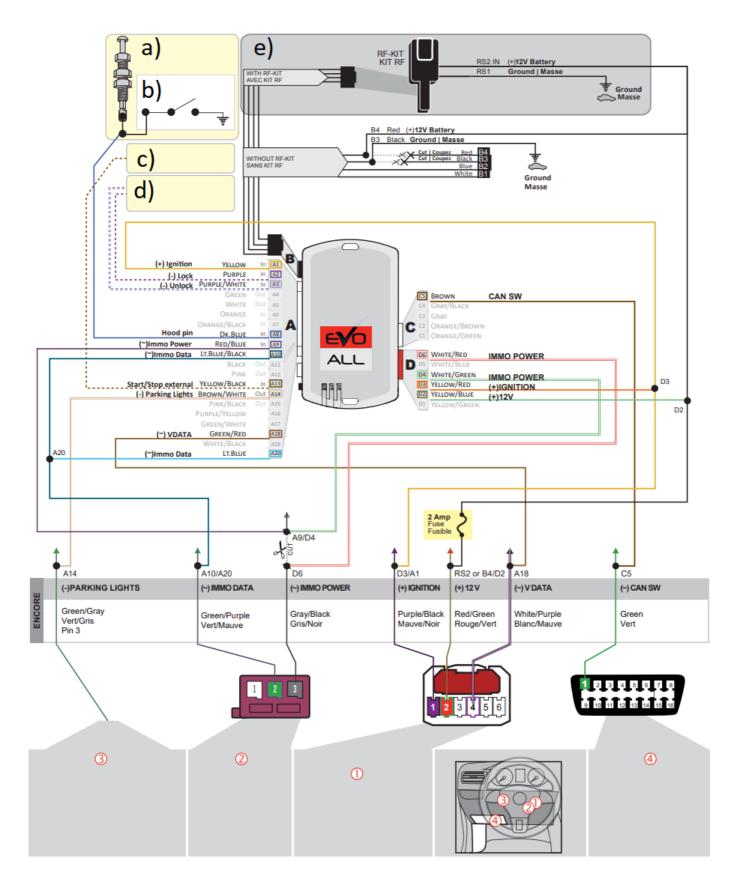

- a) Hood pin only required on vehicles not equipped with a factory hood pin.
- b) SAFETY OVERRIDE SWITCH
- c) Start / Stop external control
- d) (-) Lock/Unlock input external control
- e) OPTIONAL RF-KIT
- (1) Back view

White 6-pin connector

## At Ignition harness

(2) Back view


Burgundy 3-pin connector


**Key Bypass** 

(3) Back view
Black 12-pin connector
At Parking light switch
(4) Front View
White 16-pin
OBDII Connector

## **CONFIG.2 DESCRIPTION**

#### AT BCM

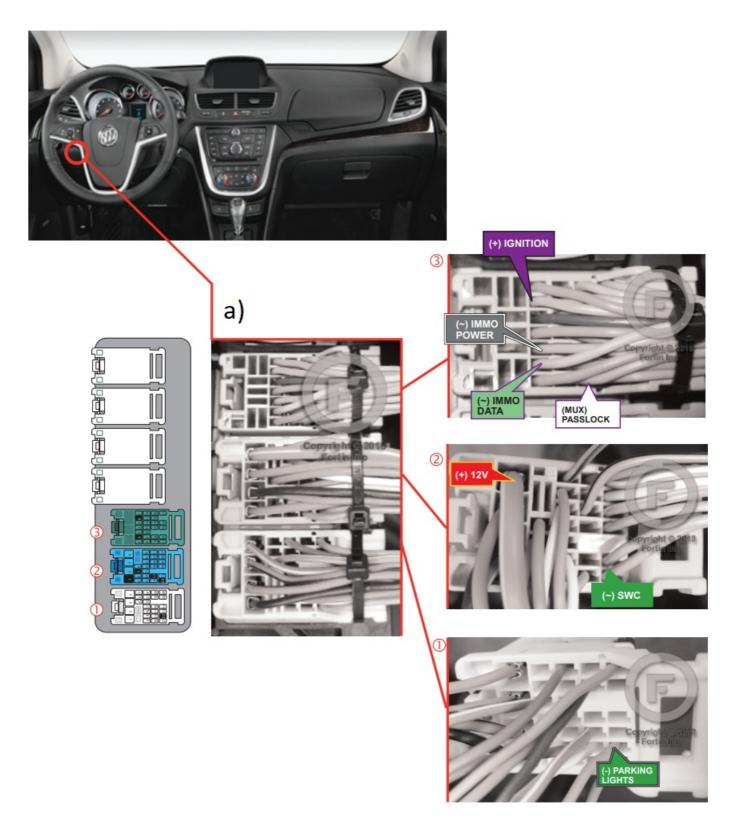

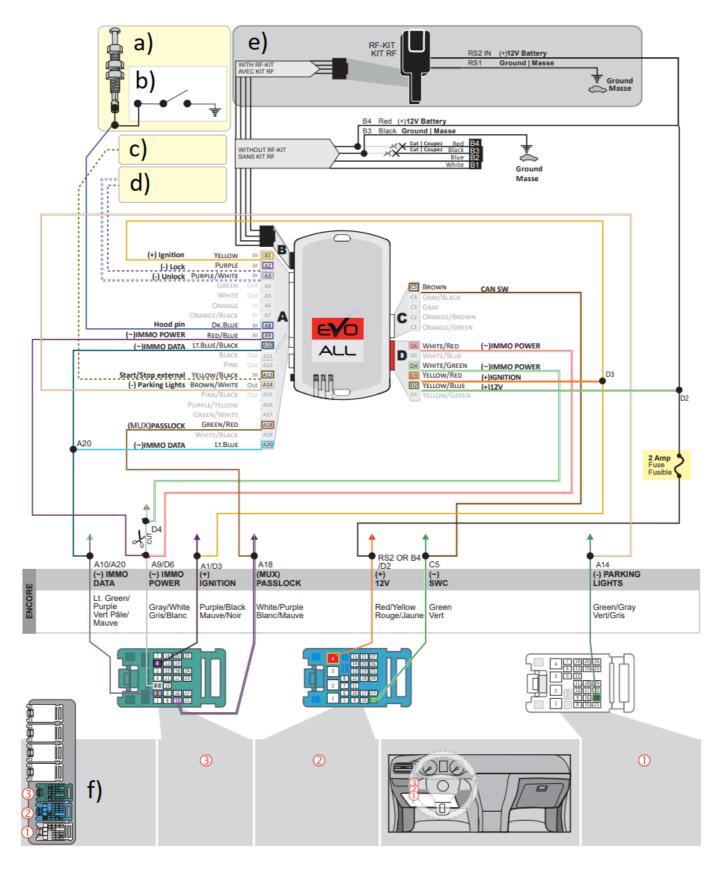

- a) **Hood pin** only required on vehicles not equipped with a factory hood pin.
- b) **SAFETY OVERRIDE SWITCH**
- c) Start / Stop external control
- d) (-) Lock/Unlock input external control
- e) OPTIONAL RF-KIT
- f) **BCM** On the left of the steering column
- (1) Back view
- 26-Pin White Connector

(2) Back view

27-Pin Blue Connector

#### At BCM

(3) Back view

25-Pin Green Connector

At BCM

#### **DCRYPTOR PROGRAMMING PROCEDURE**











**OR** 






1x Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


## BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

[1]

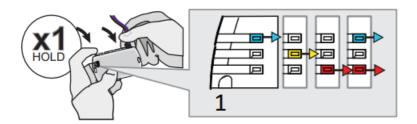


1. LED may differ depending on the module casing.

**Press** and **hold** the programming button: **Connect** the 4-PIN Data-link harness (Black connector).

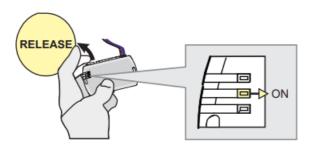


**Release** the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

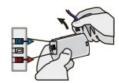


[3]

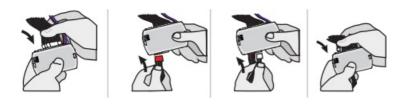


**Insert** the required remaining connectors.

[4]

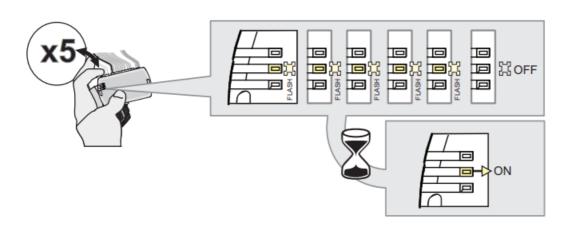

**Press** and **release** the programming button five times (5x).

→ The YELLOW LED will alternate between 5x flashes and a pause.

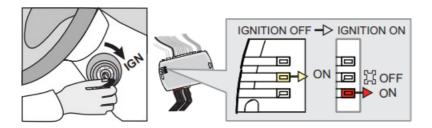


Turn the key to the Ignition ON/RUN position.

- → The RED LED will turns ON.
- ☐ The YELLOW LED turns OFF.

If the LED is not solid RED disconnect the 4-Pin connector (Data-Link) and go back to step 1.



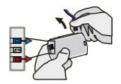



**Turn** the key to the OFF position.

[7]




Remove the key from the Ignition barrel.



Wait 5 seconds.

[9]

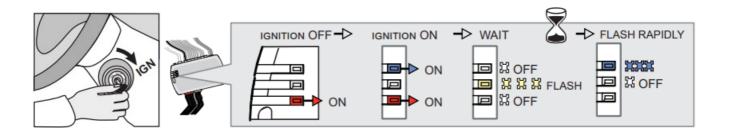


Turn the Ignition to the ON position.

- → The BLUE LED will turns ON.
- → Wait, the BLUE & RED LED will turns OFF.
- → Wait, the YELLOW LED will Flash.
- → Wait, the YELLOW LED will turns OFF.
- → Wait, the BLUE LED will Flash rapidly.

If the LEDs do not react as shown, disconnect the 4-Pin connector (Data-Link) and go back to step 1.




[10]

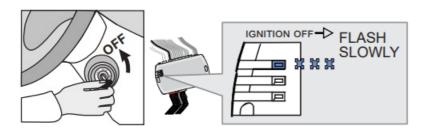

Turn the key to the OFF position.

the BLUE LED flash slowly.

[11]

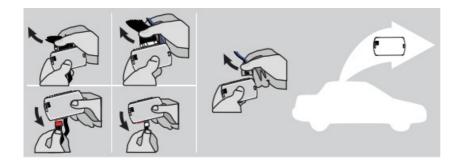

Disconnect all the connectors and after the Data-Link (4-pins) connector.

# [12]



FLASH LINK MANAGER\*
SOFTWARE | PROGRAMME
Microsoft Windows Computer with Internet connection\*

# OR




- 1. VEHICLE'S OBDII CONNECTOR
- Smartphone\* (Internet provider charges may apply)

## Use the tool:

FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

\*Parts required (not included)

[13]

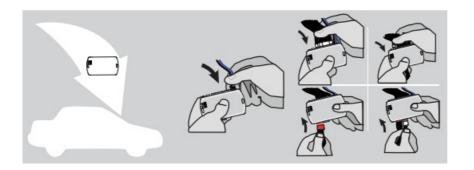

# AFTER DCRYPTOR PROGRAMMING COMPLETED

Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.




# REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

## **OPTIONAL RF-KIT PROGRAMMING**

## PROGRAM BYPASS OPTION

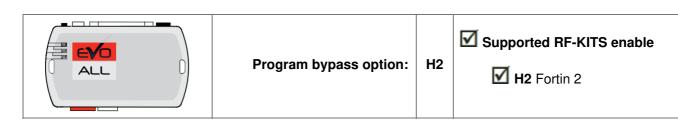

**OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING** 

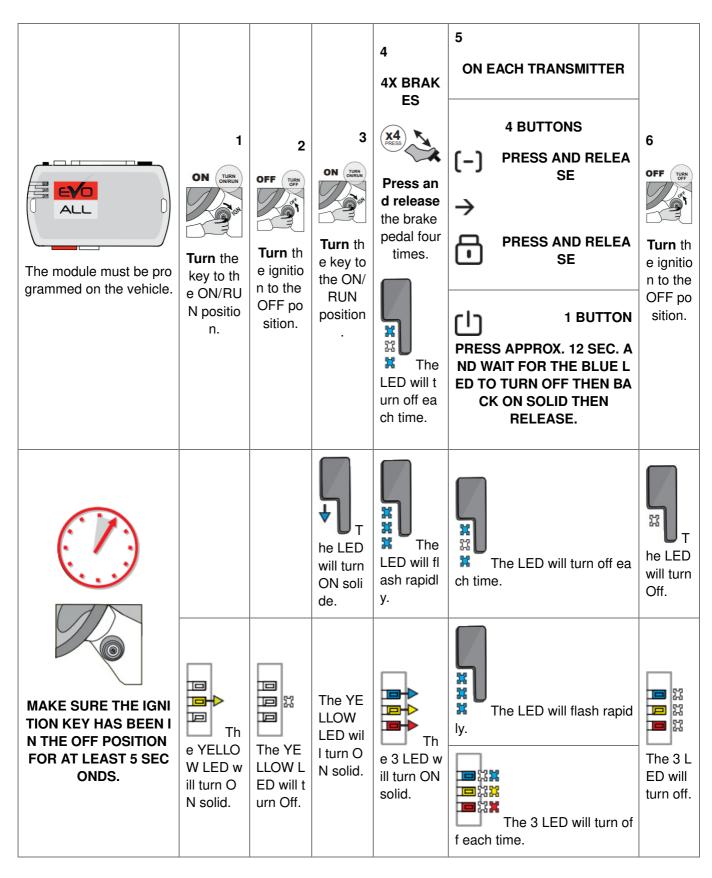








Remote st art the veh icle.




**Unlock** the doors wit h the remote-starter r emote.

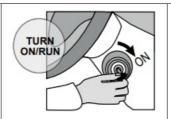

**Insert** and **Turn** the key to the Ignition ON/RUN position.




Press th e brake p edal.

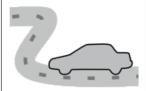

The vehicle can now be put in to gear and driven.



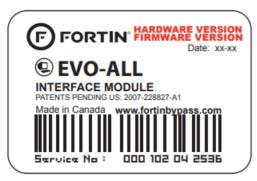

Module label

#### **Notice: Updated Firmware and Installation Guides**

Updated firmware and installation guides are posted on our web site on a regular basis. We recommend that you update this module to the latest firmware and download the latest installation guide(s) prior to the installation of this product.

#### **WARNING**

The information on this sheet is provided on an (as is) basis with no representation or warranty of accuracy whatsoever. It is the sole responsibility of the installer to check and verify any circuit before connecting to it. Only a computer safe logic probe or digital multimeter should be used. FORTIN ELECTRONIC SYSTEMS assumes absolutely no liability or responsibility whatsoever pertaining to the accuracy or currency of the information supplied. The installation in every case is the sole responsibility of the installer performing the work and FORTIN ELECTRONIC SYSTEMS assumes no liability or responsibility whatsoever resulting from any type of installation, whether performed properly, improperly or any other way. Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be installed by qualified technician. The information supplied is a guide only. This instruction guide may change without notice. Visit <a href="https://www.fortinbypass.com">www.fortinbypass.com</a> to get the latest version.

Copyright © 2006-2018, FORTIN AUTO RADIO INC ALL RIGHTS RESERVED PATENT PENDING



#### **TECH SUPPORT**

Tél: 514-255-HELP (4357) 1-877-336-7797



#### **ADDENDUM GUIDE**



# **Documents / Resources**



FORTIN EVO-ALL Remote Starter And Interface Module [pdf] Installation Guide C1, D2, A11, EVO-ALL Remote Starter And Interface Module, EVO-ALL, Remote Starter And Interface Module, Starter And Interface Module, Interface Module

## References

- • The domain name off.la is for sale
- Owah damn solid
- O system.si
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.