



## FORTIN RFK942 EVO-ONE All-In-One Data Interface Remote Starter/Alarm Installation Guide

[Home](#) » [FORTIN](#) » FORTIN RFK942 EVO-ONE All-In-One Data Interface Remote Starter/Alarm Installation Guide



### Contents


- [1 FORTIN RFK942 EVO-ONE All-In-One Data Interface Remote Starter/Alarm](#)
- [2 WIRING / CONNECTION GUIDE](#)
- [3 PROGRAMMING REMOTE TRANSMITTER\(S\)](#)
- [4 FUNCTION PROGRAMMING](#)
- [5 REMOTE START DIAGNOSTICS](#)
  - [5.1 ALARM DIAGNOSTICS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**FORTIN RFK942 EVO-ONE All-In-One Data Interface Remote Starter/Alarm**

## WIRING / CONNECTION GUIDE


**(20-PIN) SECONDARY CONNECTOR**

									
	(+) Foot Brake	Black	IN		IN	Yellow	(+) BYPASS IGNITION		
750mA	(-) Parking lights	Pink	OUT		OUT	Purple	(-) LOCK		750mA
750mA	(-) Trunk Release/AUX	Yellow/Black	OUT		OUT	Purple/White	(-) UNLOCK		750mA
	(-) Hand Brake	Brown/White	IN		OUT	Green	(-) IGNITION		750mA
	(-) Hood/Door	Pink/Black	IN		OUT	White	(-) START		750mA
	Bypass config.	Purple/Yellow	⊖		OUT	Orange	(-) DISARM		750mA
	Bypass config.	Green/White	⊖		OUT	Orange/Black	(-) HORN/SIREN		2 Amp
	Bypass config.	Green/Red	⊖		OUT	Dk.Blue	(-) GWR/PROGRAMMABLE		750mA
	Bypass config.	White/Black	OUT		IN	Red/Blue	BYPASS CONFIG.		
	Bypass config.	Lt.Blue	⊖		⊖	Lt.Blue/Black	BYPASS CONFIG.		

**750 mA MAXIMUM OUTPUT.** DO NOT EXCEED THE MAXIMUM CURRENT OR PERMANENT DAMAGE TO THE MODULE WILL OCCUR THAT WILL NOT BE COVERED UNDER WARRANTY


(6-PIN) POWER CONNECTOR

Ground	Black	IN		White	(+) PARKLIGHTS/IGN2/ACC/START PROGRAMMABLE OUTPUT (FUNCTION 2 & 31)
(+) Ignition	Pink	OUT		Orange	(+) ACC / IGN2 PROGRAMMABLE OUTPUT (FUNCTION 2 & 31)
(+) Starter	Yellow	OUT		Red	(+) 12V

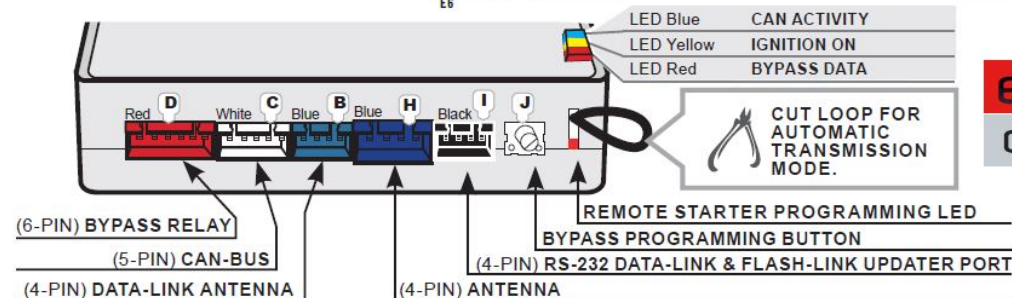

(3-PIN) SHOCK SENSOR


(2-PIN) Valet/  
Programming Button

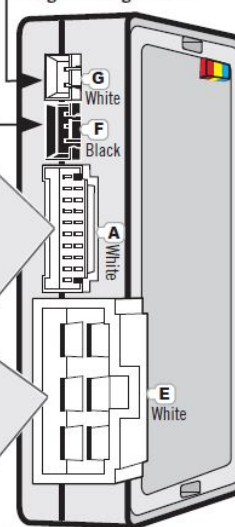

DOWNLOAD THE  
SPECIFIC VEHICLE  
INSTALLATION GUIDE AT:  
**WWW.FORTIN.CA**

## PROGRAMMING REMOTE TRANSMITTER(S)




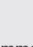
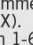
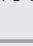
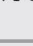

The system can learn up to a maximum of 4 transmitters. Any transmitters can be stored in more than 1 memory slot. When a 5th transmitter is learned the 1st remote is erased (FIFO).

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
 <p>Turn the Ignition ON.</p>	<p><b>WITH IGNITION SWITCH</b></p> <p>Turn the Ignition OFF.</p>	<p>Turn the Ignition ON.</p>	<p>The LED will turn ON.</p> <p><b>x4</b></p> <p>Press and release the brake pedal four times.</p>	<p>On each Transmitter press and release the <b>[+]</b> button then press and release the <b>[ ]</b> button.</p> <p>The LED will stop flashing for a second confirming programming.</p>	<p>Turn the Ignition OFF to exit programming.</p>
	<p><b>WITH VALET SWITCH*</b></p> <p>Press and hold the valet switch* until the parking lights turn ON, the horn/siren will chirp.</p> <p><b>x5</b></p>	<p>Press and release the valet switch* five time. The parking lights will flash and the horn/siren will chirp each time to confirm.</p>	<p>Press and release the brake pedal once.</p> <p><b>x1</b></p> <p>The LED will flash rapidly.</p>		

**ERASES ALL REMOTES THAT HAVE BEEN PROGRAMMED AND RESETS ALL FUNCTIONS BACK TO DEFAULT.**

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
<p>Disarm the system (The antenna led must not be flashing, see enter/exit valet mode p.6).</p> <p>Turn the Ignition ON.</p> <p>Within 5 sec. →</p>	<p><b>OR</b></p> <p>Press and hold the valet switch* or the antenna button until the Parking lights turn ON, the horn/siren will chirp.</p>	<p><b>OR</b></p> <p>Press and release the valet switch* or the antenna button <b>23 TIMES</b>.</p>	<p><b>x1</b></p> <p>Press and release the brake pedal once.</p>	<p><b>OR</b></p> <p>Press and hold the valet switch* or the antenna button for <b>5 seconds</b>. The Parking lights will flash to confirm.</p>	<p>Turn the Ignition OFF to exit programming. The Parking lights will flash 4 times.</p>

## FUNCTION PROGRAMMING

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
<p>Disarm the system (The antenna led must not be flashing, see enter/exit valet mode p.6).</p> <p>Turn the Ignition ON.</p> <p>Within 5 sec. →</p>	<p>Press and hold the valet switch* or the antenna button until the Parking lights turn ON, the horn/siren will chirp.</p> <p>*Valet switch sold separately</p>	<p>Press and release the valet switch or the antenna button X time for the desired function. The Parking lights will flash and the horn/siren will chirp each time to confirm.</p>	<p>Press and release the brake-pedal once.</p>	<p>MODE 1 -  LOCK</p> <p>MODE 2 -  UNLOCK</p> <p>MODE 3 -  START (3 SECONDS)</p> <p>MODE 4 -  FUNCTION (3 SECONDS)</p> <p>MODE 5 -  FUNCTION →  LOCK</p> <p>MODE 6 -  FUNCTION →  UNLOCK</p> <p>Press the <b>BUTTON</b> on a programmed remote to select the mode (X). The Parking lights will flash 1-6 times to confirm.</p> <p>Return to step 3 to programmed the next option</p>	<p>Turn the Ignition OFF to exit programming. The Parking lights will flash 4 times.</p>

	FUNCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6
1	—	—	—	—	—	—	—
2	Programmable Output (+) Ign/Acc/Start (FUNCTION 31 MODE 4)	White (+)Ignition2 Orange (+)Accessory Pink (+)Ignition Yellow (+)Start	White (+)Accessory2 Orange (+)Accessory Pink (+)Ignition Yellow (+)Start	White (+)Start2 Orange (+)Accessory Pink (+)Ignition Yellow (+)Start	White (+)Start Orange (+)Ignition2 Pink (+)Ignition Yellow (+)Start2	—	—
3	Tachless sensivity	Increase crank time ∞	+++++	++++ (By default)	+++	++	∞ Decrease crank time
4	Remote car starter runtime	Gas: 15 minutes Diesel: 30 minutes	Gas: 7 minutes Diesel: 14 minutes	Gas: 3 minutes Diesel: 6 minutes	—	—	—
5	Add Remote on FMH antenna series	Add Remote	—	—	—	—	—
6	Doorlock option	No	Unlock before remote-start & Lock after remote-start.	Lock after remote-start.	Unlock and relock after shut-down.	Relock 10 sec. after shut-down.	Disarm before shut down.
7	Ignition Doorlock option	No	Lock after foot-brake & unlock after key is turned OFF.	Unlock after key is turned OFF.	Doorlock Output at Ignition only.	—	—
8	Unlock Pulse Time	Single 0.25 sec	Double 0.25 sec	Single 4.0 sec	Single 2.5 sec	Single 1.5 sec	Single 0.75 sec
9	Active or Passive Alarm & Starter Kill.	Active Press LOCK to activate the Alarm and starter-kill.	Passive (Lock disabled) Arm alarm activate starter-kill 30(MODE 4), 60(MODE5), or 120(MODE6) sec. after the door is closed.	Passive (Lock enabled) Arm alarm, activate starter-kill and lock doors 30(MODE 4), 60(MODE5), or 120(MODE6) sec. after the door is closed.	Passive arm 30 seconds (by default if MODE 2 or 3 is activated).	Passive arm 60 seconds. (if MODE 2 or 3 is activated).	Passive arm 120 seconds. (if MODE 2 or 3 is activated).
10	Starter Kill Output. Required function 32 mode 4. - Dk.Blue (A8) = starter-kill.	Starter-kill & anti-grind	Anti-grind only	Relay normally open	—	—	—

	FUNC TION	MODE 1	MODE 2	MODE 3	MODE 4	MOD E 5	MO DE 6	
1 1	Soun d Con firmati on & LED anten na An tidém arreur	1st LO CK/U NLOC K silen t 2nd L OCK/ UNLO CK so und  _____ _____ _____  Anten na LE D active.	LOCK/U NLOCK  sound al ways.	Antenn a LED disable d.	Antenn a LED disable d with i gnition.	Confir matio n sound at LO CK on ly	Pani c mo de di sabl ed	
1 2	Outpu t horn /siren config uratio n	Horn(- ) only.	Siren(+) Output (E1) white	Siren(+) Output (E1) white and Horn(-)	Siren(-) only (A7)	—	—	
1 3	Confir matio n Pulse	Long	Short	—	—	—	—	
1 4	Alarm ON/O FF Starter ON/O FF	Alarm OFF Remote -starter ON	Alarm ON Remote-starter ON.	Alarm ON Remote-starter OFF	—	—	—	

15	Smart Arming Smart Doorlock Smart Lock pulse	Disable	(Unlock signal) Automatically LOCK and rearm alarm if door(s) are not opened after 30 seconds.	Automatic Lock when starter kill arms.	Lock pulse only when its Unlock	—	—	
16	Cold Start Timer	3 hours at -50c/Run time	1.5 hours at -50c/Run time	3 hours at -50c/5 minutes	1.5 hours at -50c/5 minutes	Cold time OFF	—	
17	—	—	—	—	—	—	—	
18	Diesel Mode	Disable	Enable (20 seconds)  The delay between Ignition power up and Starter (crank).	Enable (10 seconds)  Delay between Ignition power up and Starter (crank).	Enable  No delay between Ignition power up and Starter (crank).	Enable (5 seconds) Delay between Ignition power up and Starter (crank).	—	
19	Turbo timer	Disable	Run 2 minutes.	Run 4 minutes.	—	—	—	


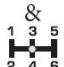
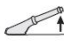




20	<p>Engine supervision:</p> <p>-Touchless</p> <p>-analog tach</p> <p>-Tach Data-Link-</p>	Touchless on crank and supervision Tach Data-Link.	Touchless only. (vehicles with automatic transmission only)	Start (Crank) 20 sec + Supervision by Data-Link Tach	Start (crank) 8 seconds on Touchless. (vehicles with automatic transmission only)	Start (Crank) 8 sec + Supervision by Data-Link Tach	Tach Data-Link only	
21	Start Attempts	2	1	3	—	—	—	
22	—	—	—	—	—	—	—	
23	Master RESET	RESET all programming options by default. (Retains already programmed remotely.)	—	—	—	—	—	
24	—	—	—	—	—	—	—	

25	Yellow/Black (A13) : Aux1 → LOCK	0.5 seconds & disarm alarm	0.5 seconds	10 seconds latch or until a button is pressed	20-second latch or until a button is pressed	30-second latch or until a button is pressed	Latch until shut down	
26	Hybrid mode	Gas / Diesel vehicle	Hybrid vehicle	—	—	—	—	
27	—	—	—	—	—	—	—	
28	—	—	—	—	—	—	—	
29	Alarm Duration	30 seconds	60 seconds	120 seconds	—	—	—	
30	Valet code	Ignition ON Valet button x 3 times.	Ignition ON Valet button x3 times and x1 times 3 seconds.	Ignition ON Valet button x4 times and x1 times 3 seconds.	Ignition ON Valet button x5 times and x1 times 3 seconds.	Ignition ON Valet button x6 times and x1 times 3 seconds.	Ignition ON Valet button x7 times and x1 times 3 seconds.	
			Special application – Function 2 (all option) not available.	White	(+) Parking Lights	White	White:(+) Parking- Lights	
					(+)		Orange	

31	Special application Programmable output (+)	No special application Priority on function 2	White wire (E1) : Enable at ground out, disable with vehicle ignition OFF.	White wire (E1) : Trunk Output	Orange	Accessory	Orange	Ign. 2	ge:(+) Parking lights	
					Pink	(+) Ignition	Pink	Ign. 1	Pink: (+) Ignition	
					Yellow	(+) Start	Yellow	(+) Start	Yellow:(+) Start	

	FUNCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6
32	Ground Out	Dk.Blue (Ground out): Shut-down 1 second after remote start run time.	Dk.Blue (Ground out): Shut-down 3 seconds after remote start run time.	Dk.Blue (Ground Out): Shutdown After	D.k Blue (Ground Out): Starter-Kill	D.k Blue (Ground Out): Arm / Rearm	Controlled by CAN learning
33	Manual transmission function	Manual transmission completed by door closed.	Automatically activated by hand - brake and Foot Brake	Manual sequence completed by locking the doors	Cancel ready mode when trunk open.	—	—
34	Trunk output	Pulse 0.5 seconds	Pulse 2.5 seconds	Unlock before trunk pulse 0.5 sec	Trunk Output at ignition only	—	—
35	Door unlock Special application	No special application	Activate vehicle ignition at unlock.	Activate vehicle ignition and accessory at unlock.	—	—	—
36	Activation/deactivation remote Valet Mode	—	by remote : FUNCTION → LOCK + UNLOCK or valet button	By Valet button only	—	—	—
37	Security Remote car starter Special application	No special application	Security ON: Shutdown Engine if the door is opened before UNLOCK is pressed. (Door trigger required).	—	—	—	—
38	System control by OEM Remote	Disable	Press 3x Lock to remote start	Start/Stop on trigger shock sensor	Alarm control by OEM Remote.	Press Lock, Unlock Lock to remote start	—
39	Temperature option	Disable	Enable : AUX1 activated at 50c when remote started (see function 25)	—	—	—	—
LEGEND: FUNCTION BY DEFAULT							

## MANUAL TRANSMISSION SEQUENCE FOR COMPATIBLE VEHICLES ONLY

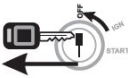STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6	STEP 7
 <p>Make sure that all doors are closed and the transmission is in the NEUTRAL position.</p> 	 <p>Press the brake</p>	 <p>While the engine is running. Engage the parking brake.</p>	 <p>Release the brake pedal</p>	 <p>Push the START button (3sec.). The Parking lights will flash once and then remain on.</p>	 <p>Remove the key from the ignition barrel. The vehicle will remain running with the Remote-Starter.</p>	 <p>Exit the vehicle and close all of the doors. The Remote-Starter will stop running once all the doors are closed.</p>

WILL DISABLE MANUAL TRANSMISSION SEQUENCE

- STANDARD
- Open any door(s)
- Open the hood
- Disengage the parking brake

**Note :** If the Parking lights flash 3 times when Remote-Starting, Ready Mode is not enabled.

TO ENABLE COLD START MODE

Press and release the FUNCTION button, within 12 seconds simultaneously press and and hold the LOCK and START buttons for 1 second. The parking lights will flash once.



- Press and release the FUNCTION button, within 12 seconds simultaneously press and and hold the LOCK and START buttons for 1 second. The parking lights will flash twice.
- Put the Remote-Starter/alarm into Valet
- Remote-Start the vehicle
- Open the hood
- Press the brake pedal
- Turn the key to the ignition position.
- Disable Ready Mode (manual transmission).

DISARM / ENTER / EXIT VALET MODE

			STEP 1	STEP 2		
to disarm the system		System armed : DEL flash		OR		
				3x	3x	System disarmed : LED is OFF
to enter and exit valet mode		System disarmed : LED is OFF	Insert the key and turn it to the ignition (ON/RUN) position.			
					Within 10 seconds press and release the Valet switch or the antenna button 3 TIMES.	System disarmed and in valet mode : LED is ON.

REMOTE START DIAGNOSTICS

Parking Lights flashes (before starting) :

- 3x Ready mode disabled
- 4x Valet mode activated (The LED is on)
- 5x Hood open

Parking Lights flashes (after Shutdown) :

- Normal stop (Brake, Park Brake)

- Runtime expired or shut down by transmitter
- No tachometer signal
- Hood open
- Over crank threshold (8 seconds)

## ALARM DIAGNOSTICS

### Parking Lights flashes (after disarm) :

- Door open – zone 3
- Shock sensor – zone 4
- Hood open – zone 5
- Trunk open – zone 6

## WARNING

**NOTICE** The manufacturer will accept no responsibility for any electrical damage resulting from improper installation of the product, including either damage to the vehicle itself or to the remote-starter module. This module must be installed by a certified technician including all of the supplied safety devices. Please note that this guide has been written for trained professional technicians, a certain level of skills and knowledge is therefore assumed. Please review the Installation Guide carefully before beginning any work.


## WARNING

By default, this system is setup for vehicles with a manual transmission. For vehicles with an automatic transmission, the safety wire loop on the main unit must be cut. Before proceeding to the installation, make sure that the vehicle does not attempt to start when the vehicle is in the “drive” or “reverse” position. If an automatic transmission vehicle starts when the transmission is in gear, ensure that the safety wire loop on the unit is not cut. Once the safety wire loop is cut, the system is considered an automatic transmission remote-starter indefinitely. Once a loop is cut all warranties, guarantees, and liability is immediately void if the unit is installed on a manual transmission vehicle. Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be installed by a qualified technician. This instruction guide may change without notice. To download the installation guide, user guide, or the latest quick installation guide, visit: [WWW.FORTIN.CA](http://WWW.FORTIN.CA)

**Technical support:** TEL: 514-255-4357 / 1-877-336-7797

Copyright © 2014-2021, FORTIN AUTO RADIO INC ALL RIGHTS RESERVED MADE IN CANADA

## Documents / Resources

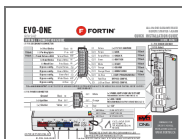

[FORTIN RFK942 EVO-ONE All-In-One Data Interface Remote Starter/Alarm \[pdf\] Installation Guide](#)  
 RFK942, EVO-ONE All-In-One Data Interface Remote Starter, EVO-ONE All-In-One Data Interface Remote Alarm

## References

- [Fortin | Bypass modules, remote starters and alarm systems](#)