

fosmon 
C-10725US
Mechanical 2-Outlet
Outdoor Timer



Fosmon C-10725US Mechanical 2-Outlet Outdoor Timer User Manual

[Home](#) » [Fosmon](#) » Fosmon C-10725US Mechanical 2-Outlet Outdoor Timer User Manual 

Contents

- [1 Fosmon C-10725US Mechanical 2-Outlet Outdoor Timer User Manual](#)
- [2 Product Diagram](#)
- [3 Specifications](#)
- [4 Package Includes](#)
- [5 Instructions](#)
- [6 Limited Lifetime Warranty](#)
- [7 References](#)

fosmon 

Fosmon C-10725US Mechanical 2-Outlet Outdoor Timer User Manual




Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Disclaimer Statement

We are not liable for any damage or destruction to personal properties that are contained inside or outside of the Fosmon product.

Product Diagram

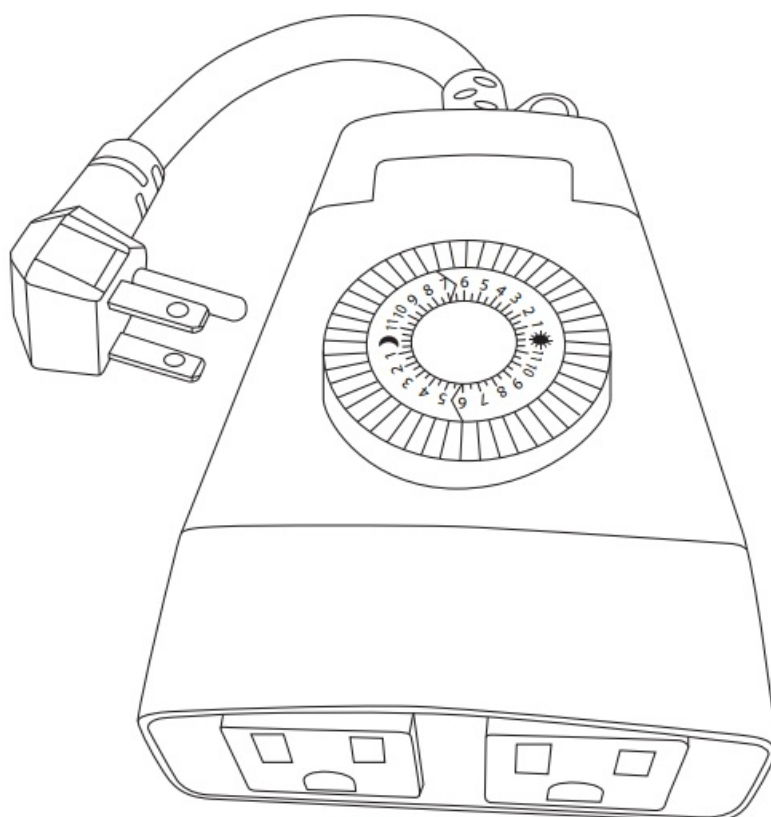

Specifications

- 110-125V AC outlet
- 15A MAX
- 125VAC 60Hz, 15A, Resistive
- 125VAC 60Hz, 15A, General purpose
- 125VAC 60Hz, 10A/1250W, Tungsten
- 125VAC 60Hz, TV-5, 3/4HP
- ETL Listed
- 3-prong female outlet x 2
- 24-hour, 30-minute interval programming
- Weather-resistant lid
- Built-in 7-inch 3-prong cord

Package Includes

- 1x Two Outlet Timer
- 1x User Manual

Instructions

To Program

- There are 48 push buttons around the dial. Each is for 30 minutes.
- When a push button is pressed down, the appliance connected to the timer will be on during that period.
- When a push button is lifted, the appliance plugged into the timer will be on during that period.

Set Time of Day

- Turn the dial clockwise one full revolution then advance until the arrow points to the current time.
- The dark area denotes PM and the white area denotes AM.

To Activate/Deactivate The Timer

- Turn the dial following the arrow's direction till the mark points to the current time.
- Press down the pins according to the working duration of home appliances as expected.
- In contrast, lift the pins, and the home appliance will be okay during that period (total 48 pins setting dial/30-minute interval, adjustable for 24hr).
- Plug the timer into a wall outlet and then plug the home appliance into the timer.
- Turn on the home appliance and start to work as expected timer settings.

Follow Us On Social Media



Limited Lifetime Warranty

This Fosmon product includes a limited lifetime warranty. Please visit our Fosmon website for more details.

Recycling the Product

To dispose of this product properly, please follow the recycling process regulated in your area.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



DO NOT RETURN THE PRODUCT

There are good days and there are bad days. It is our BAD if the product is not working, or if you are not happy with it. PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT. 1-833-3-Fosmon ([833-336-7666](tel:833-336-7666)) [612-435-7508](tel:612-435-7508) support@fosmon.com

Download PDF: [Fosmon C-10725US Mechanical 2-Outlet Outdoor Timer User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.