


FOURAIR MWIRR-A1 WIRELESS  
IR REPEATER



## FOURAIR MWIRR-A1 Wireless IR Repeater User Manual

[Home](#) » [FOURAIR](#) » FOURAIR MWIRR-A1 Wireless IR Repeater User Manual 

### Contents

- [1 FOURAIR MWIRR-A1 Wireless IR Repeater](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PACKAGE CONTENTS](#)
- [5 PRODUCT OVERVIEW](#)
- [6 OPERATING INSTRUCTIONS](#)
- [7 ADHESIVE PLACEMENT](#)
- [8 TROUBLESHOOTING](#)
- [9 WARRANTY INFORMATION](#)
- [10 Frequently Asked Questions](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

# FOURAIR

### FOURAIR MWIRR-A1 Wireless IR Repeater



### Product Information

**Specifications**

- Compliance: Part 15 of the FCC Rules
- Conditions: Must not cause harmful interference, must accept any received interference
- RF Exposure: Meets general RF exposure requirements
- Usage: Portable exposure without restriction

**Product Usage Instructions**

**Compliances and Conditions**

Ensure that the device is operated in compliance with Part 15 of the FCC Rules. The device should not cause harmful interference and must accept any interference it receives.

**RF Exposure**

The device has been evaluated to meet general RF exposure requirements. It can be used in portable exposure conditions without any restrictions. However, it is recommended to maintain a safe distance from the device during operation to minimize exposure.

**Modifications**

 
 
Warning: Any changes or modifications not expressly approved by the responsible party for compliance could void the user’s authority to operate the equipment. Avoid making any unauthorized modifications to the device.

**PACKAGE CONTENTS**

- 1 X IR Receiver Unit
- 1 X IR Emitter Unit
- 1 X IR Receiver Extension Cable
- 1 X IR Emitter Extension Cable
- 2 X Power Adapters
- 2 X USB Power Cables
- 1 X User Manual
- 2 X 3M Adhesive


Input Voltage	SV DC
Receiver Standby Power	<0.2W
Emitter Standby Power	<0.2W
IR Frequency	20-60KHz
RF Frequency	433MHz

**PRODUCT OVERVIEW**

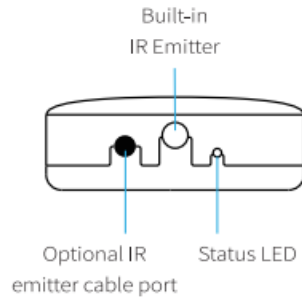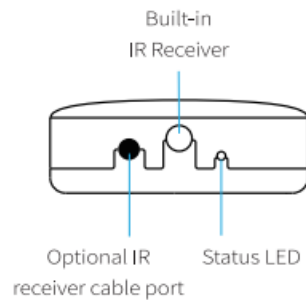

## OPERATING INSTRUCTIONS
 
### Typical Installation

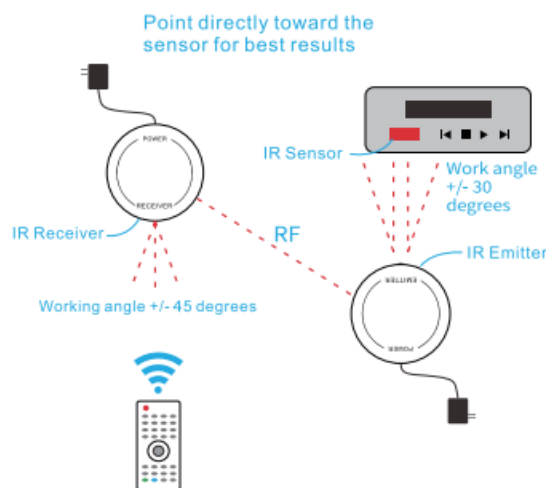


**Step One:** Plug the power adapter and connect it to the Infrared Receiver and the Infrared emitter via the USB power cables, the LED indicator of the receiver and the emitter will blink twice.

**Step Two:** Put the infrared receiver line-in-sight of the IR remote controller, and ensure that the IR remote controller has a clear line of sight to the IR receiver bud, if the receiver receives an available signal, the LED indicator of the infrared receiver will blink.

**Step Three:** Put the infrared emitter line-in-sight of the device that needs to be controlled, ensure that the infrared emitter bud has a clear line of sight to the IR “eye” of your device, if the emitter transmits has an available signal, the LED indicator of the infrared emitter will blink.

**Note:** it is easy to mistake the IR cable on the front for the port. please ensure that the power adapter is plugged into the appropriate port at the back and in place.

### Optional The IR Receiver and The Emitter Extension Cable

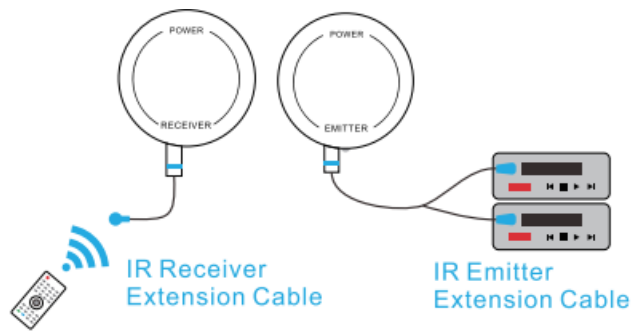 


**Step One:** If you want to extend the reach or hide the IR receiver, connect the IR Receiver Extension Cable to the device.

**Step Two:** If you want to extend the reach or hide the IR Emitter, connect the IR Emitter Extension Cable to the device. The IR emitter cable can attach to the IR "eye" of the device you wish to control.

**Note:** Please keep in mind to place the extension cable's emitter bud attached to the IR "eye" of the device no further than 2 inches for the best signal.

## ADHESIVE PLACEMENT

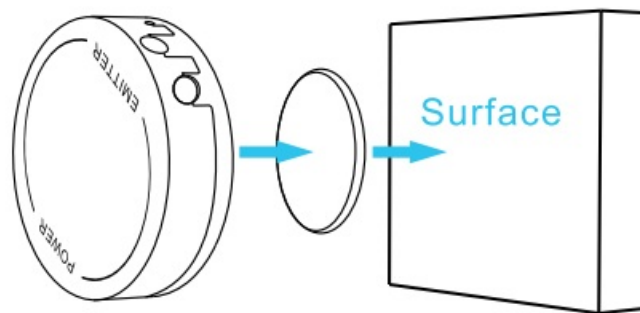 

To keep the IR Infrared receiver and emitter in one place, we have included adhesive.

## TROUBLESHOOTING

The LED indicator of	Maybe you are using	This infrared receiver only
the receiver does not	the non-infrared signal	supports the IR remote
blink	IRremote controller,	controller which can
	such as the Bluetooth	receive a infrared
	remote controller, the	signal,not suitable for the
	RF remote controller, or	non-infrared signal IR
	the WiFi remote	remote controller,please
	controller.	contact our customer
		service for help!
	The IR remote	Please move the IR remote
	controller is beyond a	controller close to the
	available range to the	infrared receiver.
	infrared receiver.	
	The IR Remote	Please adjust the
	controller is misaligned	installation direction of the
	with the infrared	infrared receiver or the
	receiver bud	direction of the IRremote
		controller to ensure that
		the IR remote controller is
		aligned with the infrared
		receiver bud.
The LED indicator of	The infrared emitter is	Please shorten the
the emitter does not	beyond a available	distance between the
blink.	range to the infrared	infrared emitter and the
	receiver.	infrared receiver.
	The infrared emitter is	For example, a metal
	placed inside the	cabinet will shield the
	object that shields the	wireless signals and
	signal.	shorten the distance of
		wireless transmission,so
		please try to stay away
		from the metal shields.

The controlled device does not work	The infrared emitter is too far away from the receiver bud of the controlled device.	The infrared emitter need to be aligned with the controlled device, and keep in mind they are no further than 16 inches.
	You are using the extension cable of the emitter, and the emitter is too far away from the receiver bud of the controlled device.	Please keep in mind to place the infrared emitter bud to the controlled device no further than 2 inches.
Other unexpected problem	Unknown reasons	Any issues, just feel free to contact our customer service, your satisfaction is the greatest motivation to us.

## WARRANTY INFORMATION

If you have any product questions, or you have any product issues, please contact our e-mail: [supportfourair@l63.com](mailto:supportfourair@l63.com)

Your name: \_\_\_\_\_ Order number: \_\_\_\_\_

E-mail: \_\_\_\_\_ Phone: \_\_\_\_\_

## Frequently Asked Questions


### Q: Can I modify the device without approval?

A: No, any changes or modifications not approved by the responsible party for compliance may void your authority to operate the equipment.

### Q: Is there a restriction on the device's usage?

A: The device can be used in portable exposure conditions without restriction, following the compliance and conditions outlined in the manual.

## Documents / Resources

	<p><b><a href="#">FOURAIR MWIRR-A1 Wireless IR Repeater</a></b> [pdf] User Manual  2A3V5-MWIRR-A1, 2A3V5MWIRRA1, MWIRR-A1 Wireless IR Repeater, MWIRR-A1, MWIRR-A1 IR Repeater, Wireless IR Repeater, IR Repeater, Wireless Repeater, Repeater</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.