

FoxESS H3 Firmware Upgrade Instructions

Home » **FoxESS** » **FoxESS** H3 Firmware Upgrade Instructions

FoxESS H3 Firmware Upgrade Instructions



Contents

- 1 H3 Firmware Upgrade Instruction
 - 1.1 Tools Preparation:
- 2 Upgrade Steps
- **3 CUSTOMER SUPPORT**
- 4 Documents / Resources
- **5 Related Posts**

H3 Firmware Upgrade Instruction

Tools Preparation:

1. Inverter to be upgraded



2. USB disk(provided by FoxESS)



3. DC Source





Upgrade Steps

• Step 1:



• Step 2:

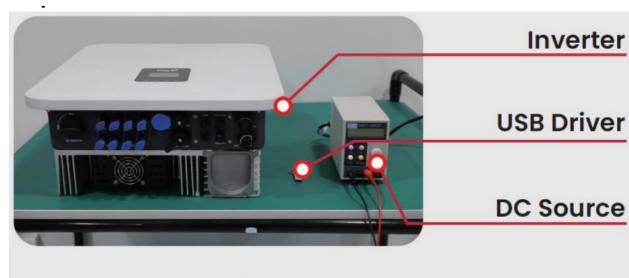

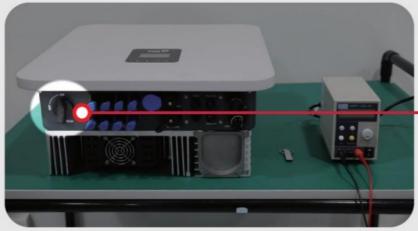


Turn on the DC SWITCH


• Step 3:




• Step 4:

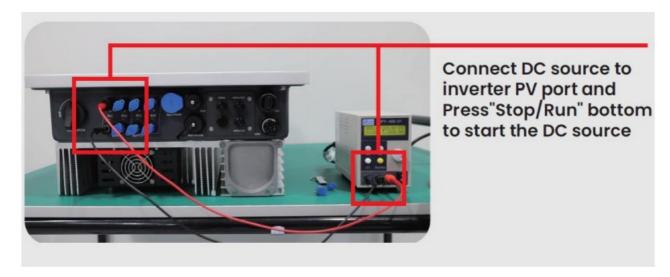

• Step 5:

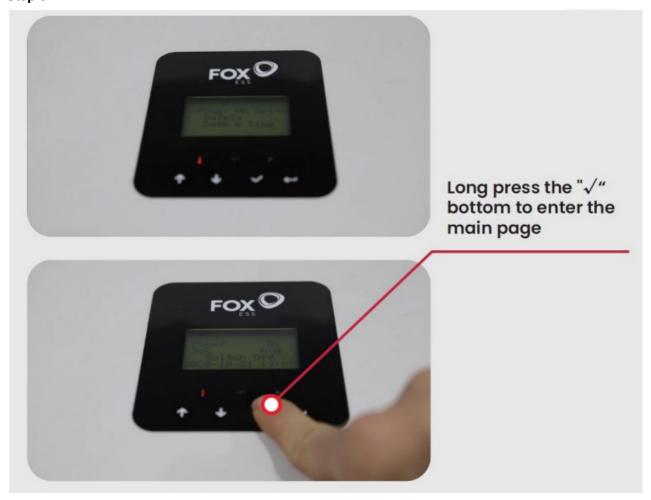

• Step 6:

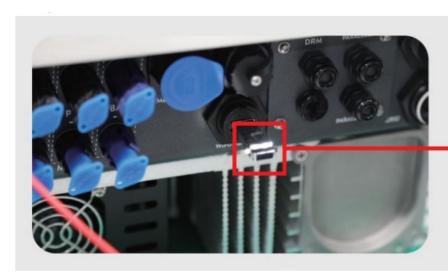

Insert USB drive

• Step 7: Upgrade the master



Select the "Main CPU" to process the upgrade



Press "√" to start the upgrade

• Step 8: Upgrade the master, and then upgrade the HMI



• Step 9:

By this step, the upgrade has been completed, and the next step is to check



• Step 10: Version check



Remove the USB drive



Press "√" from the main page



Select "About" "Inv Ver" to double
confirm if the
firmware already
been upgraded to
right version




please make sure the Master version is 1.67

and the hmi version is 1.56



Press"√"from the main page and go "setting"

Enter the passenger "0000"

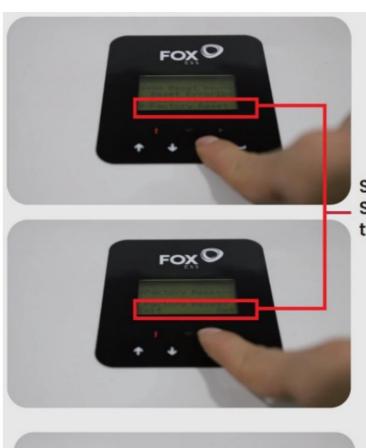

Select "factory reset" Select "set" to rest the inverter



Press "down" bottom and enter into "reset"



Select "factory reset" Select "set" to rest the inverter By this step, all work has been completed. Please remove the power supply and pack the inverter! Thank you very much!

CUSTOMER SUPPORT

FoxESS, No. 11 Lijiang Road, Xinwu District, Wuxi City, Jiangsu Province, China 214028



FoxESS Co. I Ltd.

No. 11 Lijiang Road, Xinwu District, Wuxi City, Jiangsu Province, China 214028



Documents / Resources



FoxESS H3 Firmware Upgrade [pdf] Instructions H3, H3 Firmware Upgrade, Firmware Upgrade

Manuals+, home privacy