



Foxwell Connection Tester User Guide

[Home](#) » [Foxwell](#) » Foxwell Connection Tester User Guide 

 


Contents

- [1 Vehicle/Battery Connection](#)
- [2 Tester Descriptions](#)
- [3 Updating](#)
- [4 Retrieve I/M](#)
- [5 To Print Test Results](#)
- [6 Contact Us](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Vehicle/Battery Connection

OBDII/EOBD Test

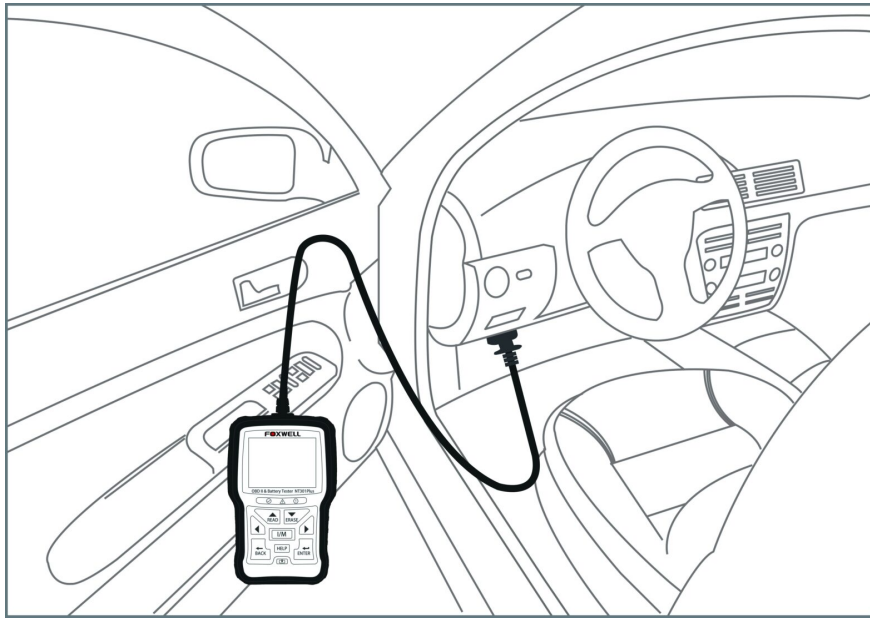


1. Locate the data link connector (DLC) under the dash on the driver side of the vehicle.
2. Plug the tester to the vehicle DLC with OBDII adapter.
3. Switch the ignition key to the ON position.
4. Choose OBDII/EOBD APP to start test.


Battery Test

If you are testing the battery inside a vehicle, make sure all accessory loads are cut off, the key is not in the ON position and the doors are closed.

 
1. Connect the current clamp cable to the OBDII adapter of the scanner.

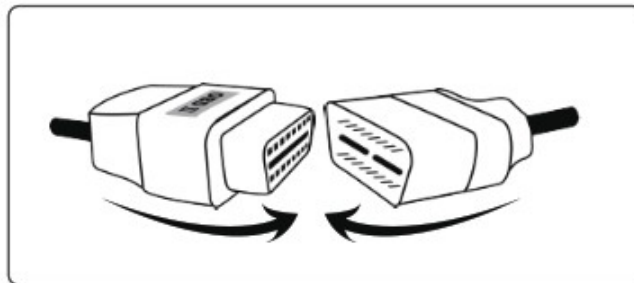

 
2. Clean the battery posts or side terminals.

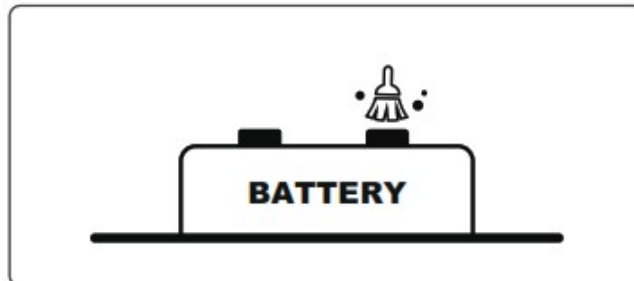

 3. Connect the red clamp to the positive (+) terminal and the black clamp to the negative (-) terminal.

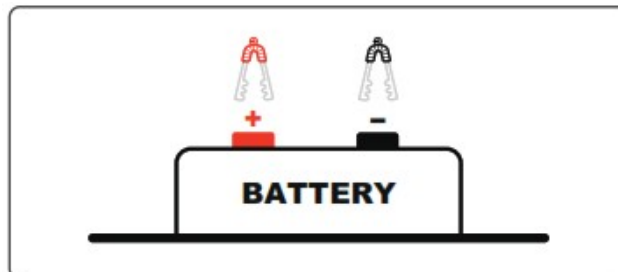

 4. When the tester is correctly connected, choose Battery App to start test.

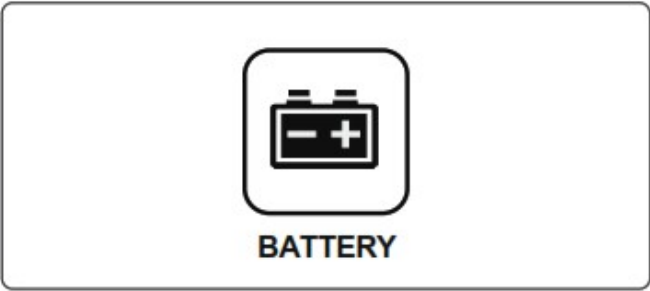


Tester Descriptions



<p>A. OBDII Cable</p> <p>B. LCD Display</p> <p>C. Green LED Display – indicates the engine system is working normally (all monitors on the vehicles are active and performing their diagnostic testing), and no DTCs are found.</p> <p>D. Yellow LED Display – shows the tool finds a possible problem. Pending DTCs exist or/and some of the vehicle’s emission monitors have not run their diagnostic testing.</p> <p>E. Red LED Display – indicates there are some problems in one or more of the vehicle’s systems. In this case, the MIL lamp on the instrument panel is on.</p>	<p>F. UP Key</p> <p>G. DOWN Key</p> <p>H. LEFT SCROLL KEY</p> <p>I. RIGHT SCROLL KEY</p> <p>J. One Click I/M Readiness Key – drive cycle verification.</p> <p>K. BACK Key</p> <p>L. ENTER Key</p> <p>M. Power Switch</p> <p>N. HELP Key – accesses to the I</p> <p>O. USB Port</p> <p>P. Battery Clamp Cable – connection.</p>
---	--

 Updating

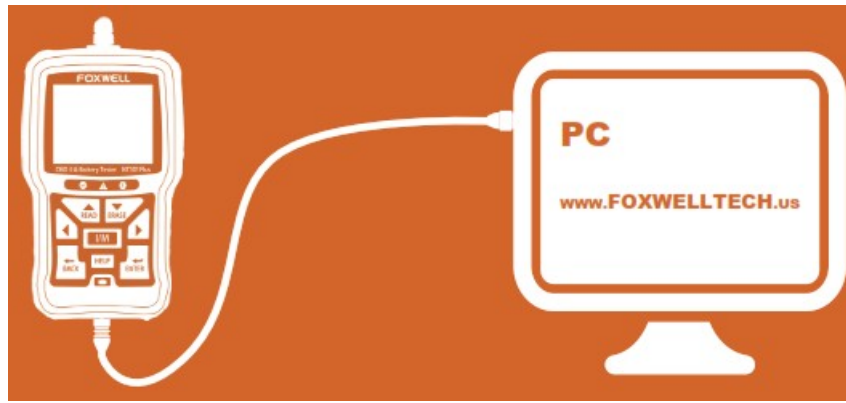

- Do not disconnect the Tester from computer or power off the computer during the process of updating.
- No Registration Required
- PC : Windows 7, Windows 8 and Windows 10 supported

The Upgrade Process


Download the update tool NT Wonder and install it.	
Enable NT Wonder and connect NT301 Plus to the computer with USB cable.	
Click Update online or Update offline to start update according to the software version conditions.	
An Update Finished message displays when the update is completed.	

Retrieve I/M

MIL		Malfunction Indicator Lamp	IGN		Ignition
DTC		Diagnostic Trouble Codes	PdDTC		Pending Diagnostic Trouble Codes
MIS		Misfire	EVAP		Evaporative System
FUE		Fuel System	AIR		Intake Air System
CCM		Comprehensive Component Monitor	O2S		Oxygen Sensor
CAT		Catalyst	HRT		Oxygen sensor heater
HCAT		Heated Catalyst	EGR		Exhaust Gas Recirculation

To Print Test Results

 The test results stored in the tester and can be printed through computer. Test data can only be imported to your computer through NT Wonder.

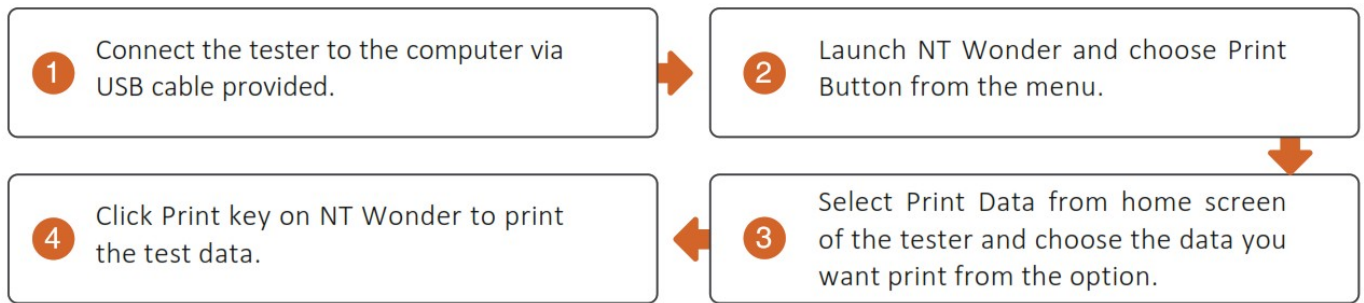


Contact Us

For service and support, please contact us.

 WebSite:	www.foxwelltech.us
 E-mail:	amazonsupport@foxwelltech.com
 Service Number:	+86 – 755 – 26697229
 Fax:	+86 – 755 – 26897226

Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.

Documents / Resources

	Foxwell Connection Tester [pdf] User Guide Connection Tester, Tester
---	---

References

-  FOXWELLTECH.US