

Foxwell NT630Plus Scanner Code Reader Diagnostic Tool **User Guide**

Home » Foxwell » Foxwell NT630Plus Scanner Code Reader Diagnostic Tool User Guide 🖺





QUICK START GUIDE Shenzhen Foxwell Technology Co., Ltd. For Handheld Scanners

Contents

- 1 To Register Through Website
- **2 Vehicle Connection**
- 3 To Register Via Update Client
- **4 Serial Number**
- **5 Diagnostic Operations**
- 6 Powering up the scanner
- 7 Update
- **8 To Print Test Results**
- 9 Contact Us
- 10 Documents / Resources

To Register Through Website

1. Visit Foxwell website www.foxwelltech.us and press Register icon, or go to the registration page by selecting Support from home page and then click Register.



2. Enter one of your email addresses as your user ID and click the Send Code button. We will send 0 a 4-digit verification code to the email you just entered. Find the security code in your mailbox, input the code, create a password and click Free Registration to complete.



3. Sign in to the Member Center, click New 0 Registration, input the right serial number and click Submit to activate the product.



Vehicle Connection

- 1. Locate the data link connector(DLC) under the dash on the driver side of the vehicle.
- 2. Connect the diagnostic cable to the scanner and plug it to the vehicle DLC.
- 3. Switch the ignition key to the ON position.
- 4. Go to Main menu to choose diagnostic software to start test.




To Register Via Update Client



- 1. Visit our site <u>www.foxwelltech.us</u> and then click OSupport at the home page. Click Tools at the support page and find the product you have to download the update client.
- 2. Unzip the file and find the installer to install the update client to your computer.
- 3. Click the desktop icon to launch the update client VIP and click Register icon to create a Foxwell ID.
- 4. Enter one of your email addresses as your user ID n and click the Send Code button. We will send a 4-digit verification code to the email you just entered.
- 5. Find the security code in your mailbox, input the O code, create a password and click Free Registration to complete.
- 6. Sign in your Foxwell account and select 0 Activation. Input a serial number or click the Read icon to read the SN from the scanner. Click Activate button to activate.

Serial Number


To find the serial number:

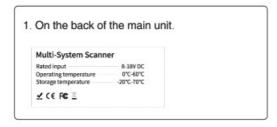




Diagnostic Operations


- Before start diagnosis, please make sure:
 - 1. The ignition switch is turned to ON position.
 - 2. The engine is off.
 - 3. The vehicle battery voltage is between 10-14 volts.
 - 4. The scanner is correctly connected to the vehicle.
- Don't connect or disconnect the equipments while the ignition is on or the engine is running.

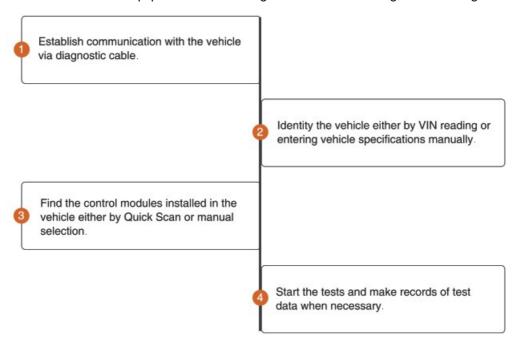

Powering up the scanner

  Before using the scanner, make sure to provide power to the scanner The unit operates on any of the following sources:





Update

Before updating, please make sure you have created a Foxwell ID and your network works correctly.




1. Launch the update tool FoxAssist by double 0 clicking the desktop icon and login with your Foxwell ID and

password.

- 2. Connect the TF card to the computer with the TF '-7 card reader provided.
- 3. Select Download then all the updates applicable in to your tool display. Click the check box(s) in front %. of the software you wish to update and then click Upgrade button to start updating.

To Print Test Results

Vehicle test results stored in the SD card can be printed through computer.

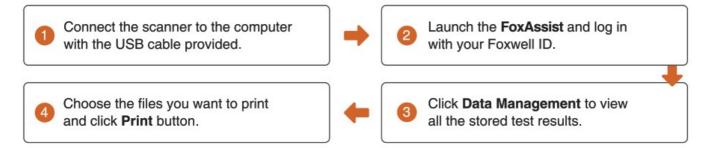

Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.

Contact Us

For service and support, please contact us.



Service Number : + 86 – 755 – 26697229

Fax: +86 - 755 - 26897226



http://www.foxwelltech.us/register.html

REGISTER YOUR PRODUCT AT httwitwvAy.toxwentech.ustregister.html



Documents / Resources



<u>Foxwell NT630Plus Scanner Code Reader Diagnostic Tool</u> [pdf] User Guide NT630Plus Scanner Code Reader Diagnostic Tool, NT630Plus, Scanner Code Reader Diagnostic Tool, Code Reader Diagnostic Tool, Reader Diagnostic Tool, Diagnostic Tool

Manuals+,