

FOXX 2AQRM-C10 Smart Tablet Computer User Manual

Contents

 
- [1 FOXX 2AQRM-C10 Smart Tablet Computer](#)
- [2 PRODUCT HEX-VISION IMAGE](#)
- [3 CARD INSERT MANUAL](#)
- [4 NETWORK CONNECTION](#)
- [5 CAMERA](#)
- [6 SECURITY INFORMATION](#)
- [7 SPECIFICATIONS](#)
- [8 Safety Statement](#)
- [9 Documents / Resources](#)




FOXX 2AQRM-C10 Smart Tablet Computer



PRODUCT HEX-VISION IMAGE

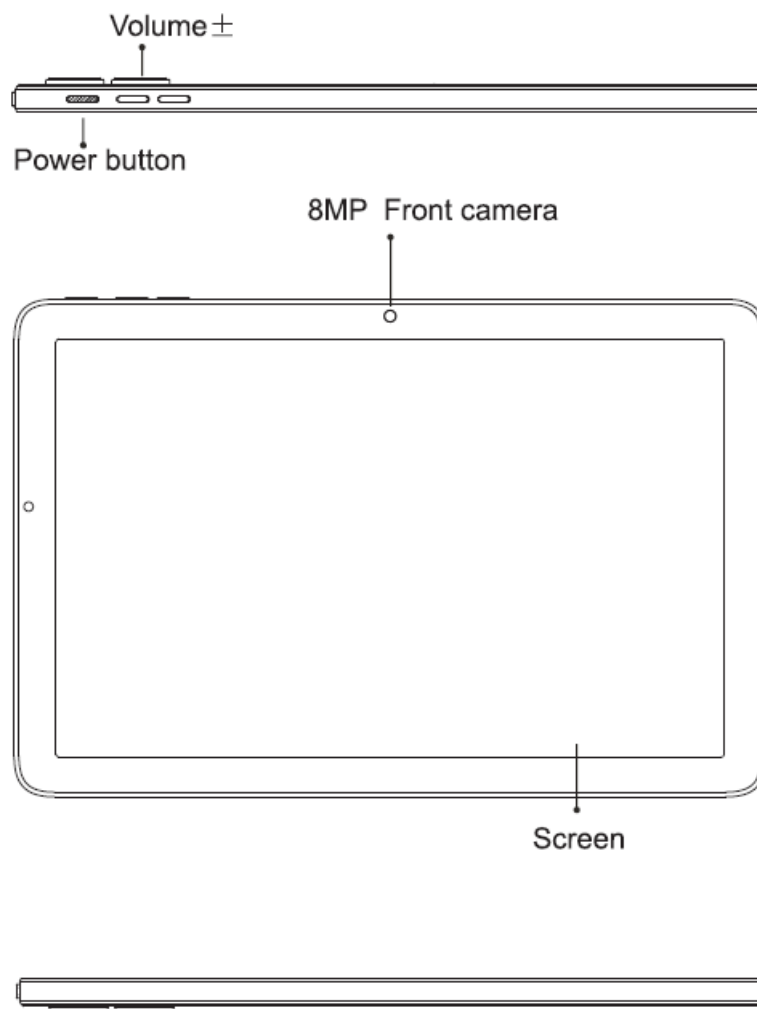

 VOLUME BUTTON: Short press to adjust the volume.

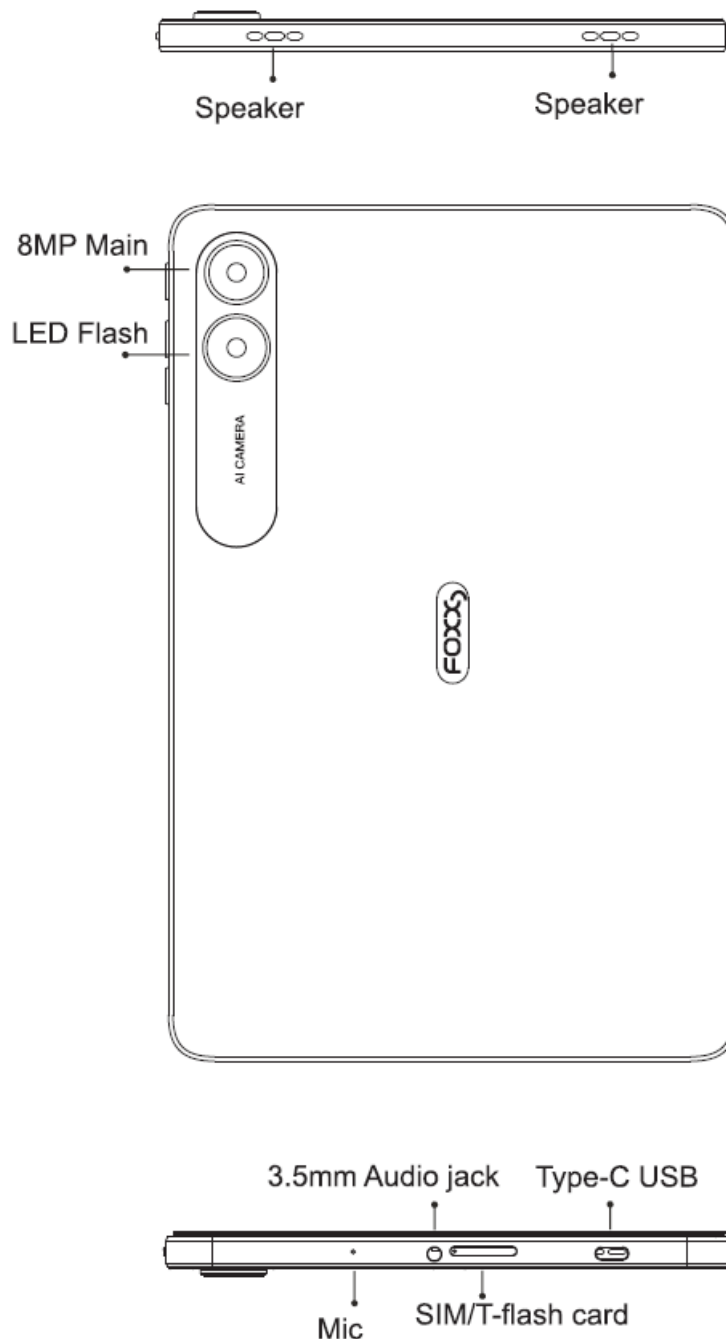

POWER BUTTON: Long press to turn on the device; When the device is on, short press Power Button to shutdown or turn on the screen.

 
CARD INSERT MANUAL

Insert Micro-SIM Card

Insert a Micro SIM card. Insert the Micro-SIM card with the chip facing down. Note the direction of cutting a Micro-SIM card into a slot.

Reminder:

Please use standard Nano-SIM card. Please don't use a non-standard card that is hand-cut, in order to prevent the SIM slot and card tray from being damaged and card-rejecting situations that may cause damage to the tablet.

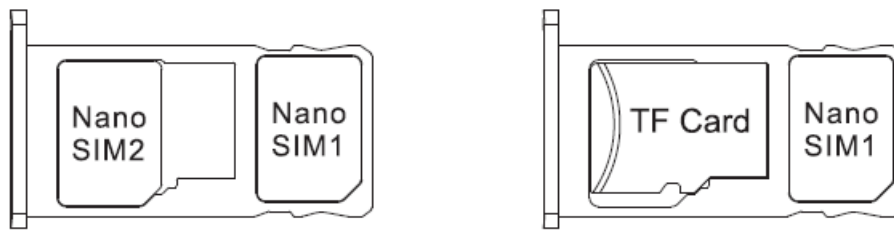

TF Card Installation

Please place the metal contact of the TF card adown, be aware of the direction of the cut edge. Place the card onto the tray and insert into the device.

Reminder:

Please turn off the tablet before changing or replacing the TF card. TF card does not come with the tablet please purchase separately.

Please do not plug in and out of the SIM card tray when the tablet is on. Be careful when using the slot thimble from scratch in the tablet.

SIM MANAGEMENT

Please insert the SIM card to the SIM slot. have device default to the 4G value. Or you can choose your preferred network types of 4G/3G/2G via Setting > Network & Internet > Mobile network > Preferred network type.

NETWORK CONNECTION

Connecting WIFI

Into the setting of WIFI via Settings > Network & Internet > Wi-Fi When WIFI is on, a list available WiFi connection will appear.

Click on the one you want to connect to, enter the password if the network is encrypted, then click Connect. When it's a public network, just click Connect. When the network shows "connected", it is available to use.

Bluetooth Function

Into the setting of Bluetooth function via Settings > Connected devices >

Bluetooth Enable the Bluetooth function by clicking the Menu Button then select "Refresh", then the tablet will search for available Bluetooth devices for pairing and list on the screen. Click on the one you want to pair with, then click "Pair "on the dialog pop-up. Documents are available for transmission after Bluetooth pairing.

Reminder:

Slide down the status bar to open the shortcut switches for Bluetooth and other functions.

WIFI Hot-spot Setting

Click on via Settings > Network & tethering > Wi-Fi hotspot to turn on the Portable WIFI Hot-spot functioning.

When setting up WIFI hot-spot, enter your user name in "Network Name" and password, then click Save.

Reminder:

Please enable the Data Connection before enabling the network sharing function. Your mobile traffic will be shared by other devices, so please use it carefully. The signal of the WIFI hot-spot depends on the signal strength and devices.

CAMERA

Aim the camera at the shooting object, the tablet will start focus automatically; or you can click on the screen to choose the object you want to focus on, then click "Capture" icon to take photos.

You can also choose other modes such as video recording, beautifying, panorama to take photos/videos.

SECURITY INFORMATION

Security information (including BS, ES, battery security information) of third-party software installation and function may vary in different regions or by different hardware specifications.

Vortex holds disclaimer for the performance problem or incompatibility caused by third-party applications, registry editing, OS software modifying. Customizing the OS may cause the device or some applications fail to work properly.

- Please prevent the device or the battery in extreme cold/hot condition. Then extreme temperature will lead to deformation of the tablet and reduce the charging capacity and battery life.
- Please only use the custom designed and approved battery and recharger by Vortex. Incompatible battery and recharger may cause damage to the tablet. Please abide by local regulation when disposing of the used batteries and tablet.
- Please do not place the battery or the tablet onto or inside heating devices such as microwave, oven or radiator. The battery may explode if it gets too hot.
- Please do not crush or pierce the battery. Prevent the battery from getting high pressure from outside, it may cause internal short and overheating.

SPECIFICATIONS

BASIC INFORMATION

- Model C10
- Operating System Android™ 13
- CPU MT8766 4x Arm Cortex-A53 2.0GHz
- GPU IMG GE830@660MHz
- RAM 4GB
- ROM 64GB
- Battery 6000mAh

Display

- Screen Size 10.1 inch
- Resolution 1280*800 Pixels
- Touch Capacitive multi-touch

Cameras

- Rear Camera 8MP Camera
- Front Camera 8MP Camera

Connection(I/O)

- Band GSM:82/5
WCDMA:82/5
FDDB2/5/12/13

TDDb4

- SIM/TF card 2 Nano SIM Card Or 1 Nano SIM Card and 1 TF Card
- WiFi IEEE802.11 a/b/g/n/ac
- Bluetooth Bluetooth 5.0
- GNSS GPS/Glonass/Galileo
- FM YES
- Earphone Port 3.5mm
- USB Port Type-C USB

Other Features

- Video File Format 3GP/MPEG4,etc
- Audio File Format WAV/MP3/AAC/AMR/MIDI/APE/WMA,etc
- Card Extend Support TF card up to 256 GB
- Language Support Multi-language
- Sensor G-Sensor

In the box

- 1*tablet
- 1 *Type-c Cable
- 1 *Power Adapter
- 1 *Protective Case
- 1*SIM Tray Ejector
- 1 *Quick Start Guide

Safety Statement

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Warning

Operation of 5150-5250 MHz is restricted to indoor use only. This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:


1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

The device has been tested and comply with FCC/ISED SAR limits.

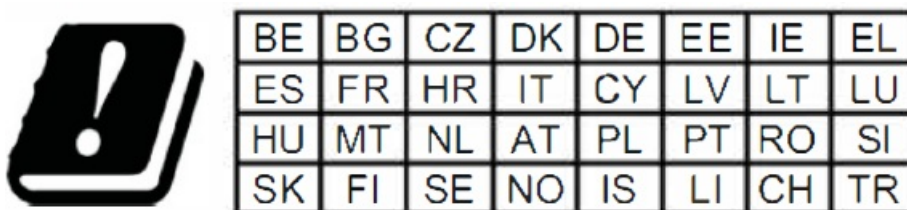

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

Documents / Resources

	<p>FOXx 2AQRM-C10 Smart Tablet Computer [pdf] User Manual</p> <p>2AQRM-C10 C10 Smart Tablet Computer, 2AQRM-C10, C10 Smart Tablet Computer, Smart Tablet Computer, Tablet Computer, Computer</p>
---	--