




FREAKS AND GEEKS 200043 Wiimote Type Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS AND GEEKS 200043 Wiimote Type Controller User Manual 

FREAKS AND GEEKS

USER MANUAL WII REMOTE

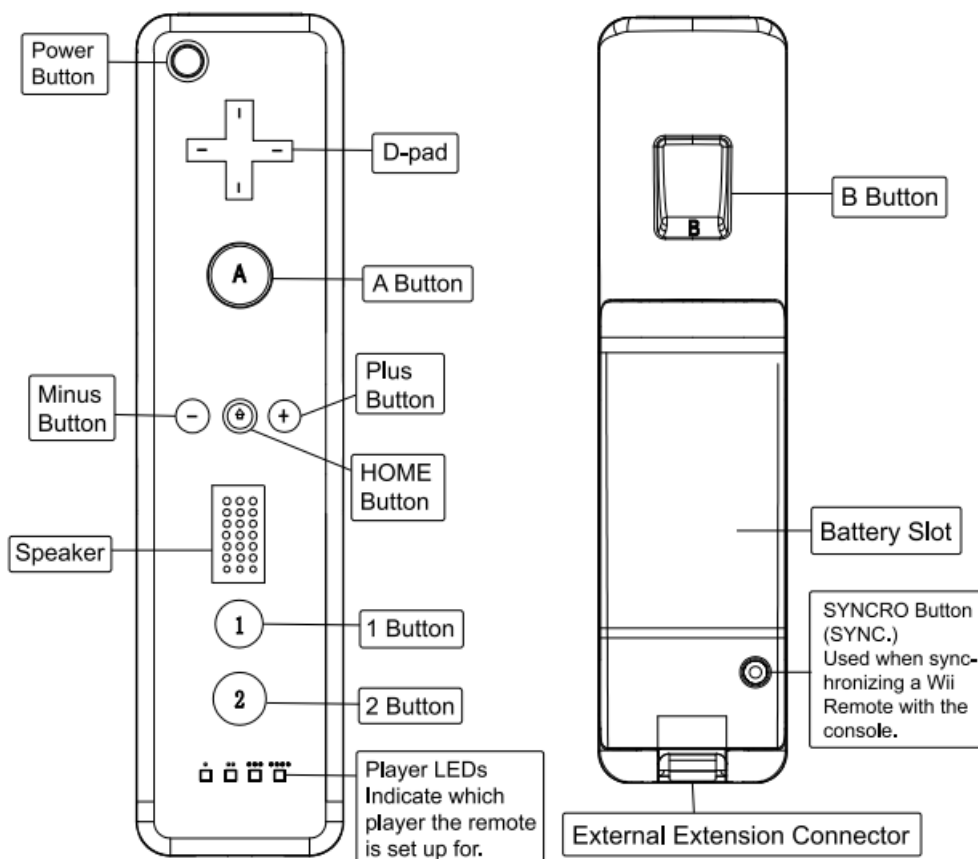

Contents

1 Connect to the console

2 Documents / Resources

2.1 References

Connect to the console

Wii Console : Push the small red button on the controller (where the batteries go) then push the red button on the Wii console (under the little door), then you're able to synchronize with Nintendo Wii.

WiiU Console : Connect the WiiU to enter the Main Interface. Press the white "code" button on the front of the host. Insert the batteries into the Wii Gamepad, connect it to the Left Controller, press the red "SYNC" button located near the battery slot on the back of the Gamepad to pair this Gamepad with the WiiU Host.

Notes

Recommended distance for using the cursor: 50cm – 6m (visual sensitivity change).

Recommended distance for using the sound: >6m (without obstacles)

Warning

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested.
- People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack.
If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

Documents / Resources



[FREAKS AND GEEKS 200043 Wiimote Type Controller](#) [pdf] User Manual
200043 Wiimote Type Controller, 200043, Wiimote Type Controller, Type Controller, Controller

References

- [User Manual](#)

