



FREAKS AND GEEKS Controller Right for Switch Instruction Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS AND GEEKS Controller Right for Switch Instruction Manual

Contents [[hide](#)]

- 1 FREAKS AND GEEKS Controller Right for Switch
- 2 Getting Started
- 3 PRODUCT DESCRIPTION
- 4 HOW TO DIFFERENTIATE CONTROLLERS
- 5 HOW TO CHARGE THE CONTROLLER
- 6 FIRST CONNECTION
- 7 HOW TO CONNECT
- 8 HOW TO RECONNECT
- 9 SPECIFICATIONS
- 10 STAND-BY
- 11 WARNING
- 12 SOFTWARE UPDATE
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts




FREAKS AND GEEKS Controller Right for Switch



Getting Started

- Make sure you read this guide,before using the Controller.
- Reading this guide will help you learn to use the Controller properly.
- Store this guide safely so that you can use it in the future.


PRODUCT DESCRIPTION

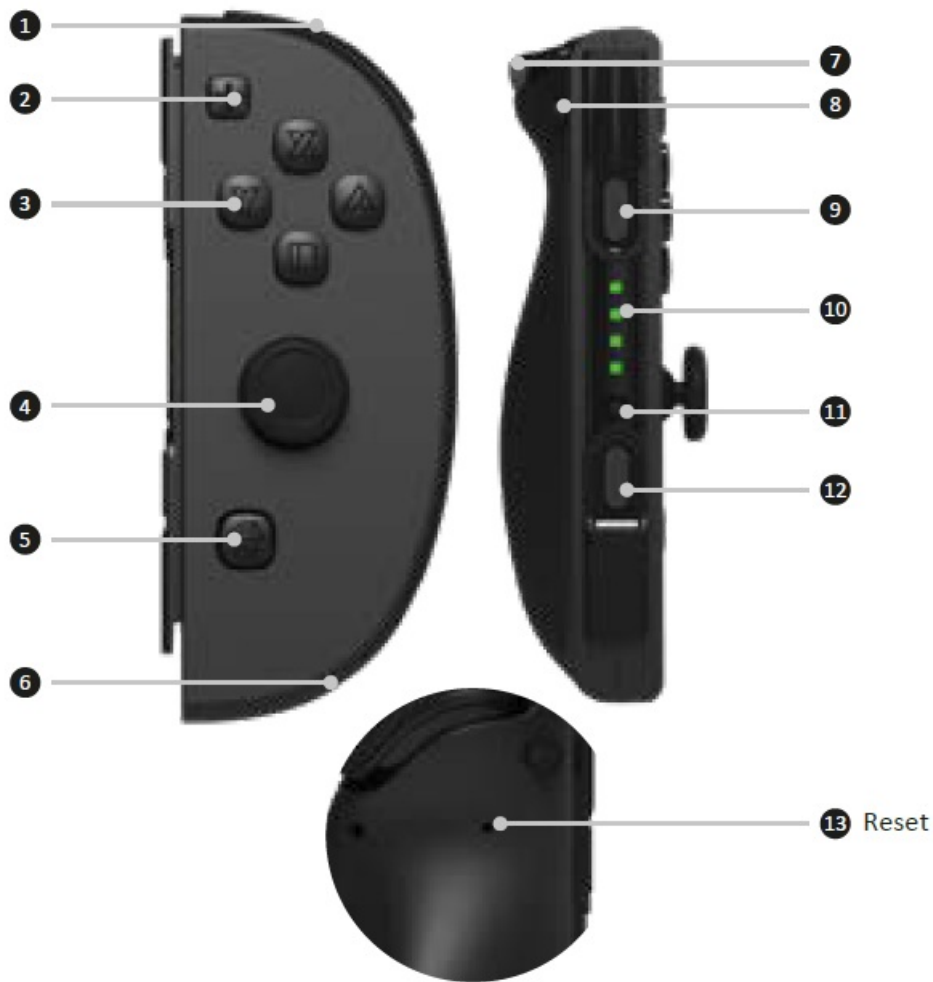

1. R button
2. + button
3. A/B/X/Y buttons
4. Right stick
5. HOME button
6. Charging port
7. ZR button
8. Release button
9. SR button
10. LED player indicators
11. Mode button
12. SL button

HOW TO DIFFERENTIATE CONTROLLERS


The controller on the left has a – button at the top right, the controller on the right has a + button at the top left.

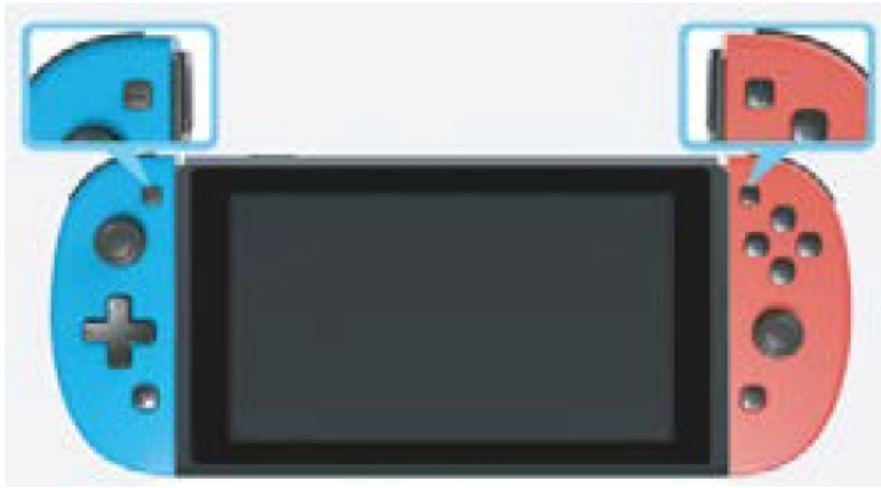

HOW TO CHARGE THE CONTROLLER

USB charging only:

Connect the controllers to type-C cable. The 4 LEDs flash slowly during charging. When charging is complete, all 4 LEDs remain off. When the controllers are charging, make sure not to connect them to the console to avoid damage.

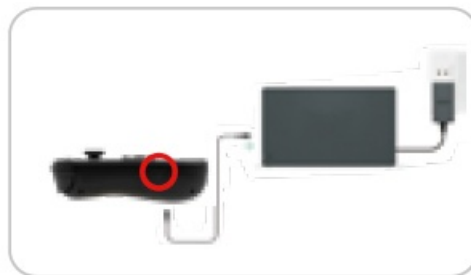

FIRST CONNECTION

1. **Console settings:** the Bluetooth connection must be enabled Turn on the console, go to the “Console Settings” menu, then select “Flight Mode” and make sure it is set to Off and that “Communication with controllers (Bluetooth)” is enabled, otherwise set it to On.



2. **Connecting to the console**

In the “Home” menu, select “Controllers” and then “Change grip/order”. Press and hold the Mode button (11) on the left or right controller for 3 seconds. The LED flashes rapidly and switches to Bluetooth sync mode. As soon as both controllers appear on the screen, follow the instructions on the screen. Your controllers are now synchronised and working on your console.



HOW TO CONNECT

Handheld mode

Slide the controller open until make a sound, ensuring that it's correctly oriented and inserted all the way.



Clips Mode



HOW TO RECONNECT

ACTIVATION :

To activate the controllers press UP / DOWN / LEFT / RIGHT on the left controller and A / B / X / Y on the right controller. Once connected, the LEDs remain steady

DISABLING:

To deactivate the controllers press and hold the MODE button (11) for 3 seconds

SPECIFICATIONS

- Battery Built-in polymer lithium battery
- Battery capacity 300mA
- Battery using time About 6,8 hours
- Charging time About 2,3 hours
- Charging method USB DC 5V
- Charging current 300 mA
- Charging port Type-C
- vibration function Supports double motor

STAND-BY

Controllers automatically set to Stand-by mode if they do not detect compatible devices during the connection procedure and if not in use for 5 minutes

WARNING

- Use only the supplied type-C charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force. Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack. If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

SOFTWARE UPDATE

If Nintendo updates the system in future, your controllers should need an update. Go to www.freaksandgeeks.fr and follow instructions. If your controller work well, DO NOT update your controller, which maybe cause controller's system confusion

Only with the Switch Sports game:

1. connect the joycon and the Switch
2. launch the Switch Sports game
3. select a sport
4. the console displays that the joycon needs an update. Click on ok



5. An update starts and the joycon interrupts the update and reconnects



6. Click ok, the joycon is ready to play.



Note: The Switch Sports game contains 6 mini games, when you change the mini game, you will have to repeat this operation

Documents / Resources

	FREAKS AND GEEKS Controller Right for Switch [pdf] Instruction Manual Controller Right for Switch, Controller Right, Right for Switch, Controller
---	--

References

- [🌐 Accueil - Freaks and Geeks](#)