


**FREAKS and
GEEKS FG07A
Wireless PS5
Controller**



FREAKS and GEEKS FG07A Wireless PS5 Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS and GEEKS FG07A Wireless PS5 Controller User Manual 

Contents

 
- [1 FREAKS and GEEKS FG07A Wireless PS5 Controller](#)
- [2 PRODUCT OVERVIEW](#)
- [3 SPECIFICATIONS](#)
- [4 KEY FEATURES](#)
- [5 OPERATION INSTRUCTIONS](#)
- [6 PROGRAMMING INSTRUCTIONS](#)
- [7 FIRMWARE UPDATE INSTRUCTIONS](#)
- [8 REGULATORY INFORMATION](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

 


FREAKS and GEEKS FG07A Wireless PS5 Controller



PRODUCT OVERVIEW

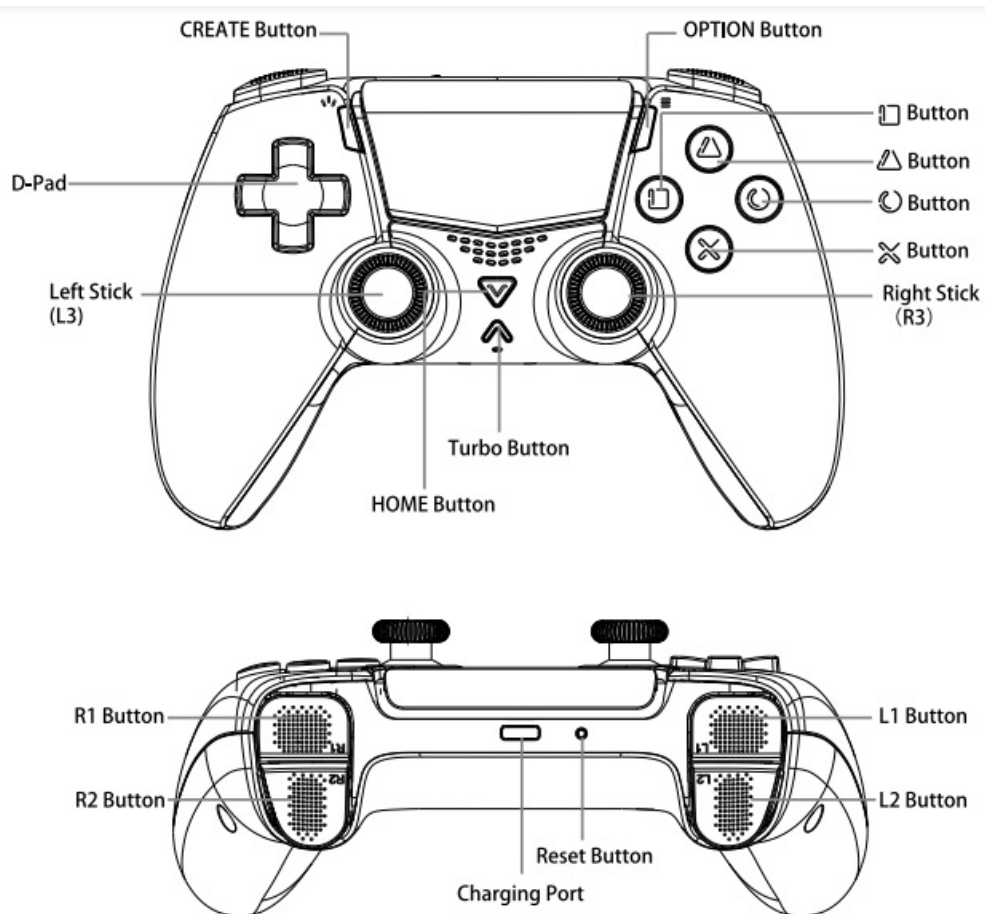

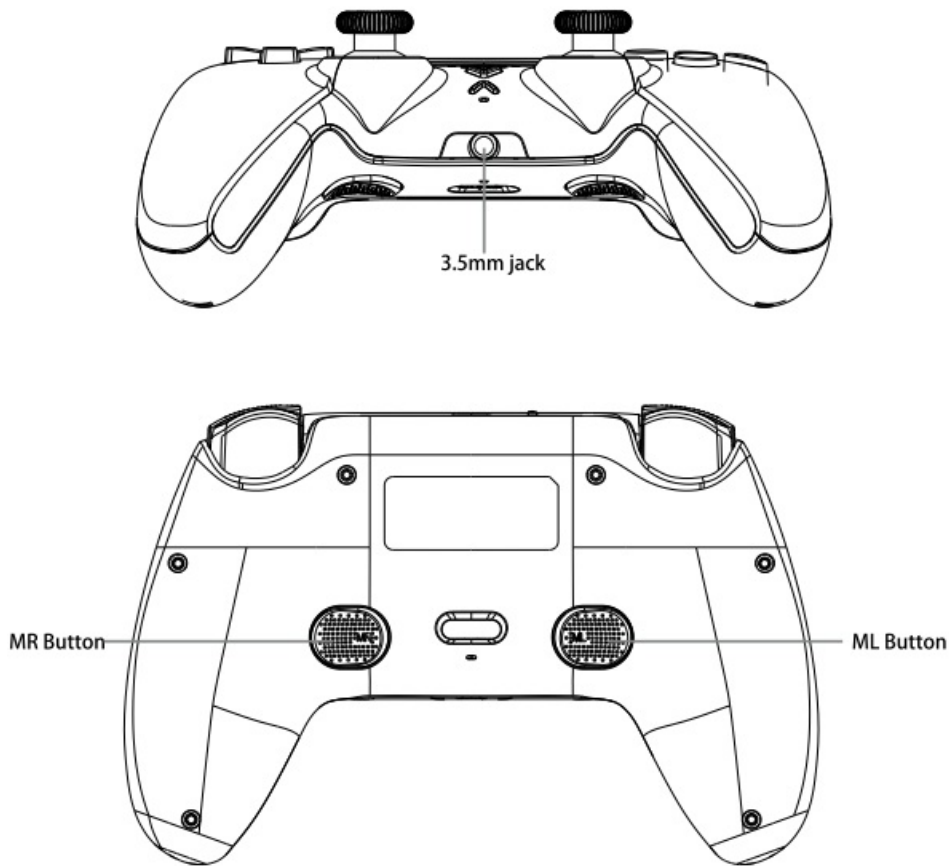

This manual provides instructions for using the controller, compatible with PS5, iOS, Android, and PC Steam. It supports both Bluetooth V5.3 and wired Type-C connectivity.

SPECIFICATIONS

- Compatibility: PS5, iOS, Android, PC (Steam)
- Connectivity: Bluetooth V5.3 / Wired Type-C
- Buttons: 19 digital buttons \triangle , \bigcirc , \times , \square , Down, Left, Right, L3, R3, Create, Option, HOME,
- Touch button, LI/RI , L2/R2 with trigger function, Turbo button) plus ML/MR programmable buttons on the back and two analog 3D sticks.

KEY FEATURES

1. 6-Axis Sensor: 125Hz return rate with 3-axis accelerometer and 3-axis gyroscope for precise gameplay.
2. Touchpad and Vibration: Dual-point capacitive touchpad and dual-motor vibration for immersive experience.
3. Audio and RGB Lighting: Built-in 3.5mm TRRS stereo jack for headphone/mic, independent speaker output, and RGB LED color indication for user and role distinction. (Audio function available in wired mode only)
4. Programming Back Buttons: ML and MR buttons are programmable via specific methods.

POWER SPECS:

- Input Voltage: 5V, 500mA
- Working Voltage: 5V, 120mA
- Battery Capacity: 1000mAh
- Dimensions: 159.8 x 105.9 x 68.1 mm

- weight: 250 ± log
- Material: ABS plastic

OPERATION INSTRUCTIONS

PS5 Connection

1. Connect the controller to the PS5 console using the Type-C cable. Press the HOME button. The LED will turn solid, indicating a successful connection.
2. To switch to wireless, unplug the cable and briefly press the HOME button.
3. Reconnecting: Hold the HOME button until the light bar starts flashing.

PC Steam Connection

1. Connect the controller to your PC using the USB cable. It will be recognized as a «DualSense Wireless Controller» with the LED indicator on.
2. In this mode, you can use it on the Steam platform and access headphone functionality.

iOS Connection





1. Ensure the iOS device runs iOS 13.0 or higher.
2. Press and hold the Create + HOME buttons until the LED flashes.
3. In your Bluetooth settings, connect to the «DualSense Wireless Controller.» Once connected, the LED will stay on.

Note: Limited functionality for some buttons and games may occur in Bluetooth mode.

Android Connection

1. Press and hold Create + HOME for 3 seconds to enter pairing mode; the LED will flash.
2. Find and select «DualSense Wireless Controller» in Bluetooth settings. Once connected, the LED will turn on.

TURBO BUTTON

The Turbo function is available for the following buttons: A, , , , , LI, L2, RI, R2, L3, R3.

Setting Turbo Function:

1. Manual Turbo: Press the TURBO button and the function button at the same time.
2. Auto Turbo: Repeat Step 1 to enable auto-turbo mode.
3. Disable Turbo: Repeat Step 1 again to disable both manual and auto turbo.

PROGRAMMING INSTRUCTIONS

For ML Button:

1. Press the Create button + ML button simultaneously; the light bar will flash.
2. Release and press the desired function buttons (e.g., LI, RI, A, B).
3. Press ML again to confirm. The light bar will return to normal, and ML will adopt the selected functions.

For MR Button:

1. Press the Options button + MR button simultaneously; the light bar will flash.
2. Release and press the desired function buttons (e.g., LI, RI, X, O).
3. Press MR again to confirm. The light bar will return to normal, and MR will adopt the selected functions.

LED LIGHT FUNCTIONS

1. Turbo Indicator: The LED under the Turbo button blinks when Turbo is active.
2. Button Backlight: LEDs under the ABXY buttons provide constant decorative lighting.
3. User Channel Indicator: Four RGB side-emitting LEDs indicate the PS user channel.

FIRMWARE UPDATE INSTRUCTIONS

If the controller disconnects after a console update, a firmware update may be required. Download the latest driver from our website at <https://freaksandgeeks.eu/mises-a-jour/> Perform the update on a Windows PC following the instructions provided.

WARNING

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force.
- Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack.
- If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

REGULATORY INFORMATION



Disposal of used batteries and waste electrical and electronic equipment This symbol on the product, its batteries or its packaging indicates that the product and the batteries it contains must not be disposed of with

 
household waste. It is your responsibility to dispose of them at an appropriate collection point for the recycling of batteries and electrical and electronic equipment. Separate collection and recycling help to preserve natural resources and avoid potential negative effects on human health and the environment due to the possible presence of hazardous substances in batteries and electrical or electronic equipment, which could be caused by incorrect disposal. For more information on the disposal of batteries and electrical and electronic waste, contact your local authority, your household waste collection service or the shop where you purchased this product. This product can use lithium, NiMH or alkaline batteries.

Simplified European Union Declaration of Conformity :


Trade Invaders hereby declares that this product complies with the essential requirements and other provisions of Directives EMC 2011/65/UE, 2014/53/UE, 2014/30/UE. The full text of the European Declaration of Conformity is available on our website www.freaksandgeeks.fr Company:

- Trade Invaders S.A.S.
- Address: 28, Avenue Ricardo Mazza
- Saint-Thibéry, 34630
- Country: France
- Telephone number: +33 4 67 00 23 51
- The operating radio frequency bands of the FG07A and the corresponding maximum power are as follows:
2.402 to 2.480 GHz, MAXIMUM: < 10dBm (EIRP)

The power supplied by the charger must be between, at a minimum, the 2.5 Watts required by the radio equipment and, at a maximum, 5 Watts to achieve maximum charging speed.

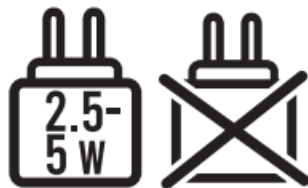

Documents / Resources

	<p>FREAKS and GEEKS FG07A Wireless PS5 Controller [pdf] User Manual FG07A, 150077, FG07A Wireless PS5 Controller, FG07A, Wireless PS5 Controller, PS5 Controller</p>
---	--

References

- [User Manual](#)