



FREAKS AND GEEKS PS4 Wireless Gamepad Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS AND GEEKS PS4 Wireless Gamepad Controller User Manual

Contents [[hide](#)]

- [1 FREAKS AND GEEKS PS4 Wireless Gamepad Controller](#)
- [2 Product features](#)
- [3 Functions](#)
- [4 Connect To Console](#)
- [5 Reconnect to console](#)
- [6 Wake Up game controller](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

FREAKS AND GEEKS

FREAKS AND GEEKS PS4 Wireless Gamepad Controller



Product features

- Wireless Connection : Bluetooth + EDR
- Charging Method : micro USB cable
- Battery : High Quality 600mA rechargeable Lithium Polymer Battery
- Without speaker function
- Mic/Headset : headphone jack
- Central pad : Clickable
- Vibration : Double Vibration
- Compatible : Full compatible with PS4

Functions

• Power ON

Hold the Home button for 1 second to power on

• Power OFF

Hold the Home button for 1 second to power off when dis-connect to console.

Hold the Home button for 10 seconds to power off when connect to console.

• Functions

Fully support all functions in games, including digital/analog buttons, and LED color display function, vibration function.

• LED color codes

Search Mode : flashing White LED

Disconnect: White solid White LED

Multi-users : User 1 =Blue, User 2=Red, User 3=Green, User 4=Pink

Sleep Mode : flashing Orange LED

Charging when standby : a solid Orange LED indicates charging, light will turn off when fully charged.

Charging when playing/connected : solid Blue LED

In-game : LED color based on game's instructions

Connect To Console

First use :

- Connect controller to PS4 console via USB charging cable, and press the Home button
- You'll need to pair a controller when you use it for the first time and when you use your controller on another PS4 system. If you want to use two or more controllers, you must pair each controller.
- When controller paired, you can disconnect the USB cable and use your controller wirelessly..

It's possible to use up to four controllers at the same time. When you press the Home button, the light bar glows in your assigned color. The first controller to connect is blue, with subsequent controllers glowing red, green, and pink.

Reconnect to console

Power on console, and power on the game controller by press Home button for 1 second, controller will connect to console automatically.

Wake Up game controller

Game controller turns to sleep mode after 30 seconds searching or no operation in 10 minutes under connection mode. Press Home button for 1 second to wake it up.

Connect the headset :

For in-game voice chat, plug the headset into your controller's stereo headset jack socket.

Share your gameplay online :

Press the SHARE button and choose one of these options for sharing your game play online.(Follow the steps on-screen)

Firmware Update Instructions :

If the controller disconnects frequently, you may need to update the controller. The latest firmware can be downloaded from our website : freaksandgeeks.fr

Follow these steps to update the firmware using a PC

• Step 1

With the controller turned OFF,, Press D-pad Down and hold it.

• Step 2

Keep hold ing D-pad Down and ,6,, connect the controller to PC through charging cable

• Step 3

Select BT and click Update

• Step 4

PASS will indicate the update is successful, you can then close the utility. If the update failed, try again.


Warning

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery It contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets Inside, stop using this product
- Do not subject this product or the battery it contains to excessive force.
Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested.
The cable could wrap around children"s necks,
- People with injuries or problems with fingers, hands or anns should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack.
If either is damaged, stop using the product
- If the product is ctirty, wipe it with a soft, dry clottl. Avoid the use of thinner, benzene or alcohol.

WWW.FREAKSANDGEEKS.FA

Freaks and Geeks® Is a reglstred trademark of Trade Invaders®. Produced and imported by Trade Invaders, 28 av. Ricardo Mazza, 34630 5aint-ToiM Franc&. www.trade-invaders.com. All Irademarks are property of their respective owners.
These owners didn't design, manufacture, sponsor endorse this product.

Documents / Resources

	<p>FREAKS AND GEEKS PS4 Wireless Gamepad Controller [pdf] User Manual PS4, Wireless Gamepad Controller, Gamepad Controller, Wireless Controller, Controller, PS4 Controller</p>
---	--