



# FREAKS and GEEKS SP4027 Wired Controller Instruction Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS and GEEKS SP4027 Wired Controller Instruction Manual 

## Contents

- [1 FREAKS and GEEKS SP4027 Wired Controller](#)
- [2 Specifications](#)
- [3 Product Information](#)
- [4 Usage Instructions](#)
- [5 FAQ](#)
- [6 Discription](#)
- [7 Overview](#)
- [8 CONTACT](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



**FREAKS and GEEKS SP4027 Wired Controller**



## Specifications

- **Compatibility:** PS4
- **Vibration:** Double Vibration
- **Touchpad:** Clickable, non-tactile
- **Speaker:** No
- **Micro/Headset:** 3.5mm jack
- **Connect Method:** USB Cable
- **Cable Length:** 3 Meters

## Product Information

- The USB-wired controller for PS4, model SP4027, provides a seamless gaming experience with its double vibration feedback, clickable touchpad, and ergonomic design.
- The controller features various buttons including a directional pad, analog sticks, action buttons, a home button, L1/L2, R1/R2 buttons, a share button, an options button, and a 3.5mm jack for audio.

## Usage Instructions

### Connectivity

- Connect the controller to your PS4 console using the provided USB cable.
- The 3-meter cable length allows flexibility during gameplay.

### Functionality

- Utilize the directional pad and analog sticks for movement, action buttons for in-game interactions, and L1/L2, and R1/R2 buttons for additional controls.

- The clickable touchpad enhances navigation and interaction within games.

## Update Firmware


- If the controller disconnects regularly, update its firmware by downloading the latest version from [www.freaksandgeeks.fr](http://www.freaksandgeeks.fr). Install the firmware on your PC to ensure optimal performance.

## FAQ

- **Q:** How can I update the controller's firmware?
- **A:** To update the firmware, download the latest version from [www.freaksandgeeks.fr](http://www.freaksandgeeks.fr) onto your PC and follow the installation instructions provided.
- **Q:** Is the touchpad tactile?
- **A:** No, the touchpad is clickable and non-tactile, offering a responsive input method for gaming.
- **Q:** What is the cable length of the controller?
- **A:** The USB cable provided with the controller is 3 meters long, providing ample reach for comfortable gaming sessions.

## Discription

1. Directional pad
2. Left Analog stick
3. Action buttons
4. Right analog stick
5. Home button
6. L1/L2 button
7. Share
8. Options buttons
9. R1/R2 buttons
10. Touchpad (clickable, non-tactile)
11. 3,5 mm jack

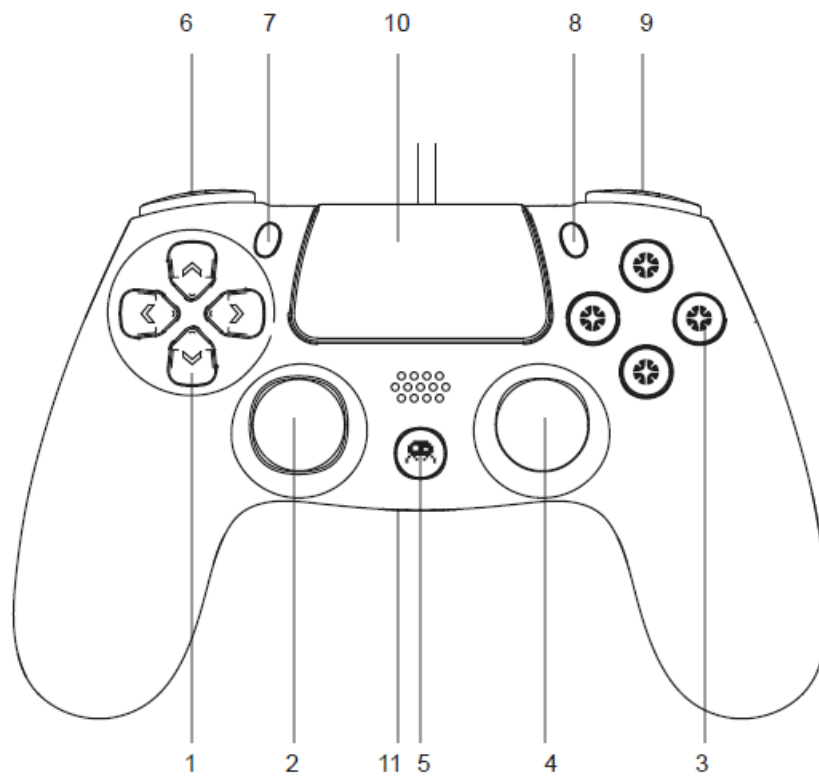

## Overview

- **Compatibility:** PS4
- **Vibration:** Double Vibration
- **Touchpad:** Clickable, non-tactile
- **Speaker:** No
- **Micro/Headset:** Jack 3.5mm plug
- **Connect Method:** U S B Cable
- **Cable Length:** 3 Meters

## Update

- If the controller disconnects regularly, an update is necessary.
- To do this, please install the new firmware, which can be downloaded from: [www.freaksandgeeks.fr](http://www.freaksandgeeks.fr)
- From a PC, download the firmware.

## Warning

Please read and comply with the health and safety information. Failure to observe the precautions indicated may result in injury or property damage. Use of this product by children should be under adult supervision.

- Do not expose this product to microwaves, high temperatures, or direct sunlight.
- Do not allow this product to come into contact with liquids or handle it with wet or greasy hands. If liquid enters this product, discontinue use.
- Do not subject this product to excessive force. Do not touch this product while it is charging during a thunderstorm.
- If you hear a suspicious noise, see smoke, or smell a strange odor, stop using this product.
- Do not attempt to disassemble or repair this product.

- Do not touch damaged parts. Avoid contact with any liquid leaking from the product.
- Keep packaging materials out of the reach of small children as they could be ingested.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of alcohol, thinner, or any other solvent.
- Never hold this product by its cable.
- Persons suffering from injuries or problems to fingers, hands, or arms should not use the vibration function.
- This product should be stored at a moderate temperature between 10 and 25 degrees.



## CONTACT

- INFORMATIONS & TECHNICAL SUPPORT [WWW.FREAKSANDGEEKS.FR](http://WWW.FREAKSANDGEEKS.FR)
- Freaks and Geeks is a registered trademark of Trade Invaders.
- Produced and imported by Trade Invaders, 28 av.
- Ricardo Mazza, 34630 Saint-Thibéry, France. [www.trade-invaders.com](http://www.trade-invaders.com).
- All trademarks are the property of their respective owners.
- These owners did not design, manufacture, sponsor, or endorse this product.

## Documents / Resources

	<a href="#">FREAKS and GEEKS SP4027 Wired Controller</a> [pdf] Instruction Manual SP4027 Wired Controller, SP4027, Wired Controller, Controller
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------

## References

-  [Accueil - Freaks and Geeks](#)
-  [Trade Invaders le distributeur gaming, téléphonie & grossiste pop culture](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.