



FREAKS AND GEEKS SP4227B Wireless Basics Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS AND GEEKS SP4227B Wireless Basics Controller User Manual 

Contents

- [1 FREAKS AND GEEKS SP4227B Wireless Basics Controller](#)
- [2 OVERVIEW](#)
- [3 First connection](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)



FREAKS AND GEEKS SP4227B Wireless Basics Controller



OVERVIEW



First connection

Connect the console to the controller using the USB charging cable. Once the Home light glows blue, press it to access the login page and select your user account. You can now remove the USB cable.

Reconnection

The USB cable is not required for the next wireless connection. If the console is on, press the Home button on the

controller: the controller works.

Charging

Plug in the USB cable, the Home button will light up red while the controller is charging, then turn off when the controller is charged.

Specifications

- **Voltage:** DC3.5v — 4.2V
- **Input current:** less than 330mA
- **Battery life:** about 6-8 hours
- **Standby time:** about 25 days
- **Voltage/charge current:** about DC5V / 200mA
- **Bluetooth transmission distance:** approx. 10m
- **Battery capacity:** 600mAh

Wireless Specifications

- Frequency Range: 2402-2480MHz
- MAX E.I.R.P.: < 1.5dBm

Update

If the controller can not pair the newest version of the console, please go to our official website to get the newest firmware upgrade: www.freaksandgeeks.fr

Warning

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product.
- Do not subject this product or the battery it contains to excessive force. Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands or arms should not use the vibration function.
- Do not attempt to disassemble or repair this product or the battery pack. If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene, or alcohol.

Documents / Resources



[FREAKS AND GEEKS SP4227B Wireless Basics Controller](#) [pdf] User Manual
SP4227B Wireless Basics Controller, SP4227B, Wireless Basics Controller, Basics Controller,
Controller