



FREAKS AND GEEKS Switch Pro Wireless Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » **FREAKS AND GEEKS Switch Pro Wireless Controller User Manual** 

Contents

- [1 FREAKS AND GEEKS Switch Pro Wireless Controller](#)
- [2 Product Overview](#)
- [3 First connection and pairing](#)
- [4 Reconnection](#)
- [5 Adjust Turbo Speed](#)
- [6 Indicator Light](#)
- [7 Support PC platform](#)
- [8 APP Setting](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

FREAKS AND GEEKS

FREAKS AND GEEKS Switch Pro Wireless Controller



Product Overview



First connection and pairing

- Step 1 : Go to Controllers in the settings menu



- Step 2 : Select Change Grip/Order



- Step 3 : Press the SYNC Button (on the back of the controller) for about 4 the connection to complete.

* **NOTE** : Once in the Change Grip/Order menu, try to complete the connection within 30 seconds. You may be unable to connect the controller to the console if you don't complete the setup quickly.



Reconnection

If your controller was already paired and connected to your Nintendo Switch console, next time you can press the HOME button to connect it instantly.

If the NS console is in sleep mode, you can press the HOME button for about 2 seconds to wake up the NS console and reconnect to the NS console.

Adjust Turbo Speed

The following buttons can be set to turbo speed: A/B/X/Y/L/ZL/R/ZR

Enable/disable the manual and auto turbo speed function:

1. Press the TURBO button and one of the function buttons simultaneously, to enable the manual turbo speed function.
2. Repeat step 1, to enable the auto turbo speed function
3. Repeat step 1 again, to disable the manual and auto turbo speed function of this button..

There are 3 levels of turbo speed : moderate rate. quickly.

How to increase the turbo speed :

When the manual turbo function is on, point the right joystick up while pressing the TURBO button for 5 seconds, which will increase turbo speed by one level.

How to decrease the turbo speed :

When the manual turbo function is on, point the right joystick down while pressing the TURBO button for 5 seconds, which can increase turbo speed by one level.

Adjust Vibration Intensity

- There are 4 levels of vibration intensity: 100%-70%-30%-0% (no vibration)
- How to increase the vibration intensity :
Press the Turbo button and up on the directional pad simultaneously for 5 seconds, which will increase vibration intensity by one level.
- How to decrease the vibration intensity :
Press the Turbo button and down on the directional pad simultaneously for 5 seconds, which will decrease vibration intensity by one level.iveau.

Indicator Light

Fully Charged :

- the 4 LED lights off. (when the controller is in the sleep status)
- the 4 LED keep on. (when the controller is connected)

Low Charge Warning

Support PC platform

***NOTE:** support Windows 10 and above versions.

While connecting to the PC, there's no gyro sensor function and vibration cannot be adjusted.

Wireless connection (For Bluetooth-enabled PC only)

Bluetooth name: Xbox Wireless Controller

- Step 1: Press the SYNC Button (on the back of the controller) and the X Button at
Bluetooth can be searched by Windows.
- Step 2: Open the Windows setting — “Devices” — “Bluetooth and other devices” —
“Xbox Wireless Controller”

Wired Connection

The controller can be connected to a Windows system computer by using a USB type-c cable and will be recognized as the “X-INPUT” mode. The controller could be applied to games which support “X-INPUT” mode.

***NOTE:** In X-INPUT mode, button “A” becomes “B”, “B” becomes “A”, “X” becomes “Y”, “Y” becomes “X”.

APP Setting

About APP and Download Method:

This APP is used for controllers that support the KeyLinker protocol. It can modify and set the parameters of many functions such as buttons, joysticks, triggers and their own preferences and habits while playing games with the controller at the same time. Scan the QR code to download the Keylinker App Download the Keylinker App from App Store or Google Play



Documents / Resources



[**FREAKS AND GEEKS Switch Pro Wireless Controller**](#) [pdf] User Manual
Switch Pro Wireless Controller, Wireless Controller, Switch Pro Controller, Controller