



FREAKS AND GEEKS Wireless Gamepad for PS3 User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS AND GEEKS Wireless Gamepad for PS3 User Manual 

Contents


- [1 FREAKS AND GEEKS Wireless Gamepad for PS3](#)
- [2 Product Layout](#)
- [3 About the PS3 Wireless Controller](#)
- [4 How to use this PS3 controller](#)
- [5 Battery life and duration](#)
- [6 Specifications](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



FREAKS AND GEEKS Wireless Gamepad for PS3



Product Layout

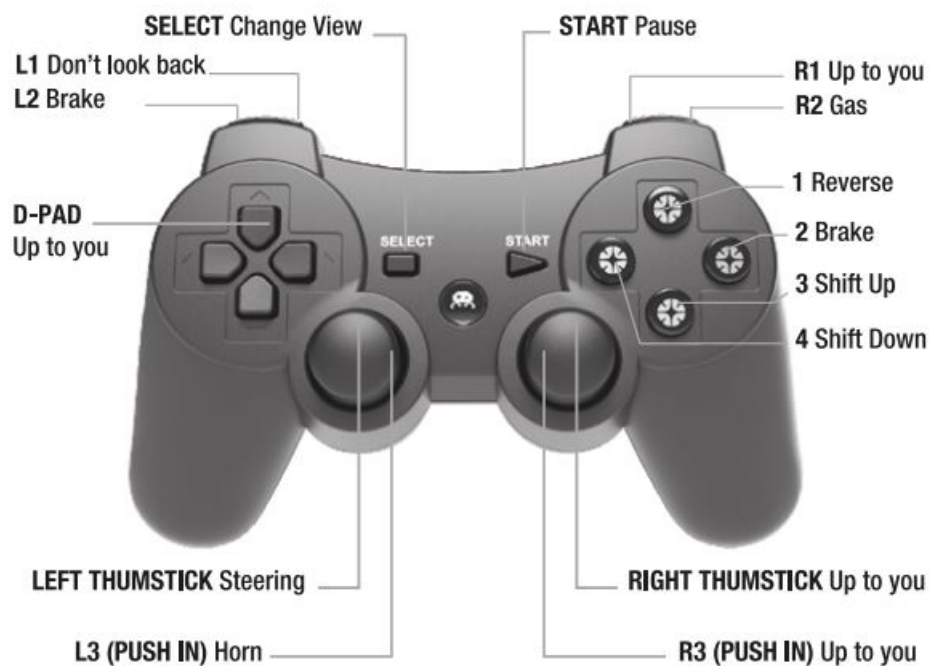

About the PS3 Wireless Controller

Our P\$3 wireless controller built in two electric motors makes each hit, crash and explosion is more excite and realistic, you will feel the rumble In the palm of your hand. Highly sensitive motion control system senses your every move and characters as well as objects in the game wilf move and react as you tilt, push and shake the controller. Truly intuitive gameplay through the motion sensing 6-Axis technology.

How to use this PS3 controller

How to Sync with PS3?

- You can use USB cable to activate the controller when it is put into use for the first time.

- Connect the controller with your console, press the PS3 button and pull out the cable. Then you can use it wireless.
- If it still does not work, you restart it or charge it
- If the above methods failed, put a needle into the mini hole at the back of the controller and press the button to reset it.

How to turn it on/off?

- The PS3 controller will start when you press the round button or connect with the computer by data cable. It will turn off when it takes 5 minutes after it is disconnected. If it can not stop working after a long time, please plug the data cable in the computer and then pull it out, thus it will be powered off.

How to Charge the PS3 Controller?

- Connect the console to the PS3 by the USB cable.
- When charging, the red light will be flashing; when fully charged, the red light turns off.

Battery life and duration

- The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.
- Charge in an environment where the temperature range is between 10°C- 30°C (50°F – 86°F). Charging may not be as effective when performed in other environments.
- When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

Warning


- Use only the supplied charging cable to charge this product
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight,
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force.
- Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack.
- If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

Specifications

- **Input power rating:** DC 3.7 V400mA
- **Battery type:** Built-in rechargeable Lithium-Ion battery
- **Voltage:** DC 3.7 V
- **Battery capacity:** 400 mAh
- **Operating temperature:** 5°C – 35°C (41°F 95°F)
- **Mass:** Approx. 180 g (6.3 02)

WWW.FREAKSANDGEEKS.FR

Documents / Resources

| | |
|---|---|
|  | <p>FREAKS AND GEEKS Wireless Gamepad for PS3 [pdf] User Manual Wireless Gamepad for PS3, Wireless Gamepad, Gamepad for PS3, Gamepad</p> |
|---|---|

[Manuals+.](#)