




X3J-5364 Wired  
Xbox 360 PC  
Controller



# FREAKS and GEEKS X3J-5364 Wired Xbox 360 PC Controller User Manual

[Home](#) » [FREAKS AND GEEKS](#) » FREAKS and GEEKS X3J-5364 Wired Xbox 360 PC Controller User Manual 

## Contents

- [1 FREAKS and GEEKS X3J-5364 Wired Xbox 360 PC Controller](#)
- [2 Connecting the Controller](#)
- [3 Turbo Mode](#)
- [4 PC Compatibility](#)
- [5 Handling](#)
- [6 Regulatory Information](#)
- [7 Safety](#)
- [8 OPERATING INSTRUCTIONS](#)
- [9 FAQs](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



**FREAKS and GEEKS X3J-5364 Wired Xbox 360 PC Controller**



## Connecting the Controller

- Connect your controller to your Xbox 360 console or to your PC using the USB connector. Hold the **HOME** button for more than 5 seconds.
- To disconnect your controller, remove the connector from your Xbox console's USB port, unplug it, and reconnect the controller.
- The ring LED should be on, indicating proper status **1-4 – BACK**.

## Turbo Mode

To use turbo mode: Select the turbo button while pressing the button you want to activate turbo mode for. Press **HOME + BACK** to deactivate turbo mode for that button. The turbo mode frequency is 8Hz (8 times/second).

## PC Compatibility

- Compatible with: Windows XP/7/8/10/11.
- We cannot guarantee the compatibility of this controller with all video games. However, most new games that are compatible with Xbox 360 and DirectInput are supported.
- To switch from Xinput mode to DirectInput mode, hold down **HOME** and press the mode button. The delay for mode change is about 5 seconds.

## Handling

- Do not repair or disassemble, avoid fire, or attempt repair, risking the product.
- Keep product and parts clean, and free of moisture, and avoid chemicals.
- Do not store in extreme conditions; avoid heat, humidity, and direct sunlight.
- Do not use cleaning products or alcohol. Use a soft cloth for cleaning.
- Do not submerge the product in water.
- Keep all packaging materials for possible future use. Packaging materials should be kept from children to avoid suffocation.
- Dispose of the product according to local regulations.

## Specifications

<b>Product Name</b>	Wired Xbox 360/PC Controller
<b>Model</b>	XYZ-3604
<b>Manufacturer</b>	Ferro
<b>Contact</b>	Tel: +33 4 37 02 23 51

## Regulatory Information

- This product complies with the essential requirements and other relevant provisions of the applicable European Directives.
- **Manufacturer:** Ferro – 34/36 Rue de la Tuilerie – 34830 – France
- **Tel:** +33 4 37 02 23 51

## Safety

- Do not open the product, risk of electric shock.
- Do not be exposed to water or moisture.
- Keep away from children.

## OPERATING INSTRUCTIONS

- **First connection:** Connect your controller to your Xbox 360 console to use it. If your controller is not detected, hold the «HOME» button for more than 5 seconds. Reconnecting: If your controller is not recognised when you turn the console back on, unplug and reconnect the controller.
- **To swap the D-pad and the left analog stick:** press «L3 + BACK».
- **To use turbo mode:** hold down the turbo button while pressing the button you want to activate turbo mode for. For example: «TURBO + A» activates turbo mode for the «A» button. Repeat to cancel turbo mode.
- **PC compatibility:** Windows XP/7/8/8.1/10/11
- We do not guarantee the PC compatibility of this controller with all video games. However, it may be compatible with Xinput and DirectInput PC games. To switch from Xinput mode to Directinput mode, and vice versa: press and hold the «HOME» button for more than 5 seconds.

## WARNING

- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product to excessive force. Do not pull on the cable or bend it sharply.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands, or arms should not use the vibration function
- Do not attempt to disassemble or repair this product. If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene, or alcohol.

## REGULATORY INFORMATION

- **Simplified European Union Declaration of Conformity** : Trade Invaders hereby declares that this product complies with the essential requirements of Directives 2011/65/EU – 2014/30/EU
- **Company**: Trade Invaders S.A.S
- **Address**: 28, Avenue Ricardo Mazza – Saint-Thibéry, 34630 / Country: France
- **Tel.**: +33 4 67 00 23 51



■ This symbol indicates that the product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.

## FAQs

### • How do I connect the controller to my PC?

Use the USB connector to connect the controller to your PC. Ensure the drivers are installed for proper functionality.

### • What should I do if the controller is not recognized?

Ensure the USB connection is secure and try reconnecting. If the issue persists, check for driver updates or compatibility issues.

### • How can I activate turbo mode?

Press the turbo button while holding the button you want to activate the turbo for. To deactivate, press HOME + BACK.

## Documents / Resources



[FREAKS and GEEKS X3J-5364 Wired Xbox 360 PC Controller](#) [pdf] User Manual  
X3J-5364 Wired Xbox 360 PC Controller, X3J-5364, Wired Xbox 360 PC Controller, Xbox 360 PC Controller, PC Controller

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.