FREAKS GEEKS SP4227B Wireless Basics Controller





FREAKS GEEKS SP4227B Wireless Basics Controller Instructions

Home » FREAKS GEEKS » FREAKS GEEKS SP4227B Wireless Basics Controller Instructions



Contents

- 1 FREAKS GEEKS SP4227B Wireless Basics
- Controller
- 2 First connection
- **3 OVERVIEW**
- 4 Charging
- **5 Specifications**
- 6 Update
- 7 Documents / Resources
 - 7.1 References



FREAKS GEEKS SP4227B Wireless Basics Controller



First connection


Connect the console to the controller using the USB charging cable. Once the Home light glows blue, press it to access the login page and select your user account. You can now remove the USB cable.

Reconnection

The USB cable is not required for the next wireless connection. If the console is on, press Home button on the controller: the controller works.

OVERVIEW



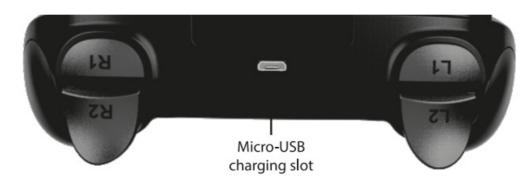

Charging

Plug in the USB cable, the Home button will light up red while the controller is charging, then turn off when the controller is charged.

Specifications

• **Voltage:** DC3.5v — 4.2V

Input current: less than 330mA
Battery life: about 6-8 hours
Standby time: about 25 days

Voltage/charge current: about DC5V / 200mA
 Bluetooth transmission distance: approx. 10m

• Battery capacity: 600mAh

Wireless Specifications

• Frequency Range: 2402-2480MHz

• MAX E.I.R.P.: < 1.5dBm

Update

If the controller can not pair the newest version of the console, please go to our official website to get the newest firmware upgrade: www.freaksandgeeks.fr

Warning

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force. Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- · People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack. If either is damaged, stop using the
 product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

SUPPORT AND TECHNICAL INFORMATION: WWW.FREAKSANDGEEKS.FR

Documents / Resources

	FREAKS GEEKS SP4227B Wireless Basics Controller [pdf] Instructions SP4227B, SP4227B Wireless Basics Controller, Wireless Basics Controller, Basics Controller, Controller
--	---

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.