

**F R E E M A N<sup>®</sup>**  
**X9KEYBOARD**  
**Mechanical**  
**Gaming**  
**Keyboard**



# Freeman X9KEYBOARD Mechanical Gaming Keyboard User Manual

[Home](#) » [Freeman](#) » Freeman X9KEYBOARD Mechanical Gaming Keyboard User Manual 

## Contents

- [1 Freeman X9KEYBOARD Mechanical Gaming Keyboard](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW](#)
- [5 INSTALLATION INSTRUCTIONS](#)
- [6 RESYNCING THE DONGLE](#)
- [7 TOP F-ROW SHORTCUTS](#)
- [8 SAFETY INSTRUCTIONS](#)
- [9 SPECIFICATIONS](#)
- [10 FCC Warning](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)

**F R E E M A N<sup>®</sup>**

**Freeman X9KEYBOARD Mechanical Gaming Keyboard**



## Product Information

### Specifications:

- **Number of keys:** Standard keyboard layout
- **DPI:** Adjustable DPI settings
- **Sleep Mode:** Power-saving feature
- **Keyboard Interface:** USB
- **Mouse:** Optical mouse

### Product Usage Instructions

1. Take the dongle out from the compartment.
2. Insert the dongle into a USB-A port of your computer.

**Note:** This dongle is compatible with both the keyboard and mouse.

#### Keyboard:

1. Insert the battery in the keyboard and turn it on.
2. Hold the ESC key and the Q key simultaneously.
3. When pairing, all three LED lights will flash.
4. After the flashing stops, the keyboard should work. If not, repeat the steps.

#### Mouse:

1. Insert the battery into the mouse.
2. Hold the scroll wheel and the right button.
3. Put the battery into the mouse and then turn it on.
4. Three LED lights will flash, indicating successful pairing. The mouse should work again. If not, repeat the steps.

### Top F-Row Shortcuts:

The default mode is in function mode (F1 through F12). To access shortcut mode (icons), hold the Fn key to activate.

Below is a table of what each shortcut does:

 
Shortcut	Description
F1 – F12	Standard function keys with OS or program-specific functions

### Safety Instructions:

Please read all safety instructions carefully. Incorrect use may result in reduced performance, permanent damage, and void your warranty.


## PRODUCT OVERVIEW

1. Battery compartmentRF
2. Dongle compartment
3. LED indicators
  - Num Lock LED
  - Caps Lock LED
  - Battery LED

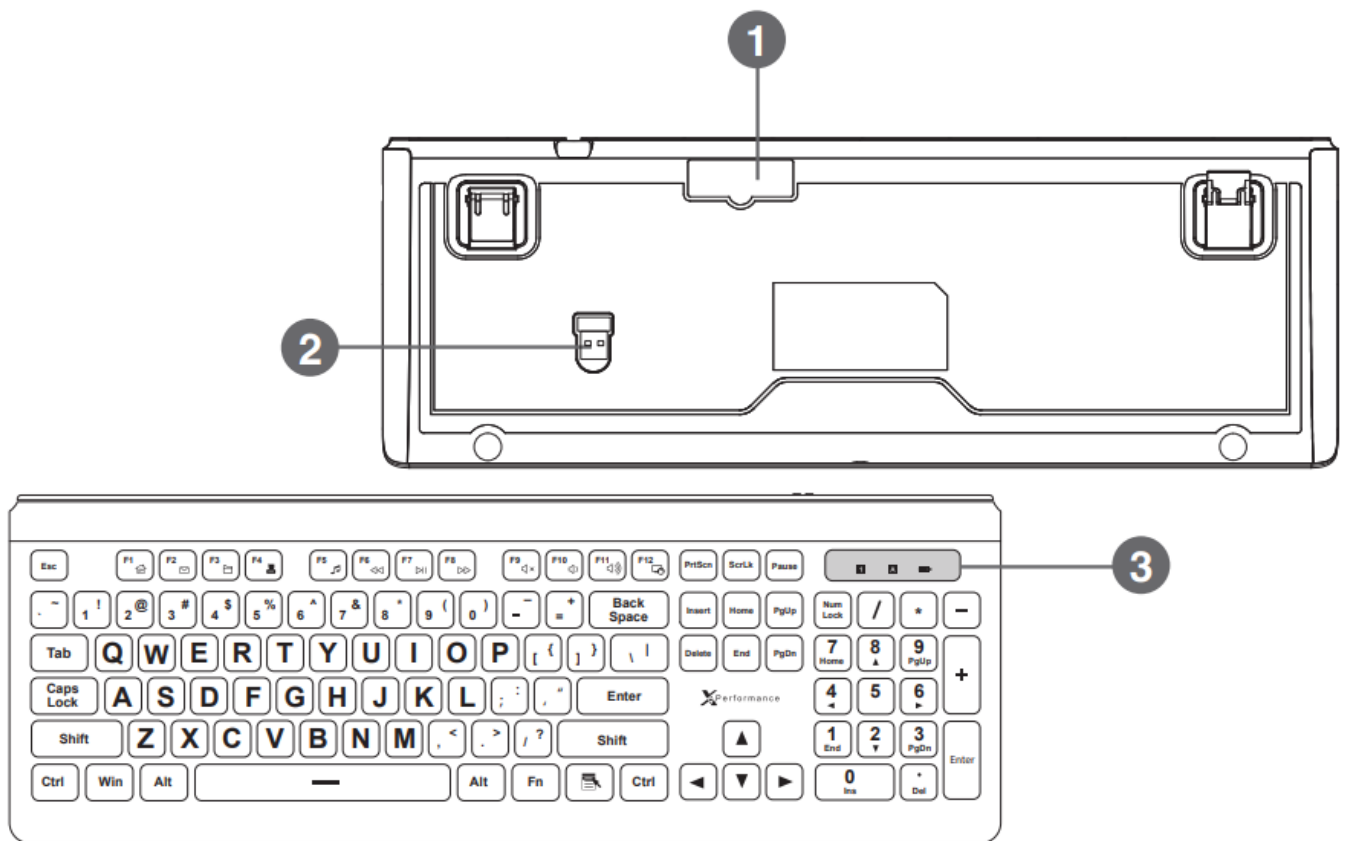

## MOUSE

 1. On/Off switch
2. Battery compartment
3. Left and right-click
4. Scroll wheel
5. DPI
6. Forward and back

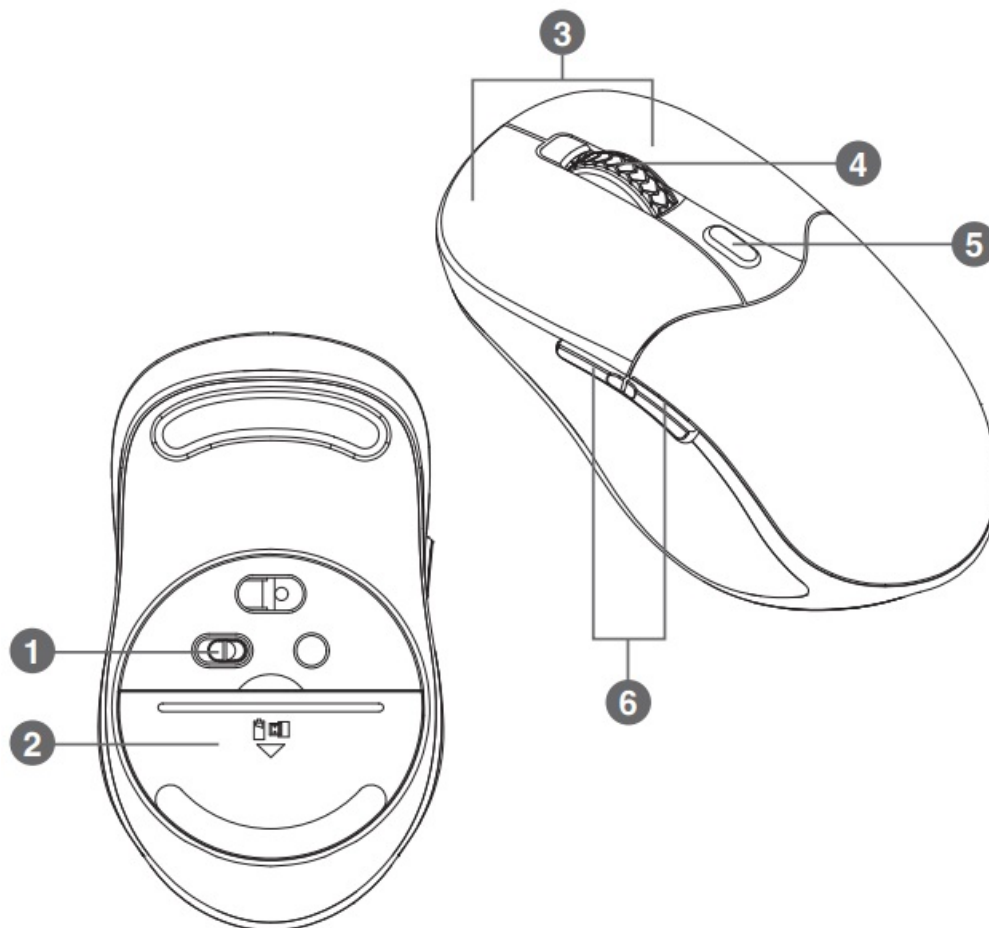

## INSTALLATION INSTRUCTIONS

Take the dongle out from the compartment. Insert the dongle into a USB-A port of your computer.

**Note:** This dongle will work with both keyboard and mouse.



### NOTE

You will need to purchase a USB-C to USB-A HUB if you are using a desktop or laptop that is equipped with only USB-C ports

## RESYNCING THE DONGLE

If the keyboard and mouse lost its sync or if a replacement dongle is needed.

## **Keyboard**

1. Put the battery in the keyboard then turn it on.
2. Hold the ESC key and the Q key simultaneously.
3. When pairing all three LED lights will flash.
4. After it stops flashing it should work. If it fails please try the previous steps again.

## **Mouse**

1. Put the battery into the mouse
2. Hold the scroll wheel and the right button.
3. Put the battery into the mouse and then turn it on.
4. 3 LED lights will be flashing.
5. The mouse should work again. If not please try again.

## **TOP F-ROW SHORTCUTS**












The default mode is in function mode (F1 through F12).

### **NOTE**

For the shortcut mode (icons) you will need to hold Fn for it to activate.

Below is a table of what each shortcut does.

### **Shortcut description**

	Default web browser
	Default email.
	File explorer.
	Print. (Dependent on the App)
	Default music app.
	Back/Previous track.
	Play/Pause.
	Forward/Next track.
	Mute.
	Volume down.
	Volume up.
	Lock screen.

#### NOTE

All standard function keys (F1-F12) have a special function defined by the operating system, or by a currently running program.

## SAFETY INSTRUCTIONS

Please read the following carefully. Incorrect use of this product may result in reduced performance, permanent damage and void your warranty.

- Keep this device away from liquid, humidity and moisture.
- Operate this device only within the specific temperature range of 0°C (32° F) to 5°C to 40°C(104° F)
- Please refrain from taking the device apart. Doing so will void your warranty.
- Do not dispose this product in the garbage. Take it to your local recycling center.

## SPECIFICATIONS

Number of keys	107
DPI	800/1200/1600
Sleep Mode keyboard	Level 1 Sleep – 60 seconds Level 2 Sleep – 5 minutes
Keyboard interface	RF
Mouse	AA battery (included)
Keyboard	2x AAA battery (included)

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### NOTE

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

 
## FAQ

### Q: What should I do if my keyboard or mouse loses sync?

**A:** Follow the resyncing instructions provided in the manual to re-establish the connection between your device and dongle.

## Documents / Resources





[Freeman X9KEYBOARD Mechanical Gaming Keyboard](#) [pdf] User Manual  
2BHL3-X9KEYBOARD, 2BHL3X9KEYBOARD, x9keyboard, X9KEYBOARD Mechanical Gaming Keyboard, X9KEYBOARD, Mechanical Gaming Keyboard, Gaming Keyboard, Keyboard

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.