


# Freshin DL-Sensor-AU Motion Sensor LED Down Light Instruction Manual

Home » Freshin » Freshin DL-Sensor-AU Motion Sensor LED Down Light Instruction Manual

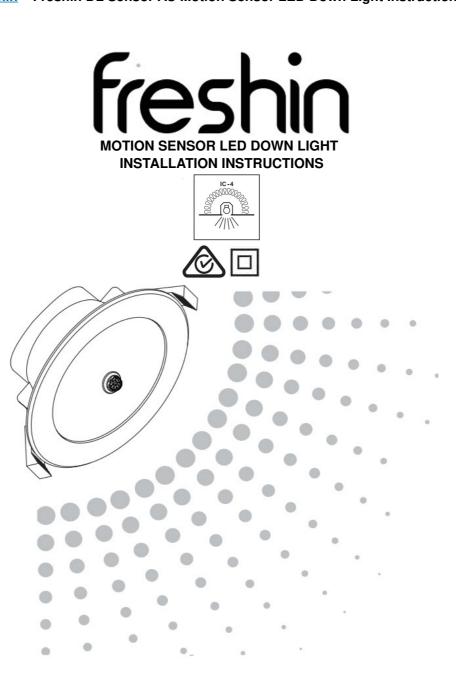

Model: DL-Sensor-AU

The Downlight offers 3 color temperatures in one fitting

WARNING: THIS FITTING MUST BE INSTALLED BY A LICENSED ELECTRICIAN!

#### **Contents**

- 1 Specifications
- 2 Safety Tips
- 3 Installation
- **4 Sensor Specification**
- **5 Sensor Information:**
- 6 Documents /

Resources

- 6.1 References
- **7 Related Posts**

### **Specifications**

Rated Voltage: AC240V~50Hz

Model	Wattage	ССТ	Cut-out Size	Lumen	Induction Dis tance	IP Rating
DL-Sensor-AU	9W	3000K 4000K 5700K	90mm	750lm 850lm 810lm	Max. 8m	IP40 (IP44 for fr ont)

#### **Safety Tips**

- Always ensure the power is OFF and the LED downlight has cooled down before performing any maintenance, cleaning or making any adjustment to the recessed luminaire.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cable or cord is damaged, the luminaire shall be destroyed.
- The luminaire must not be used if the protective shield has been cracked.
- Replace any cracked protective shield before using the luminaire.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced. There are no serviceable parts, do not attempt to dismantle or open the product.
- To avoid injury or damage to the luminaire, ensure that power leads and screws are secure before connecting the power.
- Ensure that the fitting does not come in contact with corrosive chemicals/solvents or abrasive cleaners efc.
- To clean, wipe with a soft damp clean cloth.
  Do NOT soak or immerse the product in water or other liquids.


### Installation

Before installation, please make sure the power is off

- 1. Before installation, plug the downlight into a socket outlet to ensure it is working correctly.
- 2. Select the colour temperature via the switch on the back of the downlight. (Fig. 2)

**Note:** The downlight must be turned off before using the switch to change the color temperature.

- 3. Cut an installation hole of 90mm into the ceiling. (Fig. 1)
- 4. Insert the plug into the socket outlet and ensure it is fully plugged in. (Fig. 2)
- 5. Push the springs up and put the downlight up through the cut out hole and into the ceiling. (Fig. 3)
- 6. After the installation, switch on the LED downlight and test all the lighting functions.

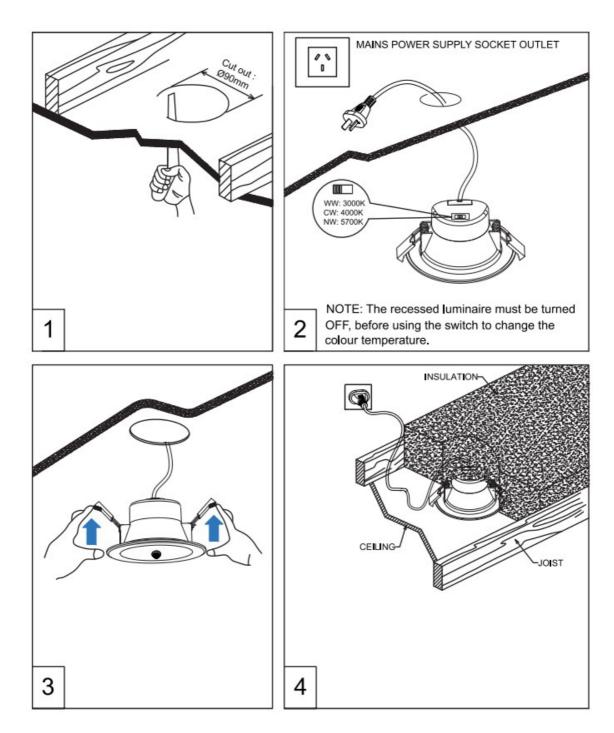

- 1. Aclosed luminaire that allows building insulation to come into contact with s sides and to cover it.
- 2. Type IC-4 recessed luminaire can be used together with building insulation that can safely be exposed continuously to temperatures up to 90°C may abut and cover the luminaire;



RISK OF FIRE - Required clearance from structural members and building elements


SCB =50 mm

HCB =50 mm

## **Sensor Specification**

Item	Parameter			
Standby Power	<0.5W			
Block Time	0.2s			
Detection Angle	1000			
Time Delay	70±10s			
Detection Distance	Max. 8m			
installation Height	1.8m – 2.5m			
No Manual Override				
Sensor Operates Day and Night				

#### **Sensor Information:**

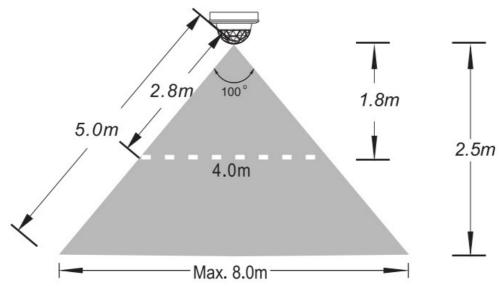

Recommended Height of Installation: 1.8~2.5m

Detection Distance: Max. 8m

**Height:** 1.8M = 4 meter detection range **Height:** 2.5M = 8 meter detection range

\*Note: The detection distance will vary with change of installation height

Any questions or suggestions are welcomed





 $\succeq$ 

Email: <u>customerservice@freshin.com</u>

#### **Documents / Resources**



Freshin DL-Sensor-AU Motion Sensor LED Down Light [pdf] Instruction Manual DL-Sensor-AU Motion Sensor LED Down Light, DL-Sensor-AU, Motion Sensor LED Down Light, Sensor LED Down Light, Down Light, Light

#### References

• User Manual

Manuals+, Privacy Policy