



FRIGGA V5 Plus Series Temperature and Humidity Data Logger User Manual

[Home](#) » [FRIGGA](#) » FRIGGA V5 Plus Series Temperature and Humidity Data Logger User Manual



Contents

- 1 FRIGGA V5 Plus Series Temperature and Humidity Data Logger
- 2 V5 Plus Series User Manual
- 3 Temperature & Humidity Data Logger
- 4 Appearance Description
- 5 Display Description
- 6 1. Check For New Logger
- 7 2. Turn on the logger
- 8 3. Start Delay
- 9 4. Gateway Solution Information
- 10 5. Recording Information
- 11 6. Alarm Information
- 12 7. Check Data
- 13 8. Stop the Device
- 14 9. Get Report
- 15 10. Charging
- 16 11. More Information
- 17 Specifications:
- 18 Frequently Asked Questions (FAQ):
 - 18.1 Q: How do I charge the logger?
 - 18.2 Q: What does the alarm LED light flashing indicate?
 - 18.3 Q: How can I access detailed temperature and humidity data?
- 19 Documents / Resources
 - 19.1 References
- 20 Related Posts

V5 Plus Series User Manual

 


Temperature & Humidity Data Logger




www.friggatech.com

Appearance Description

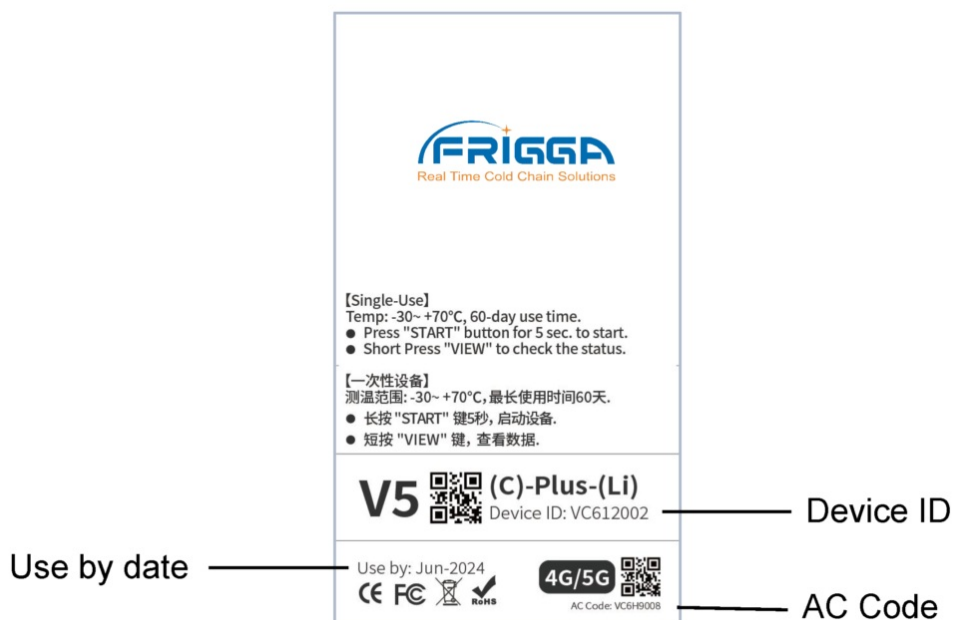


Display Description

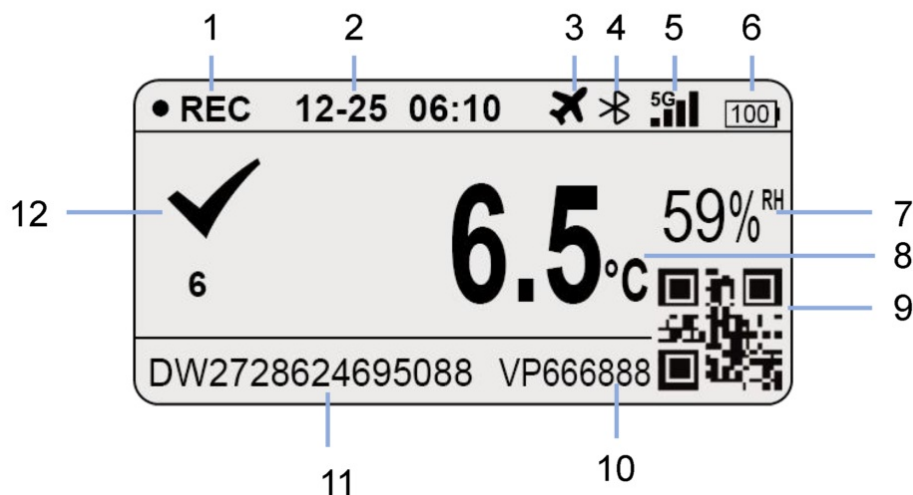 

1. Recording Icon
2. Time
3. Airplane Mode
4. Bluetooth
5. Signal Icon
6. Battery Icon
7. Humidity Unit
8. Temperature Unit
9. QR Code
10. Device ID
11. Shipment ID
12. Alarm Status

1. Check For New Logger

 Short press the red “STOP” button, and the screen will display the word “UNSEND” and use by information, indicating that the logger is currently in sleep state (new logger, not used). Please confirm battery power, if it is too low, please charge the logger first.

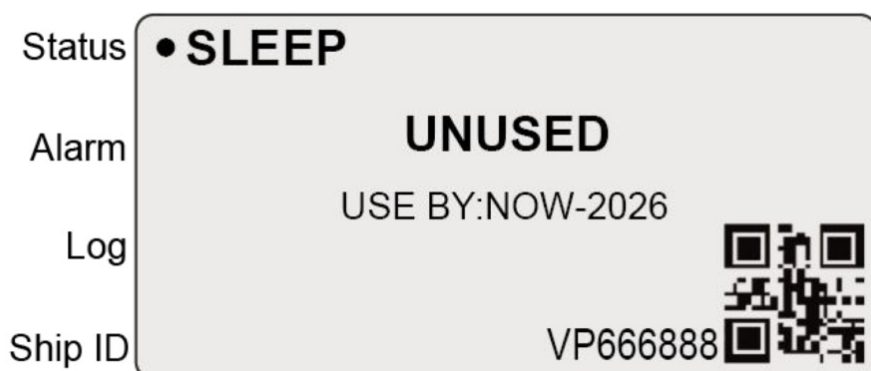

2. Turn on the logger

Long press the “START” button for more than 5 seconds, when the screen starts flashing the word “START”, please release the button and turn on the logger.




3. Start Delay

The logger enters into start delay phase after turning on.

The icon "Delay" displays on the left side of the screen, indicating the logger is in recording.

The icon " " displays on the left side, indicating the logger is in start delay phase.

 Default delay start for 30 minutes.

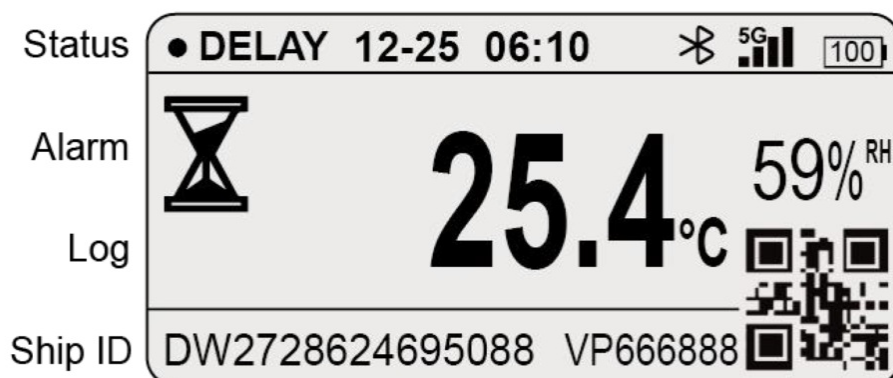


4. Gateway Solution Information

When V5 plus monitor (master device) connects with beacon(s), a " " icon will show on the screen, meaning master devices and beacon(s) are connected.

After connection, beacon(s) will enter start delay mode for 30 minutes. After start delay, beacon(s) start recoding data and sending data to platform.

5. Recording Information


 
After entering the recording state, the " " icon will no longer be displayed.

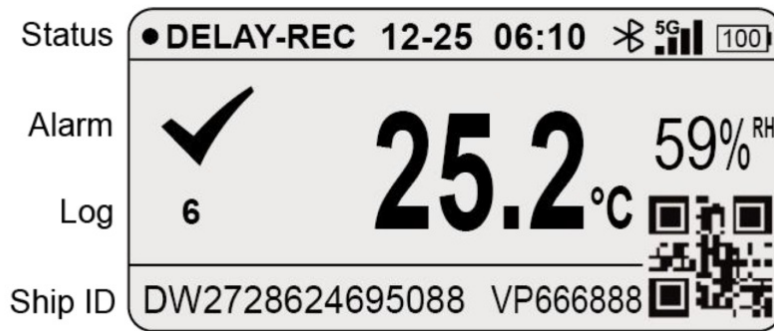

6. Alarm Information

If alarms are triggered during recording, alarm icon will be displayed in the left corner of the screen. If "✕" shows on the screen, it means alarm event(s) have happened in the past. If

  "☀️" shows on the screen, it means the alarm is happening. Alarm LED light will flash once detect alarms.

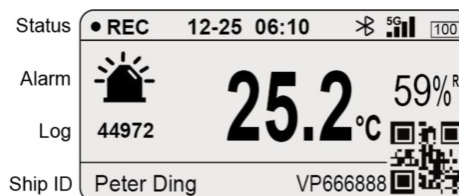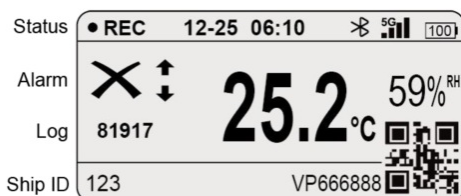

7. Check Data

Click **STATUS** button, goes to the first page. Start & Stop Time of the device, as well as Temperature data will be shown on this page.

Status	PAGE:1/10			
Alarm	▶	2024-10-21 21:36	@	6.8°C
	■	2024-10-24 22:35	@	7.2°C
Log				
Ship ID				

7.1 Check Data

Click **PAGE DOWN** button, goes to the second page. Detailed temperature data including MAX & MIN & AVG & MKT Temp will be accessible directly on the screen. Recording interval, Log Readings & Unsend Readings will be

also found on this page.

Status	Temperature		PAGE 2/10	
Alarm	MAX: 21.7°C		MIN: 20.7°C	
	AVG: 21.3°C		MKT: 21.4°C	
Log	-----			
	REC Interval:	1min		

Ship ID	LOG:	5948	UNSEND:	9


7.2 Check Data

Click **PAGE DOWN** button, goes to the third page. On this page, check 6 temperature thresholds (3 upper limits, 3 lower limits) .

Status	Temperature			PAGE 3 / 10
Alarm	H3:	15.0°C	1m(SIN)	0
	H2:	10.0°C	15m(CUM)	0
	H1:	8.0°C	30m(CUM)	1
Log	L1:	2.0°C	30m(CUM)	2
Ship ID	L2:	0.0°C	15m(CUM)	1
	L3:	-5.0°C	1m(SIN)	0

7.3 Check Data

 Click **PAGE DOWN** button, goes to the fourth page. On this page, check Multi-level Temp. Chart throughout the journey.

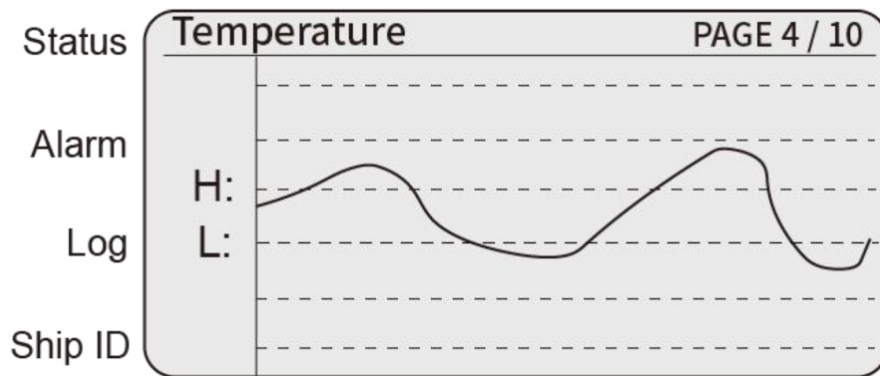

7.4 Check Data

Click PAGE DOWN button, goes to the fifth page. On this page, check 6 humidity thresholds (3 upper limits, 3 lower limits) .

Note: Page 5 will be available if users set humidity thresholds on Frigga platform, otherwise, it won't be showing on the screen.

7.5 Check Data

 
Click PAGE DOWN button, goes to the sixth page. On this page, check Multi-level humidity Chart throughout the journey.

Note: Page 6 will be available if users set humidity thresholds on Frigga platform, otherwise, it won't be showing on the screen.

7.6 Check Data

Click PAGE DOWN button, goes to the seventh page. Bluetooth Low Energy (BLE) can be turned on or turned off following instruction, BLE status, whether it's on or not, will be also shown on this page.

Note: If turn off BLE, mobile phone won't be able to connect with device to read data when no signal.

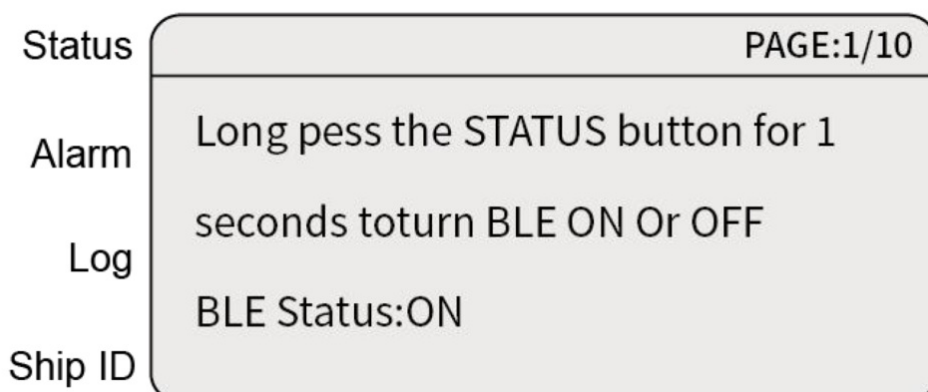

8. Stop the Device

- Long press “STOP” button for 5 seconds to stop.
- Remote stop by pressing “End journey” on frigga cloud platform.
- Stop by connecting the USB port.



9. Get Report

- Connect to the computer and get report via the USB port.
- Generate data report on platform at “Reports” section, enter device ID to export data report, PDF and CVS version supported.
- When no signal, connect the device with Frigga Track APP via Bluetooth, read and upload all the unsent readings to Frigga cloud platform, complete report can be exported.



10. Charging

The battery of V5 Plus can be charged by connecting the USB port. Charge the device when the battery is less than 20%, the charging icon "⚡" will be displayed when charging.

Note: Don't charge single use devices after activation, or the device will be stopped immediately.

11. More Information

Warranty: Frigga warrants that all electronic monitoring devices sold to Customers are free from defects in materials and workmanship under normal use for a period of 24 months from the date of purchase ("Warranty Period").

Calibration report: The calibration report can be downloaded on Frigga cloud platform. Go to "Report Center", click "Calibration Report", enter the device ID to download calibration report. Batch export is supported.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Specifications:

- Product: V5 Plus Series Temperature & Humidity Data Logger
- Manufacturer: Frigga Technologies
- Website: www.friggatech.com

Frequently Asked Questions (FAQ):

Q: How do I charge the logger?

A: Use the provided USB port to charge the logger. Ensure proper connection and wait for the battery to charge fully before use.


Q: What does the alarm LED light flashing indicate?

A: The alarm LED light flashing indicates that alarms have been detected during recording. Check the device for alarm details.

Q: How can I access detailed temperature and humidity data?

A: Use the PAGE DOWN button to navigate through different pages on the logger's display to access detailed temperature and humidity data, thresholds, and charts.

Documents / Resources

	<p>FRIGGA V5 Plus Series Temperature and Humidity Data Logger [pdf] User Manual V5 Plus Series, V5 Plus Series Temperature and Humidity Data Logger, Temperature and Humidity Data Logger, Humidity Data Logger, Data Logger, Logger</p>
---	---

References

- [🌐 Frigga - Real Time Cold Chain solutions](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.