

# FRIGIDAIRE EFIC239 Crunchy Chewable Nugget Ice Maker User Manual

## Contents

- [1 FRIGIDAIRE EFIC239 Crunchy Chewable Nugget Ice Maker](#)
  - [1.1 ICE MAKER use & care](#)
  - [1.2 2 INTRODUCTION](#)
  - [1.3 3 IMPORTANT SAFETY INFORMATION](#)
  - [1.4 Safety Instructions](#)
  - [1.5 4 SAFETY INSTRUCTIONS](#)
  - [1.6 5 GETTING TO KNOW YOUR UNIT](#)
  - [1.7 6 OPERATING PROCEDURES & MAINTENANCE](#)
  - [1.8 UNPACKING YOUR ICE MAKER](#)
  - [1.9 DANGER](#)
  - [1.10 CLEANING AND MAINTAINING YOUR ICE MAKER](#)
  - [1.11 7 USING YOUR ICE MAKER](#)
  - [1.12 How to start the unit](#)
  - [1.13 Operation and display areas](#)
  - [1.14 8 USING YOUR ICE MAKER](#)
  - [1.15 Clean](#)
  - [1.16 9 USING YOUR ICE MAKER](#)
  - [1.17 10 USING YOUR ICE MAKER](#)
  - [1.18 11 TROUBLESHOOTING GUIDE](#)
  - [1.19 12 PRODUCT SPECIFICATIONS](#)
  - [1.20 13 LIMITED WARRANTY](#)
  - [1.21 1 Year warranty](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## FRIGIDAIRE EFIC239 Crunchy Chewable Nugget Ice Maker

### ICE MAKER use & care

## 2 INTRODUCTION

Welcome to our family

Thank you for bringing Frigidaire into your home! We see your purchase as the beginning of a long relationship together.

This manual is your resource for the use and care of your product. Please read it before using your appliance. Keep it handy for quick reference. If something doesn't seem right, the troubleshooting section will help you with common issues.

FAGs, helpful tips and videos, cleaning products, and kitchen and home accessories are available at [www.frigidaire.com](http://www.frigidaire.com).

When you unpack your ice maker, you may find a small amount of water inside. Your unit is brand new.

Any water you may find is from the standard quality control testing that all of our ice makers undergo as part of the manufacturing process.

Please follow the initial preparation and cleaning instructions as detailed in the User Guide prior to using your new icemaker.

When using, please avoid direct sunlight.

### **3 IMPORTANT SAFETY INFORMATION**

#### **Safety Instructions**

- DO NOT store or use gasoline, or other flammable liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammability and other hazards.
- Avoid contact with any moving parts of automatic ice maker.
- Remove all staples from the carton. Staples can cause severe cuts, and also destroy finishes if they come in contact with other appliances or furniture.

#### **WARNING**

 <b>Installation Checklist</b>
<b>Doors</b> <input type="checkbox"/> Door seals completely to cabinet on all sides
<b>Leveling</b> <input type="checkbox"/> Cabinet is setting solid on all corners
<b>Electrical Power</b> <input type="checkbox"/> House power turned on
<b>Ice Maker</b> <input type="checkbox"/> Ice maker is turned ON
<b>Final Checks</b> <input type="checkbox"/> Shipping material removed

Please read all instructions before using this appliance.

### **Safety Definitions**

This is the safety alert symbol. It is used to alert of potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death

### **DANGER**

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING**

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### **CAUTION**

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

### **IMPORTANT**

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

### **Child Safety**

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the Ice Maker is unpacked. Children should **NEVER** use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

## **4 SAFETY INSTRUCTIONS**

This appliance must be plugged into at least a 15 AMP 110-115 VOLT 60 Hz GROUNDED OUTLET. This appliance must be grounded. It is equipped with a 3-wire cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

### **WARNING!**

Improper use of grounded wire can result in the risk of electric shock. Consult a physician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:


- A. Use only 3-wire extension cords with 3-blade grounding plug.
- B. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
- C. It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.

Attempting any maintenance or cleaning:

To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

**NOTE:** Pressing the Power ON/OFF button to an off position does not disconnect the appliance from the power supply.

## **5 GETTING TO KNOW YOUR UNIT**

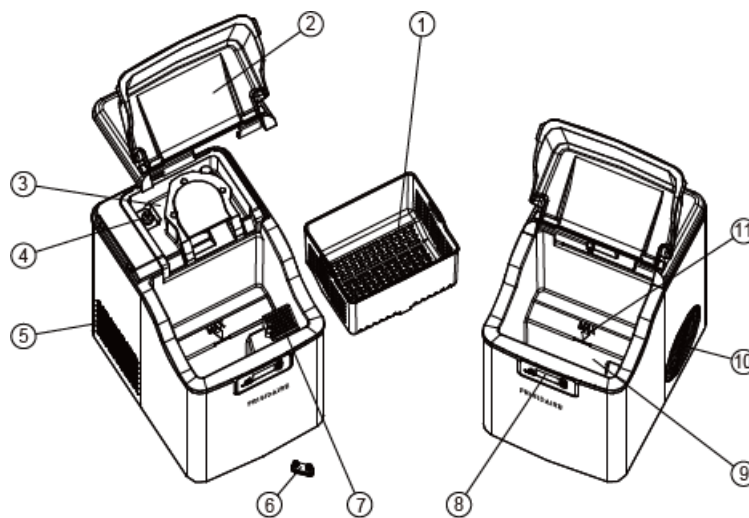

- 1. Ice basket
- 2. Top cover, removable from the top
- 3. Secondary water reservoir: It connects directly with the evaporator
- 4. Float switch
- 5. Metal shell
- 6. Water drain cap: at the front bottom side of the unit
- 7. Filter
- 8. Control panel
- 9. Water reservoir
- 10. Hot Air outlet
- 11. MAXIMUM WATER LEVEL: —▼—

## **6 OPERATING PROCEDURES & MAINTENANCE**

### **UNPACKING YOUR ICE MAKER**

- 1. Remove the exterior and interior packaging, and then check all the accessories are included. If any parts are missing, please contact our customer service.
- 2. Remove all the tapes on the unit; take out the accessory parts inside.
- 3. Clean the interior with lukewarm water and a soft cloth.
- 4. Locating your ice maker on a level counter table far from direct sunlight and other sources of heat (i.e.: stove, furnace, and radiator). Make sure that there is at least 6 inches between the back and sides of your ice maker with the wall.
- 5. Allow one hour for the refrigerant fluid to settle down before plugging your ice maker in.

6. The power plug must be accessible directly.

**WARNING:** Fill with drinking water (potable water) only.

## **CONNECTING YOUR ICE MAKER**

### **DANGER**

\*Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service.

1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a grounding plug which mates with standard grounding wall outlets to minimize the possibility of electric shock.
2. Plug your appliance into an exclusive, properly installed, grounding wall outlet. Do not be under any circumstances; damage the grounding means of the plug. Any questions concerning power and or grounding should be directed toward a certified electrician.
3. This appliance requires a standard 110-120Volt, 60Hz electrical outlet with good grounding means.

## **CLEANING AND MAINTAINING YOUR ICE MAKER**

Before using your ice maker, it is strongly recommended to clean it thoroughly.


Unplug the unit before cleaning or making any maintenance.

1. Take out the ice basket.
2. Clean the interior with diluted detergent, warm water and a soft cloth.
3. Then rinse the inside parts with water, and drain out the water by unplugging the drain cap on the front bottom side.
4. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
5. Dry the interior and exterior with a clean soft cloth.
6. When the machine is not in use for a long time, drain water completely out and dry the interior.


## **7 USING YOUR ICE MAKER**

### **How to start the unit**

1. Take out the ice basket and pour potable water into the water reservoir, 0.58 gallon (2.2 liters) water at most at one time.
2. Put back the ice basket.
3. Plug in the power cord.

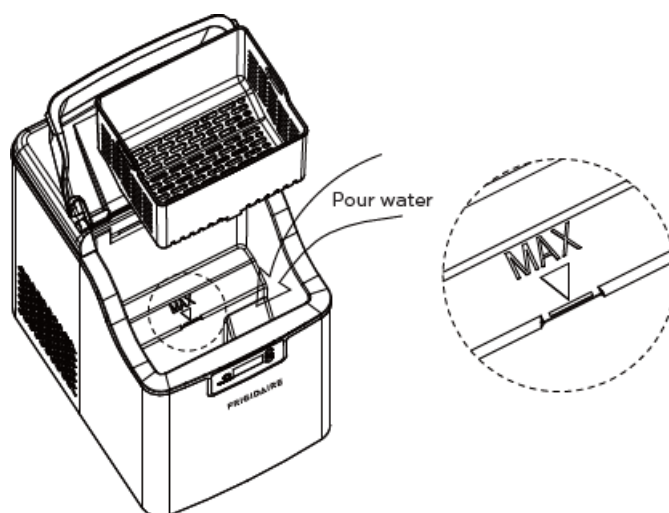

## Operation and display areas

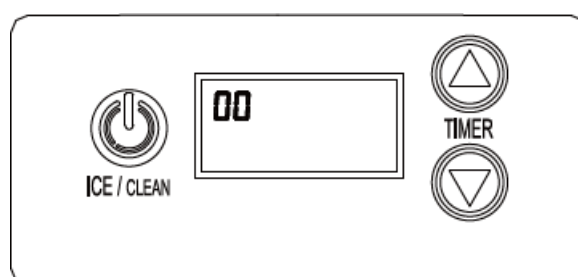

Plug in the power cord and the screen is on: You can operate this appliance by touching the button on the panel as shown above. The main function includes: ice, clean and timer.


## **8 USING YOUR ICE MAKER**

### **Clean**

For the first time, or the clean procedure has not been running for a long time, it is highly recommended to run this procedure at first.


4. Before the cleaning procedure, please make sure the water drain cap has been inserted into the appliance; otherwise it will not work properly.

5. Press "ICE/CLEAN" button " " for 5 seconds and the screen displays 15M and the "CLEAN" symbol " " (as shown in the picture below). It will run the cleaning procedure for 15 minutes and automatically exit. Press this button again during the cleaning procedure and it will exit immediately.

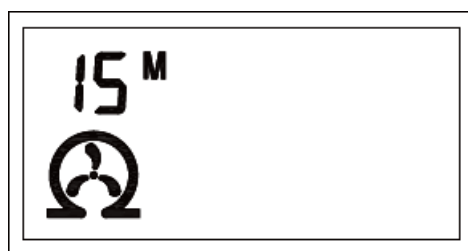

6. After the cleaning procedure, remove the top cover and the ice basket, rinse the main water tely. Reservoir and the secondary water reservoir, and then move the appliance to the edge of the desktop. Make sure that the appliance is placed

steadily. Place a water container under the appliance and remove the drain cap from the bottom. The dirty water will drain into the water container and then reinsert the drain cap.

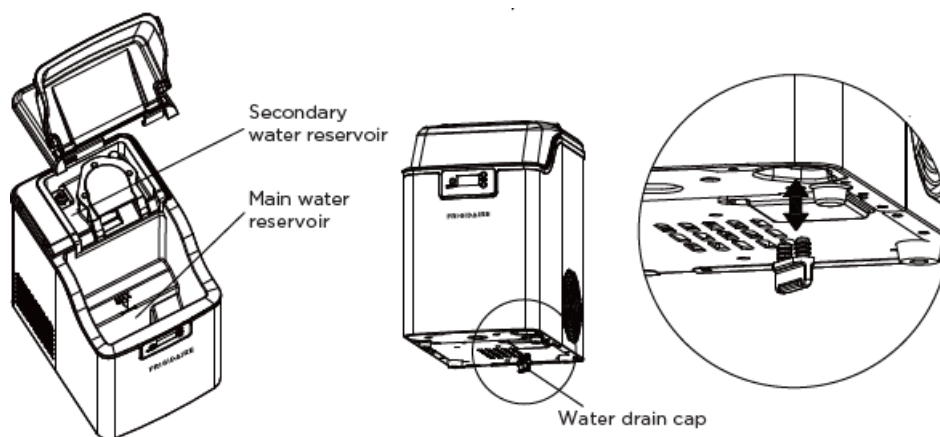


Change water in the water reservoir every 24 hours to ensure a reasonable hygiene level. If the unit isn't to be used, drain all water and dry the water reservoir.

## **9 USING YOUR ICE MAKER**

### **How to obtain the ice cube**


7. Before we start making ice, please make sure the water drain cap has been inserted into the appliance; otherwise it will not work properly.

8. Press "ICE/CLEAN" button " ", the screen displays "ICE" symbol " " (as shown in the figure below) and it begins to work. Press this button again and it will stop making ice.

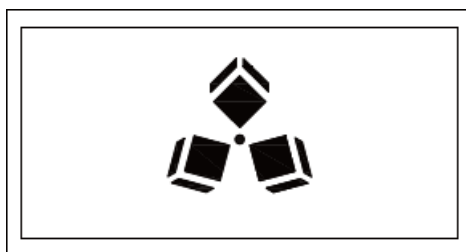


9. For the first time, or if the appliance has not been used for a long time, it is recommended to clean this appliance before starting to make ice.

10. While the ice maker is on, check the water level periodically. If the water pump can't pump out water, the ice maker will stop automatically and the "Add Water" symbol " " will appear (as shown in the figure below). You need to pour water into the water reservoir.

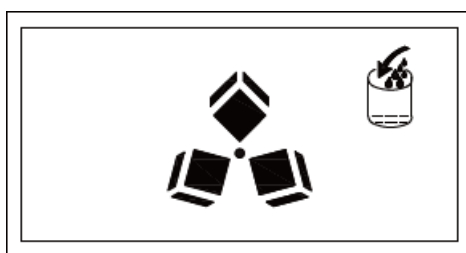

11. The ice maker automatically stops working when the ice basket is full of ice cubes and the "Ice Full" symbol " " appears (as shown in the figure below).

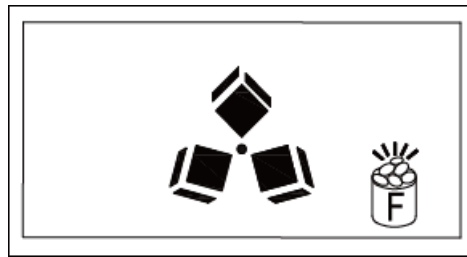

## **10 USING YOUR ICE MAKER**

How to set the timer


Timer's Delay Range: 0-24 hours Press once to change: 1H

When the unit is running, you can set the unit with OFF-TIMER to let the unit stop running after your setting delay time.


And when the unit is at the standby mode, you can set the unit with ON-TIMER to let the unit start to run automatically after your setting delay time. Then when you go back home or have a dinner, you can enjoy a happy life accompanied by this ice maker.

12. Press the "TIMER" button "▲" or "▼" to start setting time. Press the "▲" button to increase the time, and press the "▼" button to decrease the time. Press the "TIMER" button at the standby mode and it will start after the countdown (as shown in the figure a); Press the "TIMER" button at the ice-making mode and it will shut down after the countdown (as shown in the figure b).


a. (Start ice making in three hours)

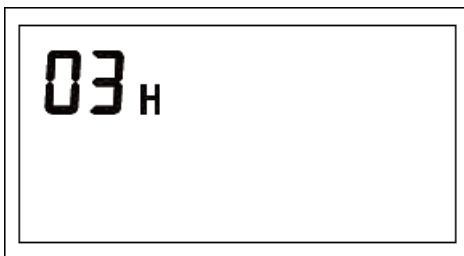

b. (Exit ice making after three hours)

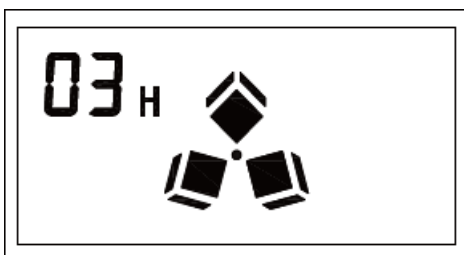

13. When the unit has been set with the timer, press the TIMER button, then the delay time digit and "H" letter display will disappear, which means the timer set has been canceled.

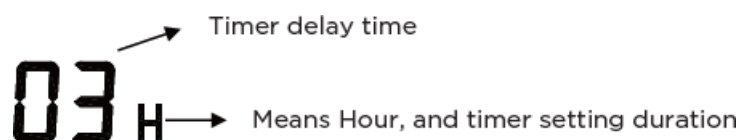

**Tips:** The background light on the screen automatically goes out after 30 seconds without operation. If you want to keep the light on, press the "TIMER" button "▲"



for 5 seconds; and if you want to cancel the constant light, press the“TIMER”button  
“▲” for 5 seconds again.

## 11 TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSES	SOLUTION
“ ” is lightening on and the arrow flashes.	on and the arrow flashes. Lack of Water.	Stop the ice maker, fill water, and press “ICE/ CLEAN” button again to restart the unit.
“ ” symbol is lightening and letter “F” flashes.	There are too much ice cubes	Remove some ice cubes.
	(If, no ice cube inside).	Remove the probable obstacle inside or clean the inside wall of the ice storage.
		Press “ICE/CLEAN” button for 5 seconds it will work for 80 minutes.
E1	The ambient temperature or the wa ter temperature in the inner tank is t oo high.	Please run the ice maker when the ambient temperature is below 90 °F and pour colder water into the tank.
	Refrigerant liquid leakage.	Press the ICE button twice, restart ice making program, if this problem show up again, verify by a qualified technician.
	Cover motor is broken	
	The pipe in the cooling system is bl ocked.	
Making Ice too	Hot Air outlet has been blocked by something.	Hot Air outlet must be guaranteed to have more than 15 CM of ventilation.

slowly	The water temperature in inner tank is too high.	Water temperature requirement between 44.6°F -89.6°F.
	Refrigeration system malfunctions	Verify by a qualified technician.
Water leakage	The drain plug is not in place.	Put the drain plug in place.
	Pipe joints in the appliance may loose.	Verify by a qualified technician.
	The seal has reached the end of its service life.	Verify by a qualified technician.

## **12 PRODUCT SPECIFICATIONS**

Input Voltage: 115V 60Hz  
 Power Consumption: 200 W  
 Daily Ice Output: 20 KGS/24H  
 Refrigerant: R600a  
 Dimensions  
   Product Depth (IN.) 13.2  
   Product Height (IN.) 15.3  
   Product Width (IN.) 9.4

## **13 LIMITED WARRANTY**

To make a warranty claim, please email [support@curtiscs.com](mailto:support@curtiscs.com) or call 1-800-968-9853.

### **1 Year warranty**

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the

purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.


ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

Documents / Resources

FRIGIDAIRE



ICE MAKER

use & care

Introduction

Important Safety Instructions

Getting to Know Your Unit

Operating Instructions & Maintenance

Using Your Ice Maker

Product Identification

Limited Warranty

[FRIGIDAIRE EFIC239 Crunchy Chewable Nugget Ice Maker](#) [pdf] User Manual

EFIC239, EFIC239 Crunchy Chewable Nugget Ice Maker, Crunchy Chewable Nugget Ice Maker, Chewable Nugget Ice Maker, Nugget Ice Maker, Ice Maker