



frisco 263524 Interactive Electric Flopping Fish Cat Toy with Catnip User Manual

[Home](#) » [frisco](#) » frisco 263524 Interactive Electric Flopping Fish Cat Toy with Catnip User Manual 

Contents

- [1 frisco 263524 Interactive Electric Flopping Fish Cat Toy with Catnip](#)
- [2 IMPORTANT SAFETY AND PRODUCT INFORMATION](#)
- [3 PARTS INCLUDED](#)
- [4 CHARGING INSTRUCTIONS](#)
- [5 PLAY INSTRUCTIONS](#)
- [6 QUESTIONS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



frisco 263524 Interactive Electric Flopping Fish Cat Toy with Catnip



Please read this manual carefully before use.

IMPORTANT SAFETY AND PRODUCT INFORMATION

WARNING: Please read all safety and product information below before using your Frisco product. Failure to follow these safety instructions could result in injury to you, your pet and others, or it could result in damage to your Frisco product or other property

PARTS INCLUDED



Dancing Fish
Plush Shell



Dancing Fish
Mechanism



USB Charging
Cable



Catnip Tube

CHARGING INSTRUCTIONS


Charge the non-replaceable lithium-ion battery with a 5V output for 90 minutes. The battery must be fully charged before the rst use.



- **HINT:** A red light means the product is still charging. No light means the product is fully charged.
- **HINT:** Playtime will last approximately 50 minutes on a full charge.

PLAY INSTRUCTIONS

1. Insert the dancing sh mechanism tail rst and ip the toggle switch to “on.”

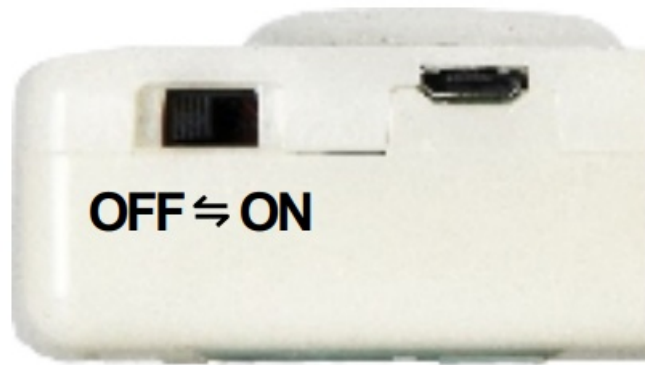

2. Align and seal the hook-and-loop fasteners.

HINT: If you're having trouble closing the toy, make sure that the inner material isn't stuck to the hook-and-loop fasteners.

3. Once sealed, press the sh's belly to start playing.

HINT: To entice your cat to play, sprinkle some of the included catnip inside the inner pouch.

HINT: When the sh stops opping, simply tap the belly to get playtime started again.

RECHARGEABLE LITHIUM ION BATTERY WARNING & CAUTION

- DO NOT charge this product near any ammable substances.
- DO NOT operate this product while still charging.
- Remove dancing mechanism from sh belly to charge.
- For pet use only. This product should only be operated by a responsible adult.
- DO NOT disassemble the battery compartment.
- The battery is non-replaceable. If the battery is exposed or removed, please dispose of the battery properly in accordance with your local waste rules and regulations.
- Ensure that both the product and batteries are disposed of properly in accordance with your local waste rules and regulations.
- Discontinue use if the product is damaged.
- If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The battery should be charged prior to use and only charged with the specified charger.
- Don't store the product with the battery in temperatures over 60°C.

1. **Model:** 263525

2. **Size:** 11.5 x 4.5 in / 29 x 11.5 cm

3. **Power Supply:** Lithium battery 3.7V 400mAh

4. **DC Power(suggested):** 5V/1A standard power supply

5. **Rated voltage:** 5V


QUESTIONS

CALL OUR FRIENDLY CUSTOMER SERVICE TEAM ANYTIME.

WE'RE HERE 24/7! 1-800-67-CHEWY (672-4399)

Available at [Chewy.com](https://www.chewy.com) 1-800-672-4399

Documents / Resources

	frisco 263524 Interactive Electric Flopping Fish Cat Toy with Catnip [pdf] User Manual 263524 Interactive Electric Flopping Fish Cat Toy with Catnip
---	---

Manuals+.