

Contents [[hide](#)]

- [1 FSP SNMP Web Card Box](#)
- [2 Introduction](#)
- [3 Unpacking & Overview](#)
- [4 Connection](#)
- [5 Quick Assembly](#)
- [6 Frequently Asked Questions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



FSP SNMP Web Card Box



Introduction



This external box can provide communication slot for UPS or inverter without intelligent slot. This external box is perfect for Modbus, SNMP or GPRS communication card.

Simply insert the demanded communication card into this external box and follow wire connection according to user manual of communication card. Then, it provides proper communication for UPSs and inverters.

Unpacking & Overview

Packing List


Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

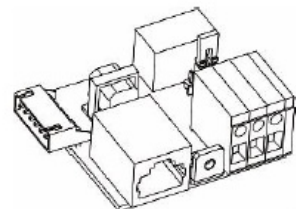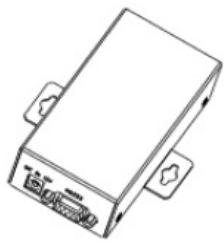

DB9-RJ45 cable

RJ45 communication board
(only require for inverter 1-3K model)

Product Overview

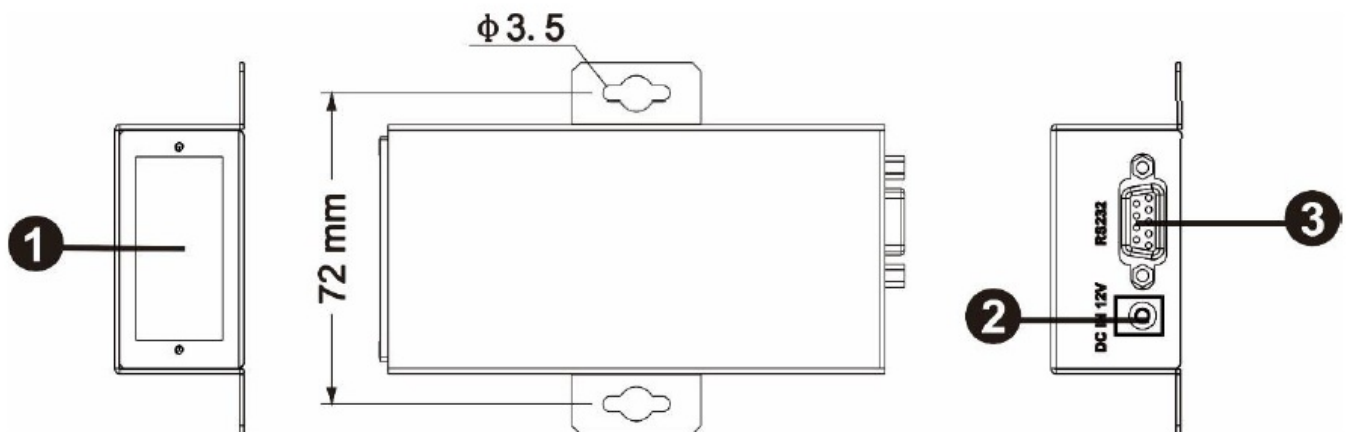


1. Communication card intelligent slot
2. 12V DC input : 12V DC/1A power source for communication card
3. RS-232 communication port

Connection

UPS or Inverter with RJ45 port


Adapter
100~240Vac / 12Vdc 1A

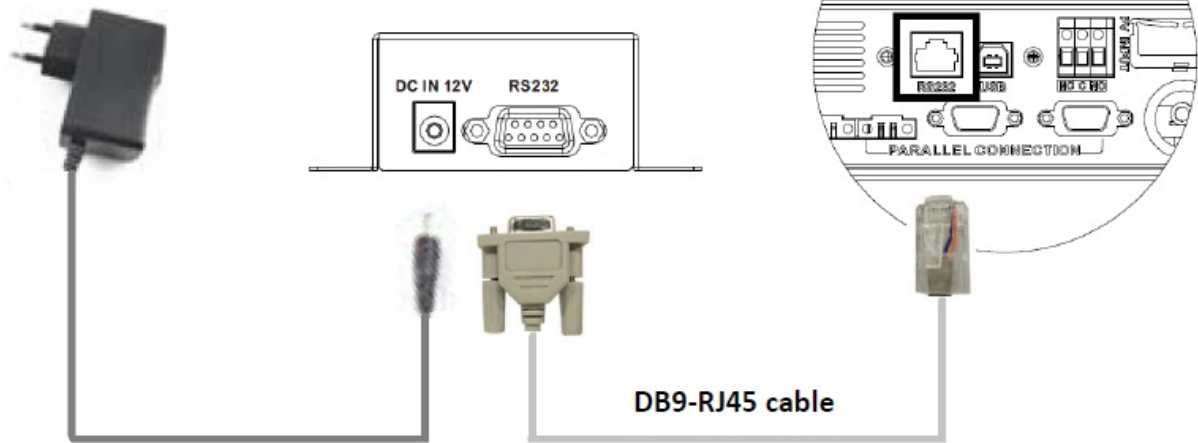

NOTE: It's not necessary to use adapter for 4KVA//5KVA inverter.

UPS or Inverter with DB9 port

Adapter
100~240Vac / 12Vdc 1A

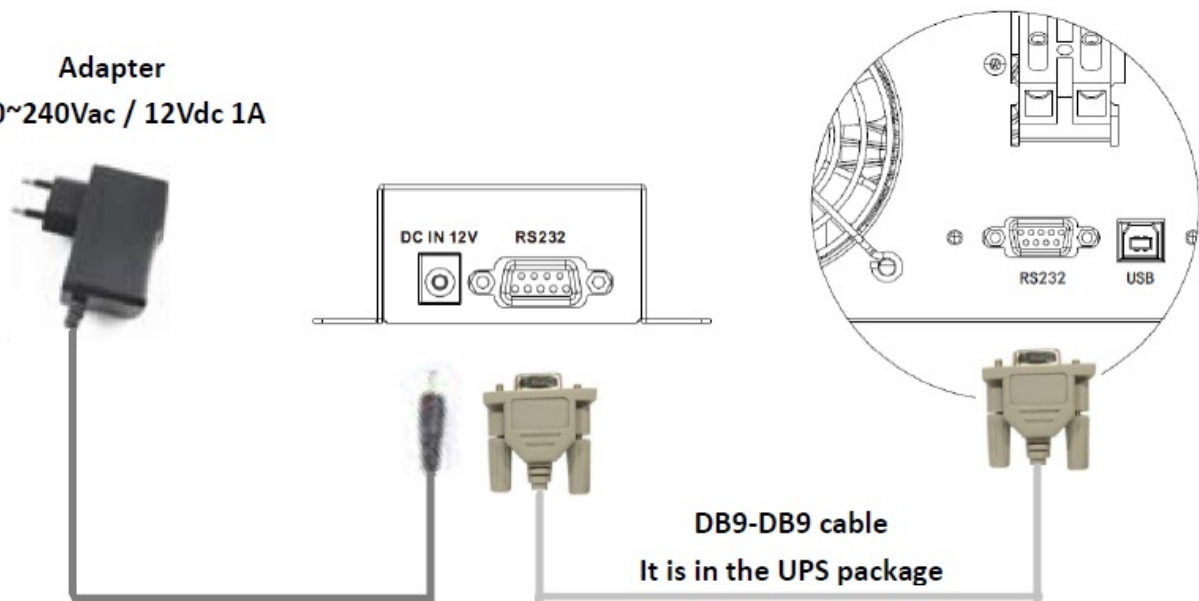


Adapter plug dimension: OD=5.5mm ID=2.5mm



Inverter with USB port

If connecting to inverter with only USB port, please replace the communication board in the inverter with bundled communication port. Then, follow the same step in previous section to connect to External Box.


1.

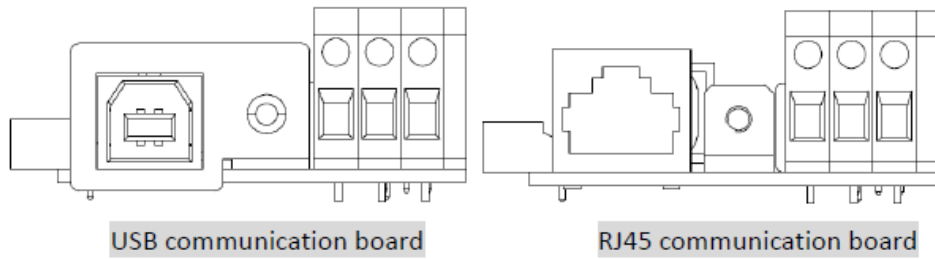

Step 1: Remove terminal cover.


2. **Step 2:** Remove USB communication board.

3. **Step 3:** Put bundled RJ45 communication board in same place.

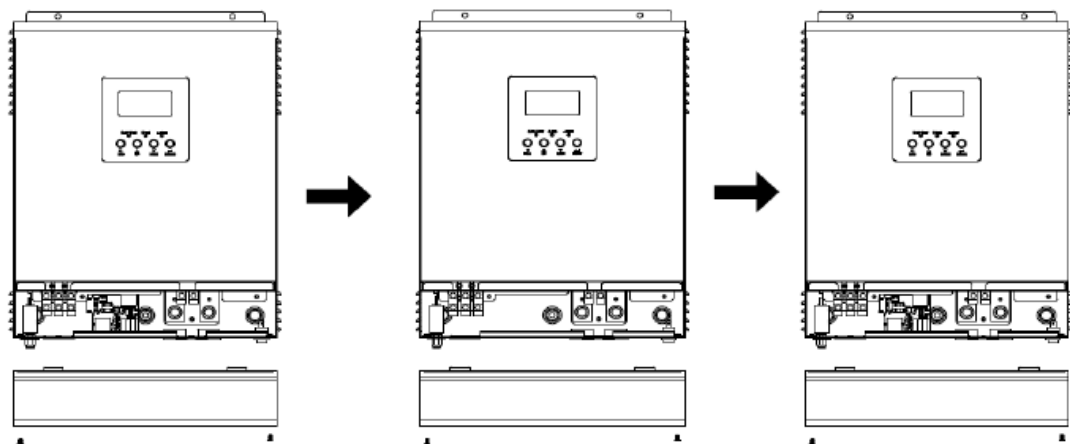

Quick Assembly

1. **Step 1:** Simply insert communication card into the one side of external box.
Then, screw it tightly as shown in below chart.

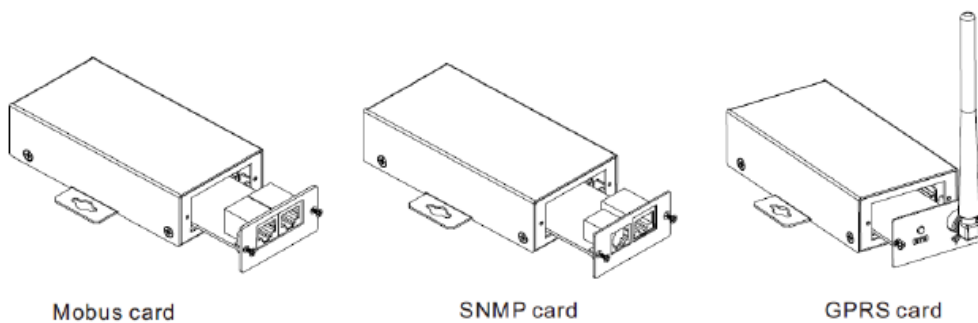

2. **Step 2:** Please follow user manual of communication card for wire connection.

Frequently Asked Questions

Do I need an adapter for a 4KVA/5KVA inverter?

No, it is not necessary to use an adapter for a 4KVA/5KVA inverter.

Documents / Resources

	FSP SNMP Web Card Box [pdf] Instruction Manual SNMP Web Card Box, Web Card Box, Card Box
---	---

References

- [User Manual](#)

Card Box, FSP, SNMP Web Card Box, Web Card

FSP Box

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.