

FUDONI P3 LED Video Projector

Home » FUDONI » FUDONI P3 LED Video Projector

Contents

- 1 FUDONI P3 LED Video Projector
- **2 CUSTOMER SERVICE & WARRANTY**
- **3 ATTENTIONS**
- **4 PACKING LIST**
- **5 INTERFACES & BUTTONS**
- **6 Remote Control**
- **7 QUICKSTART**
- **8 MUL TI MEDIA CONNECTION**
 - 8.1 USB Connection
 - **8.2 HD Connection**
 - **8.3 AV Connection**
- 9 CONNECT TO A BLUETOOTH **SPEAKER**
- **10 SCREEN MIRRORING**
- 11 Notes for Screen Mirroring
- 12 SPECIFICATION
- 13 TROUBLE SHOOTING
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



FUDONI P3 LED Video Projector



CUSTOMER SERVICE & WARRANTY

Thank you for choosing FU DON I PROJECTOR and becoming our valued customer. At FUDONI, we are committed to providing you with products that improve your daily life. Happy customers' experiences make us proud and we hope this product will bring you convenience and enjoyment.

FUDONI offers a 1-year warranty+ 30 days return/exchange policy+ lifetime support for this product.(*To extend the warranty for 1 more year, please contact us.)

- If you don't like it,
- · If you have a user manual problem,
- · If you have missing accessories,
- If your package got damaged,
- If the product can't be used,
- If you have any questions or feedback,

Please contact our customer support team at 1-888-285-2024 or

support@fudoni.com


www.fudoni.com

In order to help you solve the problem efficiently, please send us the following information when you contact us.


- Amazon order number
- A brief description of the problem: problem + the efforts you tried + photos/ video

ATTENTIONS


- 1. Please DO NOT look straight into the projector lens while it is working to avoid burning your eyes.
- 2. Do not place the machine in a hot or humid place to avoid leading to internal compnents breaking down.
- 3. When cleaning up the lens, please use a lens cleaner or special lens wipe paper.
- 4. Please ensure that the projector is well ventilated when using it. Do not touch carpets and woolen knitwear.
- 5. Do not disassemble this machine. We will offer you professional warranty services.

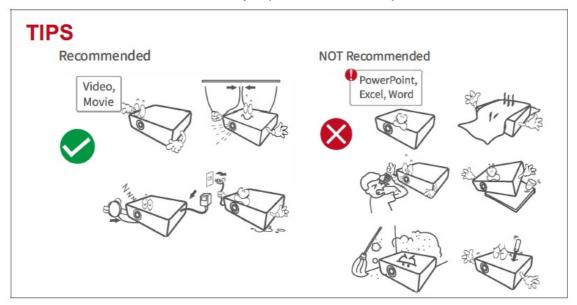

PACKING LIST

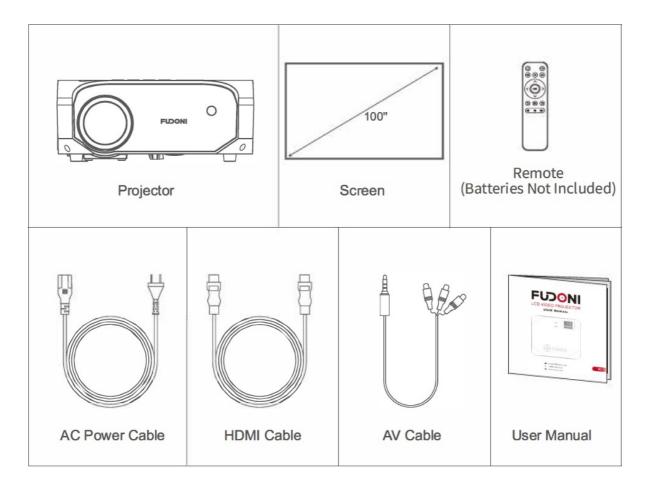


INTERFACES & BUTTONS

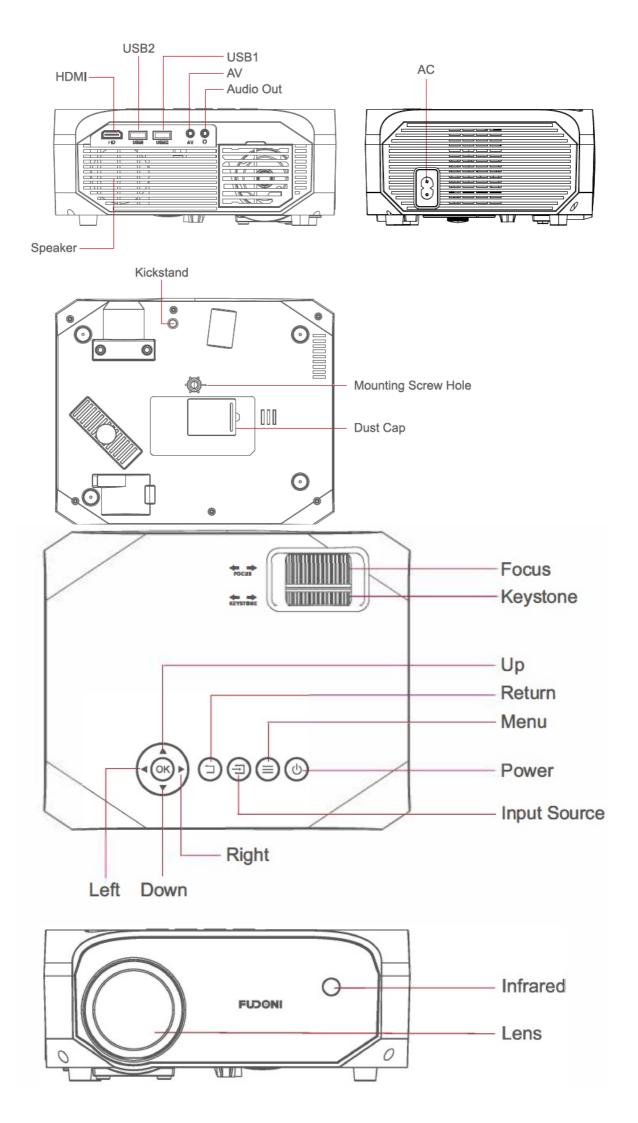


Remote Control

- 1. Power On/Off
- 2. Mute
- 3. Rewind
- 4. Play / Pause
- 5. Fast Forward
- 6. Left/Right/Up/Down
- 7. Back
- 8. Menu
- 9. Source
- 10. Volume-
- 11. Volume+
- 12. Home

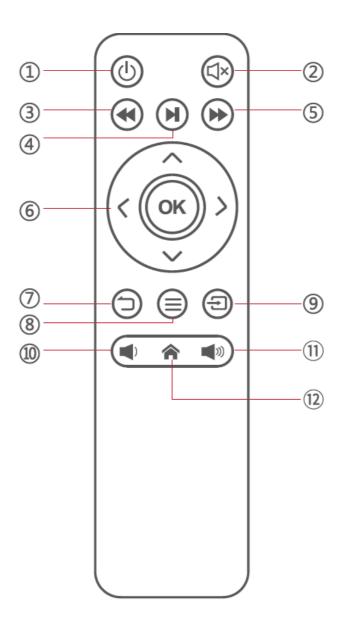


QUICKSTART


1. Plug the power cord into an outlet.

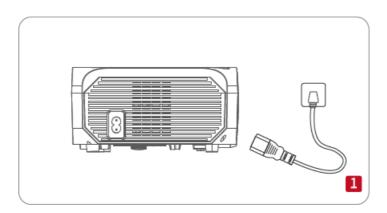


2. Take off the lens cover.

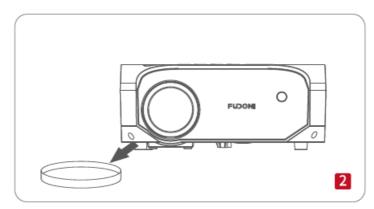

3. Connect your device to the projector with the correct cables.

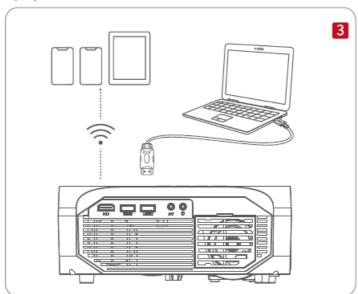


4. Press the power button to turn on the projector.

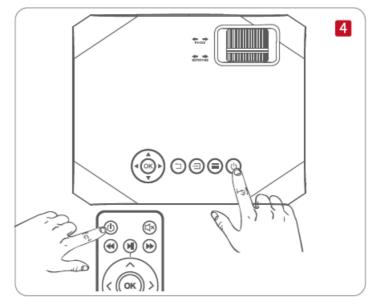


5. Select the correct input source on the projector or remote to project your device




6. Adjust the kickstand accordingly

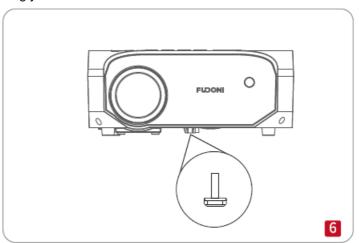

7. Adjust the keystone to make the projection screen rectangular first, then adjust the focus wheel slowly to make the center clear. (Please use it in a dark environment.)

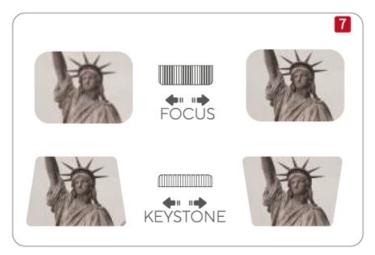


8. Press the power button to turn off the projector

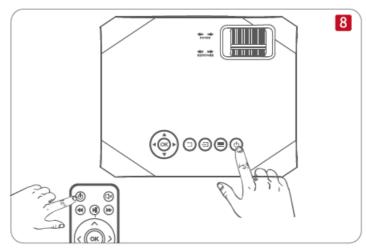

MUL TI MEDIA CONNECTION

USB Connection

• Step 1: Turn on the projector and insert your USB disk into the USB port slot.

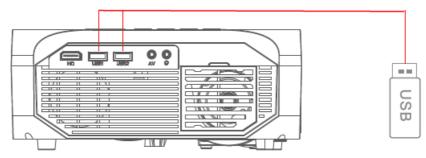

 Step 2: Go to Homepage and select the file category you would like to display among MOVIE, MUSIC, PHOTO and TEXT, then enter the inserted USB disk to check all files stored.

· Video files

- 1. Select Movie to correspondingly read video files stored.
- 2. Tap OK on the projector/Press OK on the remote for a certain video file to enter full-screen display.

Video Format Supported:

AVI/MP4/MKV/FLV/MOV/RMVB/3G2/MPGNOB/SWF/MPG/H .264/TS/WMV

Audio files

- 1. Select Music to correspondingly read audio files stored.
- 2. Tap OK on the projector or remote for a certain audio file to enter full-screen display, then press



the remote to start/pause playing.

Audio Format Supported: MP 3/ WMA /OGG / MC/ FLAG/ APE /WAV / AC3

Photo files

- 1. Select Photo to correspondingly read photo files stored.
- 2. Tap OK on the projector or remote for a certain photo file to enter full-screen display. Image Format Supported: JPEG/BMP/PNG

· Document files


- 1. Select Office Suite to correspondingly read document files stored.
- 2. Tap OK on the projector or remote to view contents of a certain file.

Text Format Supported: TXT

• Step 3: Tap on the projector or press on the remote to go back to Homepage.

HD Connection

Step 1: Turn on the projector and connect your device to the HD Port of the projector with the provided HDMI cable.

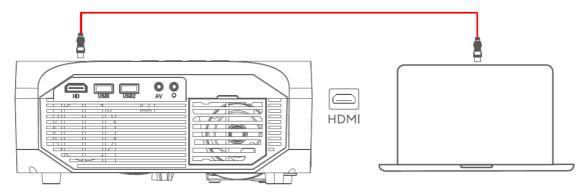

• Step 2: Select HDMI on the left side of the Homepage as the input source, then the contents of your device will be projected to the screen/wall.




*For Windows Laptop

For Windows 7 or higher system, press the "Windows Logo + P" key combination to access four display modes.

1. PC screen only option displays contents on a computer screen only.

- 2. Duplicate option displays the same contents on both the computer screen and projected screen.
- 3. Extend option splits the display between the computer screen and the projected screen.
- 4. Second screen only option displays contents only on the projected screen.

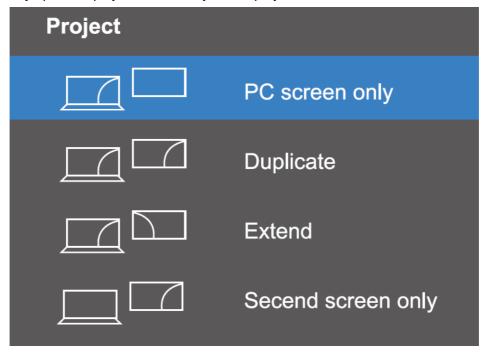


*For MacBook

To connect the MacBook, You can use an Apple MFi-certified USB C to HDMI adapter or an Apple MFi-certified Thunderbolt to HDMI adapter.



AV Connection


• Step 1: Turn on the projector and connect your device to the AV port of the projector with an AV cable.

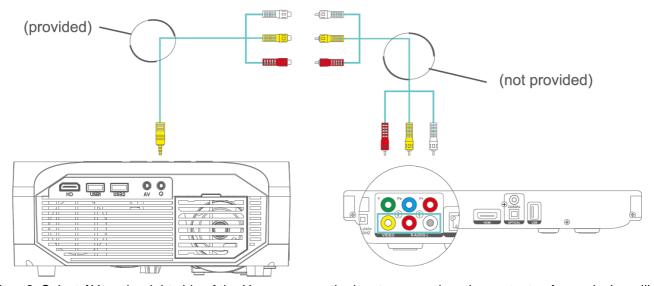


• Step 2: Select AV on the right side of the Homepage as the input source, then the contents of your device will


CONNECT TO A BLUETOOTH SPEAKER

1. 1. Select the "BT" in the HOME main menu first.

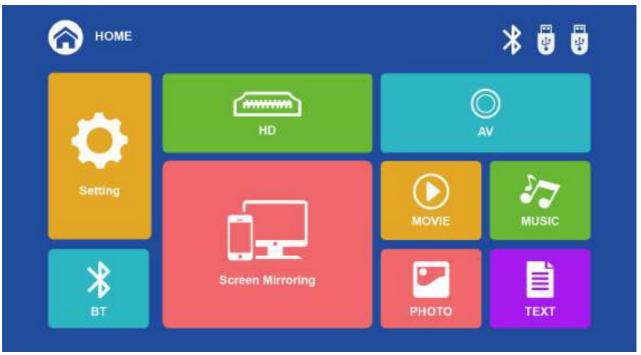

- 2. Press" ◄/► " key to turn Bluetooth on
- 3. Select "Search" and press "OK" to scan nearby Bluetooth speakers.

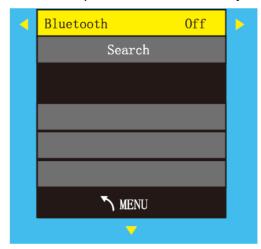

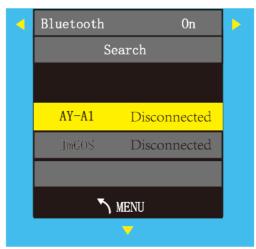

4. Select your Bluetooth speaker from the list, press OK key to connect (pair).

Tips:

When power on the projector or turn on Bluetooth, the projector attempts to connect the latest connected Bluetooth speaker.

SCREEN MIRRORING

Important: Before screen mirroring, please select "Screen Mirroring" in the HOME main menu first.



For iOS System

For iOS devices, there are three ways to connect as follows.

- *Method A Streaming with Cellular Date
- 1. Turn on the projector, select "Screen Mirroring" in the HOME main menu, and then choose "iOS Screen".




2. Turn on the WLAN of your iOS device and join the network "R7-xxxx" of the projector. (pwd: 12345678)



3. Then go to the "Screen Mirroring" of the iOS device and select "R7-xxxx" of the projector to connect.



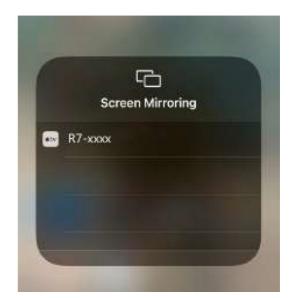


4. The connection success

Method B Streaming with Your router's WiFi

1. Turn on the projector, select "Screen Mirroring" in the HOME main menu, and then choose "iOS Screen".



2. Press "OK" on the remote or projector to connect your Router's WiFi.

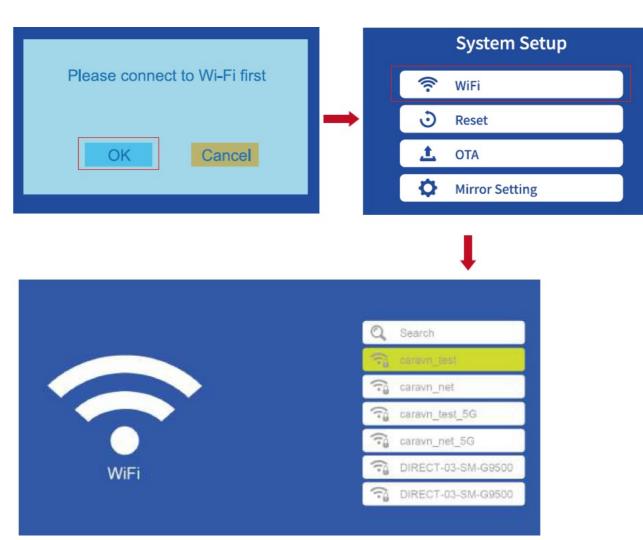


3. Turn on the WLAN of your iOS device and connect to the same Router's WiFi above.



4. Then go to the "Screen Mirroring" of the iOS device and select "R7-xxxx" to connect.




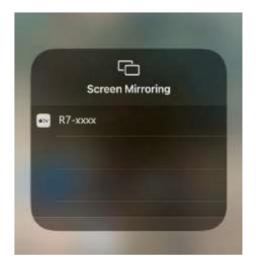

5. The WiFi connection success

Method C Lightning to USB Cable for iPhone

- 1. Prepare an official Apple Lightning to USB Cable.
- 2. After plugging the cable, please click 'Trust" on your phone.

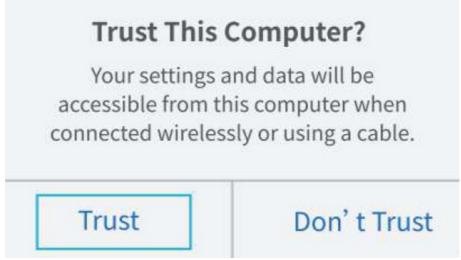

3. The wired connection success.

For Android System

Wireless Connection for Android

- 1. Please confirm your Android phone has the "Screen Casting" function in Settings first.
- 2. Turn on the phone's WLAN.
- 3. Turn on "Screen Casting"/"Cast" in the phone's Settings, then select "R7-xxxx" to connect.
- 4. The connection success

Tip: You can use router WiFi or Android phone's data to connect the projector by the above steps as needed.

Notes for Screen Mirroring

- 1. The smoothness of the projector connection is affected by the strength of your WiFi signal. Please make sure that the WiFi signal is good enough.
- 2. If you connect the projector via a new WiFi the first time, please enter the WiFi password in the projector.
- 3. If your phone cannot recognize the projector, please reset the projector.

4. Some videos or streaming software(Nelflix, Amazon Prime, Disney, Hulu, etc) themselves are protected by the creator's copyright so do not support Screen Mirroring. This is a common phenomenon in the market. It's not the problem with the projector.

HDMI connections help FUDONI R7 projector on this issue:

- 1. For iPhone, please use an official Apple Lightning Digital AV Adapter.
- 2. For PC/Laptop, please use the HDMI cable(included) to connect.
- 3. For fire stick, streaming software will work well.

SPECIFICATION

Imaging Technology	LCD
Light Source	LED
Resolution	1920*1080
Supported Video Resolution	4K, 1080P, 1080i, 720P, 576i, 480P, 480i
Lens Life	>80000 Hours
Contrast Ratio	10000:1
Focus	Manual
Keystone Video Format Supported	Vertical ±15° AVI/TS/TP/MOV/DAT/MPG/MPEG/MKV/3GP/MP4/ VOB/M2T SNID/3GP2/MPEG1/MPEG2/MPEG3/ MPEG4/H263/H264/H265NP8/RV30/RV40
Input	USB*2, HDMI*1, AV*1
Output	3.5mm Audio Port
Input Voltage (V)	AC 100-240V 50/60Hz
Built-in Speaker	4O*3W
Power Consumption(W)	Operating 65W
Projector Size Projector Weight	215mm* 175mm* 85mm 1.15kg

- The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/screen and the projector properly as needed. (1.5m-3m recommended)
- Ambient darkness will improve the clarity of the projected images.

TROUBLE SHOOTING

Q: There is no sound when playing Netflix videos?

A: Due to copyright reasons, some videos or streaming software(e.g Netflix, Disney+, Hulu, etc.) themselves do not support Screen Mirroring. This is a common phenomenon in the market.

*HDMI connections help FUDONI R7 projector on this issue:

• For iPhone, you can use an Apple Lightning Digital AV Adapter. Most streaming software works well via this adapter.

- Connect the PC or laptop via the HDMI cable included.
- For fire stick, Roku, and Chromecast, streaming software will also work well.

Q: How to upside down the picture?

A: Please go to Menu > Setting > Rotate to flip the projection picture as your needs.

Q: Why the projector is not bright enough?

A: Please use all home projectors in a dark environment.

Q: Why the image is so blurry?

A: Please move the projector to get suitable screen size and keep the optimum projection distance is 1.5m-3m. Adjust the keystone to make the projection image rectangular then adjust the focus wheel slowly to make the center area clear. (For all home projectors, the projection edge is not as clear as the center.)

www.support@fudoni.com

support@fudoni.com

1-888-285-2024

www.fudoni.com

Documents / Resources



FUDONI P3 LED Video Projector [pdf]

P3 LED Video Projector, P3, LED Video Projector, Video Projector, Projector

References

• User Manual

Manuals+,