



# FUGOO F6ELKS01 Element Bluetooth Speaker User Manual

[Home](#) » [FUGOO](#) » FUGOO F6ELKS01 Element Bluetooth Speaker User Manual 

## Contents

- 1 FUGOO F6ELKS01 Element Bluetooth Speaker
- 2 In the Box
- 3 Button & LED Lights (Top)
- 4 Charging
  - 4.1 Battery status
- 5 Power, Bluetooth pairing, and speaker controls
  - 5.1 Power
  - 5.2 Bluetooth pairing
  - 5.3 Audio controls
  - 5.4 Call controls
  - 5.5 Line in mode
- 6 TWS pairing
- 7 AUX IN (3.5 mm audio cable)
- 8 IPX7 (waterproof)
- 9 Floats
- 10 Support
- 11 Specifications
- 12 Legal notices
- 13 Documents / Resources
- 14 Related Posts




## FUGOO F6ELKS01 Element Bluetooth Speaker




### In the Box

- Fugoo Element Bluetooth speaker
- 5V/1A 1m (3.2'/3.2ft) Micro-USB power cable
- 3.5mm 0.6m (1.9'/1.9ft) AUX IN audio cable
- Quick Start Guide & User Manual (Including Warranty Statement)

### Button & LED Lights (Top)

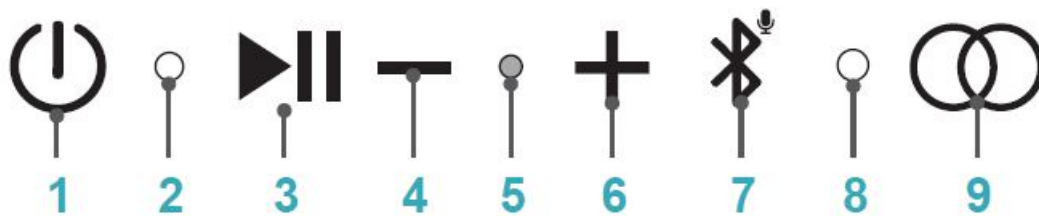

1. Power Button
2. Power LED (RED)
3. Play/Pause Button
4. Decrease Volume Button
5. Microphone
6. Increase Volume Button
7. Bluetooth® Button
8. SYNC LED (Blue/Amber)
9. SYNC Button

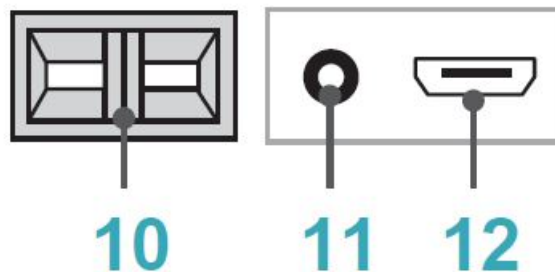

10. Carrying Strap Bracket
11. AUX IN 3.5 mm Port – Wired Audio-in
12. Micro-USB Port (DC IN) – Charging / Firmware Updating
- 13.



13

1/4" Universal Mount

## Charging

**IMPORTANT:** Charge for 6 hours before first use. Connect a micro-USB cable into the DC IN port of the speaker. Plug the other end of the cable into an AC adapter and that adapter into an AC power outlet.

### Battery status

- While the battery is being charged, the LED will slowly pulse RED; When fully charged, the LED will glow solid RED.
- Full charge achieved in 6 hours while powered OFF or 12 hours while powered ON.

## Power, Bluetooth pairing, and speaker controls

### Power

Power On / Off ..... Hold Power button (1 second)

### Bluetooth pairing

- DO NOT have a line connection in the AUX-IN port
- Pair devices within 3 feet (1 meter); Max signal range of 33 feet (10 meters); Signal disruption/loss may occur when devices are out of range from each other.
- Pair device..... Hold Bluetooth button (3 seconds)
- Turn your audio source's Bluetooth On and select "FUGOO ELEMENT"
- Disconnect device..... Click Bluetooth button
- Clear all paired devices ..... Hold button (10 sec)

### Audio controls

- Play / Pause ..... Click play button
- Volume up ..... Click + button
- Volume down ..... Click – button
- Next track ..... Click the play button and +
- Previous track ..... Click the play button and –
- Voice Control..... Hold play button (2 seconds)

- TWS pair/unpair..... Hold SYNC button (2 seconds)

## Call controls

- Answer/end call ..... Click Bluetooth button
- Reject a call ..... Double-click Bluetooth button
- Mute microphone in a call ..... Click + and – buttons

## The speaker must be off for the following functions to work:

Power Save On / Off ..... Hold- and power off button

- If the speaker is not connected to a source device and is not plugged into a power source, the speaker turns off after 15 minutes of inactivity.
- If the speaker is not connected to a source device and is plugged into a power source, the speaker turns off after 30 minutes of inactivity.
- If the speaker is connected to a source device and is not plugged into a power source, the speaker turns off after 1 hour of inactivity.
- If the speaker is connected to a source device and is plugged into a power source, the speaker will not shut off automatically.

## Line in mode

- If there is no signal input and is not plugged into a power source, the speaker turns off after 60 minutes of inactivity.
- If the speaker is plugged into a power source, the speaker will not shut off automatically.
- If Power Save mode is off, then the speaker will remain on until you turn it off by pressing the power button for 1 second.

## TWS pairing

1. Pair speaker to a Bluetooth audio device (transmitter).
2. Power On a second SYNC compatible speaker (receiver) Does NOT pair to Bluetooth device.
  1. If BT (receiver) device is connected, long-press the Bluetooth button (3 seconds) to enter TWS pairing.
3. Hold the SYNC Button of the Bluetooth paired speaker for 2 seconds.
  1. **While TWS pairing**  
The LED on the transmitting devices will flashes blue alternately, searching for a TWS compatible device to connect to.
  2. **TWS Successful:**  
Transmitting LED: Blue  
Receiving LED: Amber

## AUX IN (3.5 mm audio cable)

Plugging in a 3.5 mm audio cable into the AUX IN input will disable the Bluetooth function and will switch the audio

single to the AUX IN audio mode.

## IPX7 (waterproof)

This speaker has protection against water to a max depth of 3 feet (1 meter) for up to 30 minutes.

## Floats

The speaker naturally floats on the surface of the water.

## CAUTION:

- The protective rubber tab, covering the DC IN and AUX IN ports, must be firmly in place before immersing the speaker in water or permanent damage may occur.
- Do NOT immerse while charging.
- Never connect a cable to any of these connectors if they are wet, or are at risk of getting wet.

## Support

- Visit Fugoo's Support page at [support.fugoo.com](http://support.fugoo.com) for help with connecting, to view our FAQs, or to ask us a question.
- Visit Fugoo's downloads page at [fugoo.com/product-support](http://fugoo.com/product-support), for firmware updates, alternative voice prompts, and mobile wallpaper images.
- Send us a support request at [support@fugoo.com](mailto:support@fugoo.com).

## Specifications

- **Power**
  - Battery ..... Lithium-Ion 4400mA
- **Audio**
  - Speaker drivers ..... (x2) 1.75" Speaker  
..... (x2) 2.5" Passive Radiators
  - Audio output ..... 20W
  - Frequency Range ..... 50Hz – 20KHz
  - THD + Noise ..... ≤10%
  - Signal-to-Noise ..... >60dB
  - Microphone ..... Omnidirectional  
..... Echo cancelling  
..... Noise reducing
- **Connectivity**
  - Bluetooth Version ..... 4.2
- **Construction**
  - Materials ..... Plastic and metal
  - Weight ..... 1.8 lbs. / 0.82 kg
  - Dimensions (LxWxH) ..... 9.35" x 3.3" x 3.25"

..... 238 x 84 x 82mm

- **Environment**

- Water resistant ..... IPX7
- Operating Temp. Range ..... 32F° to 104F° / 0C° to 40C°
- Operating Humidity ..... 40-90% RH
- Storage Temp. Range ..... -13F° to 158F° / -25C° to 70C°

## Legal notices

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution!** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IC Statement** This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**RF exposure statement** This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

## Documents / Resources



[FUGOO F6ELKS01 Element Bluetooth Speaker](#) [pdf] User Manual  
FUGOOF6EL, 2AGA6-FUGOOF6EL, 2AGA6FUGOOF6EL, F6ELKS01 Element Bluetooth Speaker